
AUTION

DETAIL NOT FOR USE ON 25 OR 30—YEAR WARRANTY PROJECTS. ACCEPTABLE EDGING SHALL CONFORM TO DETAIL A—1A.1.

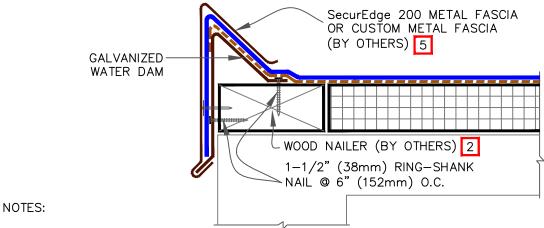

- 1. REFER TO <u>SecurEdge 200 INSTALLATION INSTRUCTION MANUAL</u> FOR STEP-BY-STEP INSTALLATION PROCEDURES.
- 2. WOOD NAILER MUST EXTEND PAST TOTAL WIDTH OF GRAVEL STOP DECK FLANGE.
- 3. APPLY EPDM PRIMER TO THE MEMBRANE SURFACE PRIOR TO INSTALLING PRESSURE—SENSITIVE ELASTOFORM FLASHING
- 4. 6" (152mm) WIDE SECTION OF PRESSURE—SENSITIVE ELASTOFORM FLASHING MAY ALSO BE CENTERED OVER FIELD SPLICE AT ANGLE CHANGE. PROJECTS USING 90-MIL MEMBRANE REQUIRE TWO LAYERS OF PRESSURE—SENSITIVE ELASTOFORM FLASHING. THE BOTTOM LAYER SHALL BE 6" (152mm) WIDE COVERED WITH A 12" WIDE TOP LAYER (305mm). BOTH LAYERS SHALL BE CENTERED AND SEALED WITH CONTINUOUS LAP SEALANT.
- 5. WHEN METAL FASCIA BY OTHERS IS USED, FASTENER TYPE AND FASTENING FREQUENCY SHALL BE RECOMMENDED BY METAL EDGE MANUFACTURER.

