


NOTES:

- REMOVE ALL LEAD AND OTHER FLASHING BEFORE INSTALLING FIELD-FABRICATED FLASHING.
- 2. TEMPERATURE OF PIPE PENETRATION MUST NOT EXCEED 180°F (82°C).
- 3. PIPE FLASHING MAY BE USED WITH SQUARE OR RECTANGULAR STRUCTURAL TUBING WITH ROUNDED CORNERS.
- 4. FOR STRUCTURAL STEEL TUBING GREATER THAN 12" (305mm) ACROSS, USE DETAIL(S) U-5.
- 5. EPDM PRIMER MUST BE APPLIED TO THE MATING SURFACES PRIOR TO APPLYING PRESSURE-SENSITIVE ELASTOFORM FLASHING.
- 6. IN COLDER TEMPERATURES, A HEAT GUN MUST BE USED WHEN FORMING PRESSURE-SENSITIVE ELASTOFORM FLASHING.
- 7. ON MECHANICALLY FASTENED ROOFING SYSTEMS, ADDITIONAL MEMBRANE SECUREMENT IS REQUIRED. REFER TO DETAIL MF-8B.
- 8. MEMBRANE SECUREMENT IS REQUIRED AROUND ALL ROUND PIPE PENETRATIONS GREATER THAN 18" (457mm) IN DIAMETER.

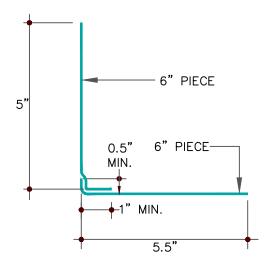

0.5" = 13

1.0" = 255.0" = 127

5.5" = 140

6.0" = 152

