




POSITION MEMBRANE TO ALLOW AN APPROXIMATE 7" (178mm) OVERLAP ALONG THE LENGTH OF THE MEMBRANE & 3" (76mm) AT END LAPS. MARK THE BOTTOM SHEET WITH AN INDELIBLE MARKER 1/2" (13mm) FROM THE EDGE OF THE TOP SHEET AS SHOWN. THE PRE-MARKED LINE ON THE MEMBRANE EDGE CAN ALSO BE USED AS A GUIDE.

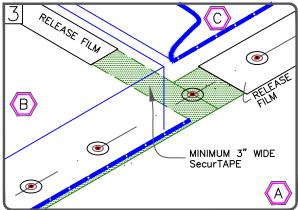


SPLICE SHEET B TO SHEET A AND APPLY SECOND PIECE OF SecurTAPE BETWEEN SHEET B AND C. TRIM RELEASE FILM AS SHOWN.

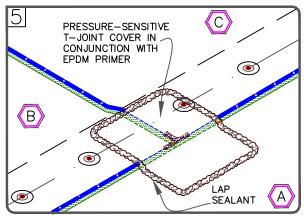

APPLY PRESSURE—SENSITIVE T—JOINT COVER OR 6" (152mm) WIDE SECTION OF PRESSURE—SENSITIVE ELASTOFORM FLASHING CENTERED OVER THE INTERSECTING POINT OF THE LEADING EDGES OF THE FIELD SPLICE INTERSECTION AS SHOWN.

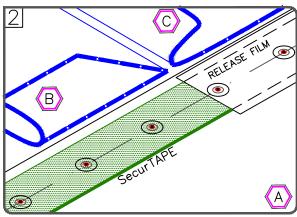

FOLD SHEETS BACK AS SHOWN. APPLY EPDM PRIMER TO THE SPLICE AREA ON BOTH SURFACES AND ALLOW TO PROPERLY DRY. APPLY SecurTAPE WITH RELEASE FILM ALIGNED WITH MARKER LINE.

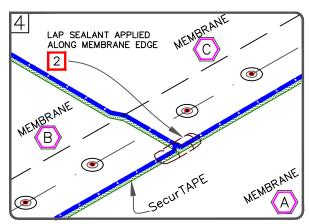

SPLICE SHEET C TO SHEET A AND B, PRESS TOP SHEET ONTO BOTTOM SHEET USING HAND PRESSURE TOWARDS THE OUTER EDGE OF THE SPLICE AND ROLL THE SPLICE AREA WITH A 2" (51mm) WIDE STEEL ROLLER.

NOTES:

- 1. THE USE OF LAP SEALANT ALONG ENTIRE SPLICE EDGE IS OPTIONAL, EXCEPT AT CUT EDGES OF REINFORCED MEMBRANE AND TAPE OVERLAPS. REFER TO DETAIL MF—2A.
- 2. APPLY LAP SEALANT ALONG THE EDGE OF THE MEMBRANE SPLICE (UNDER THE 6"x6" T-JOINT COVER) COVERING THE EXPOSED SPLICE TAPE 1/2" (13mm) IN EACH DIRECTION FROM THE SPLICE INTERSECTION.
- PROJECTS WITH WARRANTIES GREATER THAN 15-YEARS REQUIRE 6" (152mm) WIDE SecurTAPE. REFER TO DETAIL MF-2B.

