
CAUTION

FOR PROJECTS WITH 25 AND 30-YEAR WARRANTIES, THE DRAIN INSERT FLANGE MUST BE OVERLAID WITH TWO LAYERS OF PRESSURE-SENSITIVE FLASHING. THE BOTTOM LAYER SHALL BE 6" (152mm) WIDE PRESSURE-SENSITIVE CURED COVER STRIP COVERED WITH A 9" (229mm) WIDE TOP LAYER OF PRESSURE-SENSITIVE ELASTOFORM FLASHING. BOTH LAYERS SHALL BE SEALED WITH CONTINUOUS LAP SEALANT.

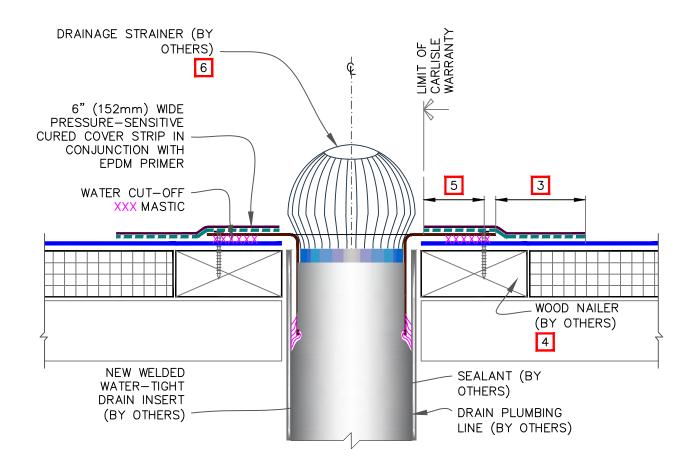

NOTES:

- 1. WATER CUT-OFF MASTIC MUST BE UNDER CONSTANT COMPRESSION.
- 2. APPLY EPDM PRIMER TO METAL FLANGE AND MEMBRANE SURFACE PRIOR TO INSTALLING PRESSURE—SENSITIVE FLASHING
- 3. PRESSURE-SENSITIVE CURED COVER STRIP FLASHING MUST OVERLAP DECK MEMBRANE MINIMUM 3" (76mm).
- 4. WOOD NAILER MUST EXTEND PAST TOTAL WIDTH OF DECK FLANGE.
- 5. DRAIN INSERT FLANGE MUST BE TOTALLY COVERED BY PRESSURE-SENSITIVE CURED COVER STRIP WITH MINIMUM 2" (51mm) COVERAGE PAST NAIL HEADS.
- 6. CONSULT SPECIFIER OR APPLICABLE CODES FOR ADEQUATE DRAINAGE STRAINER TO AVOID PONDING WATER. DO NOT RESTRICT WATER FLOW.

