
AUTION

DETAIL NOT FOR USE ON 25 OR 30-YEAR WARRANTY PROJECTS OR WHEN USING 90-MIL MEMBRANE. ACCEPTABLE EDGING SHALL CONFORM TO THERMOSET UNIVERSAL DETAILS U-1A.1, U-1C, U-1D OR U-1E.

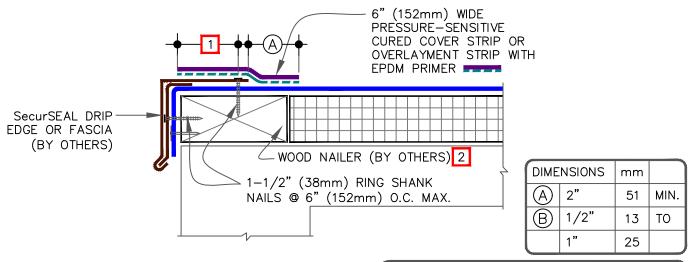

NOTES:

- 1. DECK FLANGE MUST BE TOTALLY COVERED WITH MINIMUM 2" (51mm) COVERAGE PAST NAIL HEADS.
- 2. WOOD NAILER MUST EXTEND PAST TOTAL WIDTH OF METAL EDGE.
- TO REMOVE FINISHING OILS, SCRUB METAL FLANGE WITH WEATHERED MEMBRANE CLEANER; ALLOW TO DRY PRIOR TO APPLYING PRIMER.
- 4. LAP SEALANT MUST BE APPLIED AT FLASHING OVERLAPS AND INTERSECTIONS WITH JOINTS IN METAL EDGING.
- 5. APPLY LAP SEALANT ALONG THE LEADING EDGE OF THE MEMBRANE SPLICE (UNDER THE 6"X6" T-JOINT COVER) COVERING THE EXPOSED SPLICE TAPE 1/2" (13mm) IN ALL DIRECTIONS FROM THE SPLICE INTERSECTION. T-JOINT COVER NOT NEEDED WHEN USING PS OVERLAYMENT STRIP.
- 6. REFER TO APPLICABLE <u>CARLISLE METAL</u>
 <u>EDGING INSTRUCTION MANUAL</u> FOR
 STEP-BY-STEP INSTALLATION
 PROCEDURES.
- 7. DETAIL NOT FOR USE WITH DESIGN "B" (BALLASTED STONE ASSEMBLY).

