

### CASEMENT/AWNING WINDOWS

### **Casement Window Details**


Scale  $1^{1/2}$ " (38) = 1'-0" (305) - 1:8

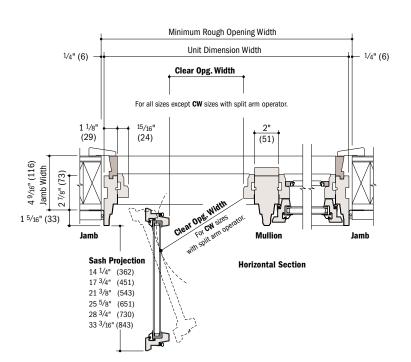


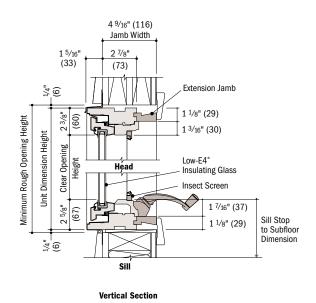

### **Awning Window Details**

Scale  $1^{1/2}$ " (38) = 1'-0" (305) - 1:8

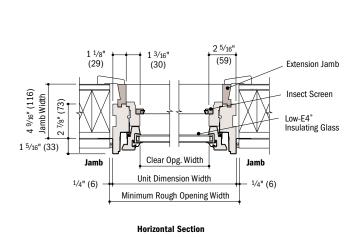

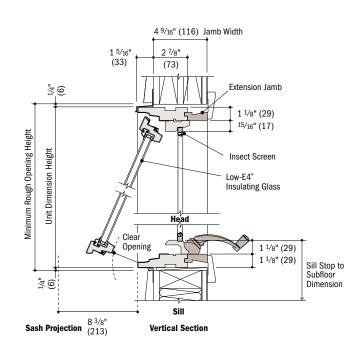

- ullet 4  $^9/_{16}$ " (116) Jamb width measurement is from backside of installation flange.
- Light-colored areas are parts included with window. Dark-colored areas are additional Andersen\* parts required to complete window assembly as shown.
- Rough openings may need to be increased to allow for use of building wraps, flashing, sill panning, brackets, fasteners or other items.

  Details are for illustration only and are not intended to represent product installation methods or materials. Refer to product installation guides at andersenwindows.com.


. Dimensions in parentheses are in millimeters

2013-2014 400/200 Series Product Guide Page 1 of 2




## **Picture and Transom Window Details**

Scale  $1^{1/2}$ " (38) = 1'-0" (305) - 1:8

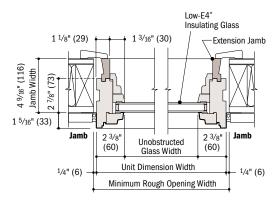



**Horizontal Section** 

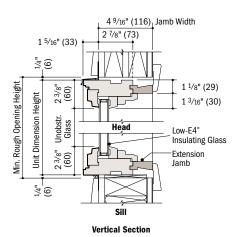



# **Interior Trim Options**

Extension jamb and drywall return bead applications shown.

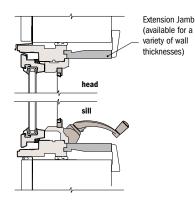

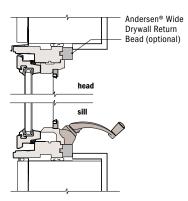

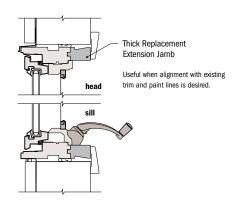

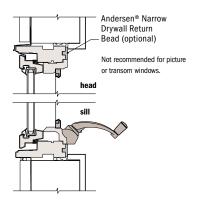

- $\bullet$  4  $^{9}\!/_{16}\text{"}$  (116) jamb width measurement is from backside of installation flange.
- · Light-colored areas are parts included with window. Dark-colored areas are additional Andersen\* parts required to complete window assembly as shown.
- Rough openings may need to be increased to allow for use of building wraps, flashing, sill panning, brackets, fasteners or other items.

  Details are for illustration only and are not intended to represent product installation methods or materials. Refer to product installation guides at andersenwindows.com.
- . Dimensions in parentheses are in millimeters