


# KEY - EF DETAIL REFERENCE

SCALE: 3" = 1' - 0"



STONEWOOD  
ARCHITECTURAL PANELS

Publish Date: 03.2013

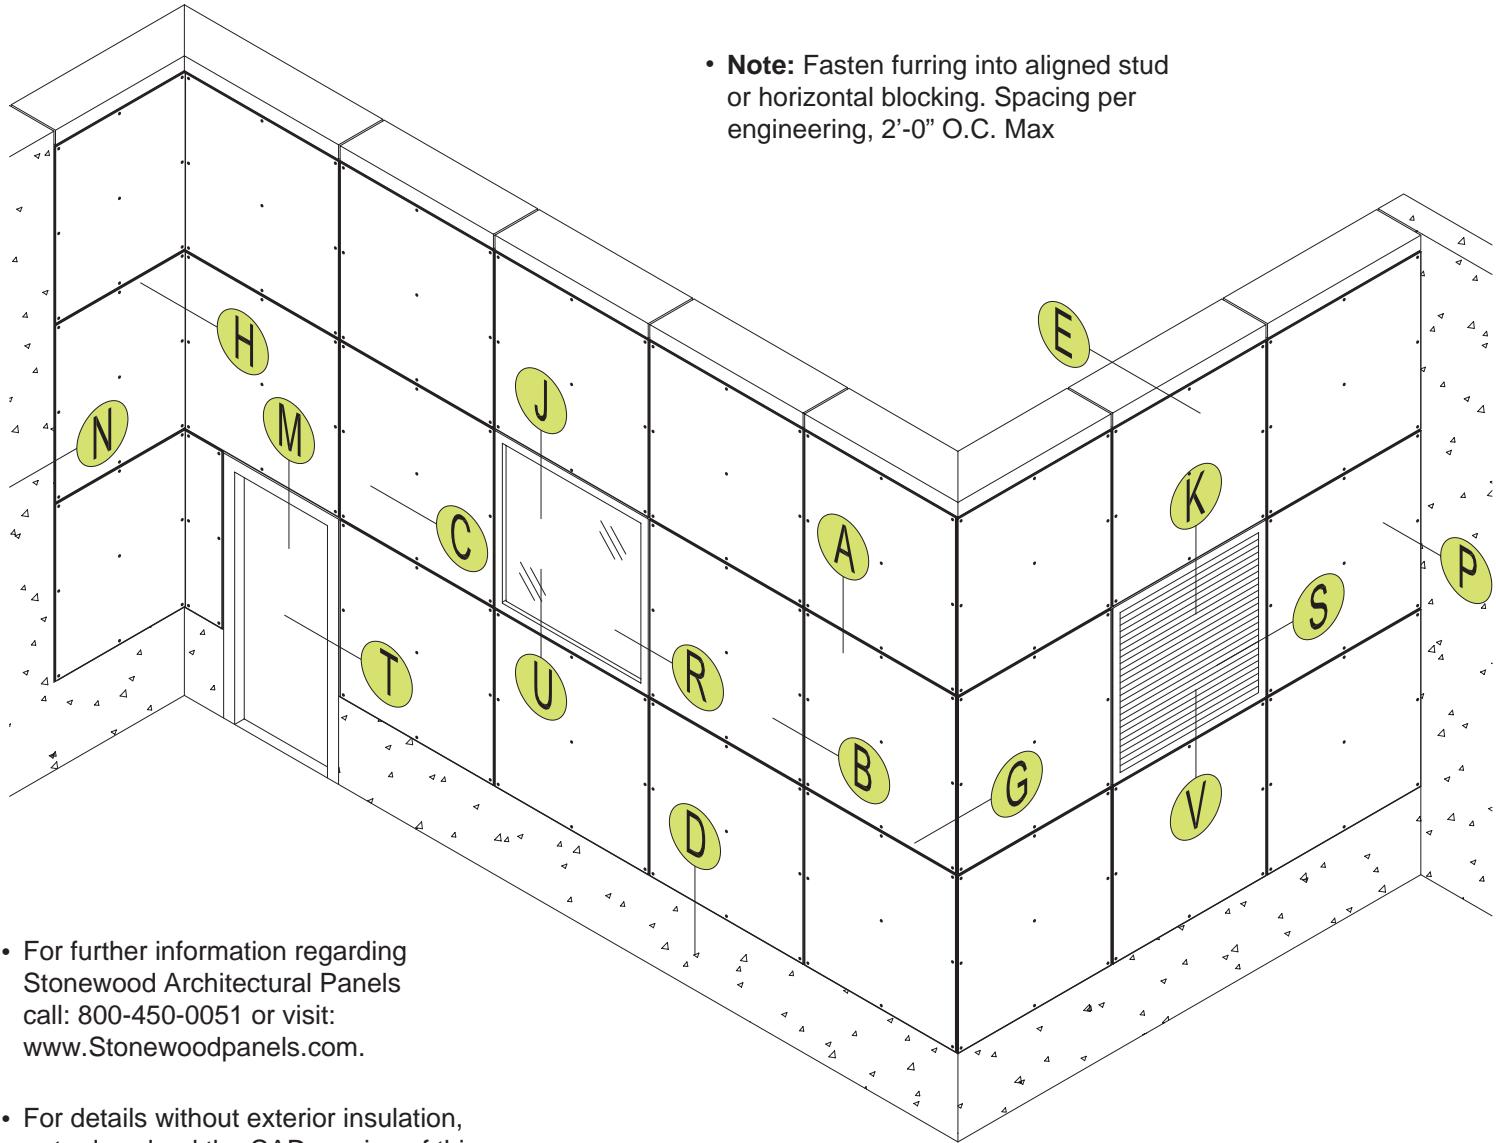

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad®**  
rainscreen solutions  
**The EF Series**  
3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012

# HORIZONTAL JOINT

SCALE: 3" = 1' - 0"

A



**STONEWOOD**  
ARCHITECTURAL PANELS

Publish Date: 03.2013

STONEWOOD 3/8" EXTERIOR PANEL  
OR 5/16", 1/2", CUSTOM  
THICKNESSES AVAILABLE.


NORTHCLAD®  
HIGH PERFORMANCE,  
PREFINISHED, EXTRUDED  
ALUMINUM VERTICAL FURRING  
(SEE PLAN VIEW DETAILS  
FOR PART NUMBERS) TYP.

NORTHCLAD®  
DRIP FLASHING  
(PT.# EFB03)  
PRE-FINISHED BLACK,  
= WIDTH OF EACH PANEL

NORTHCLAD®  
STAINLESS STEEL NEOPRENE  
WASHERED FASTENERS  
GAP IN FURRING @ FRAMING  
RELIEF JOINTS AS REQ'D

STONEWOOD EXTERIOR PANEL

VAPROSHIELD® REVEALSHIELD™  
UV STABLE WATER RESISTIVE  
VAPOR PERMEABLE AIR BARRIER  
MEMBRANE FOR OPEN JOINT  
CLADDING SYSTEMS

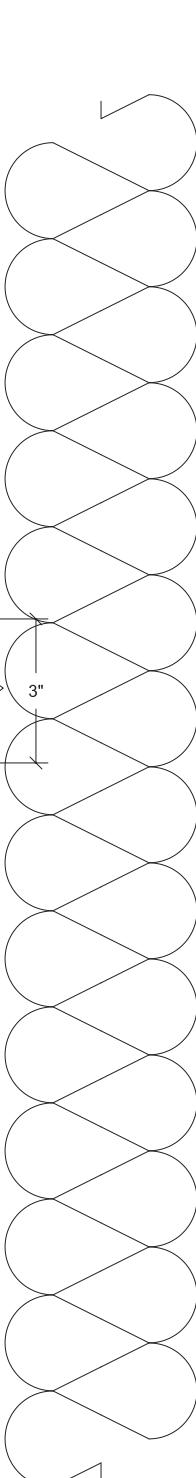

- **Note:** Fasten furring into aligned stud or horizontal blocking. Spacing per engineering, 2'-0" O.C. Max

- For further information regarding Stonewood Architectural Panels call: 800-450-0051 or visit: [www.Stonewoodpanels.com](http://www.Stonewoodpanels.com).

- For details without exterior insulation, or to download the CAD version of this detail, please see [www.northclad.com](http://www.northclad.com).

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.


**NorthClad**  
rainscreen solutions  
**The EF Series**  
3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012

# VERTICAL JOINT B

SCALE: 3" = 1' - 0"



Publish Date: 03.2013

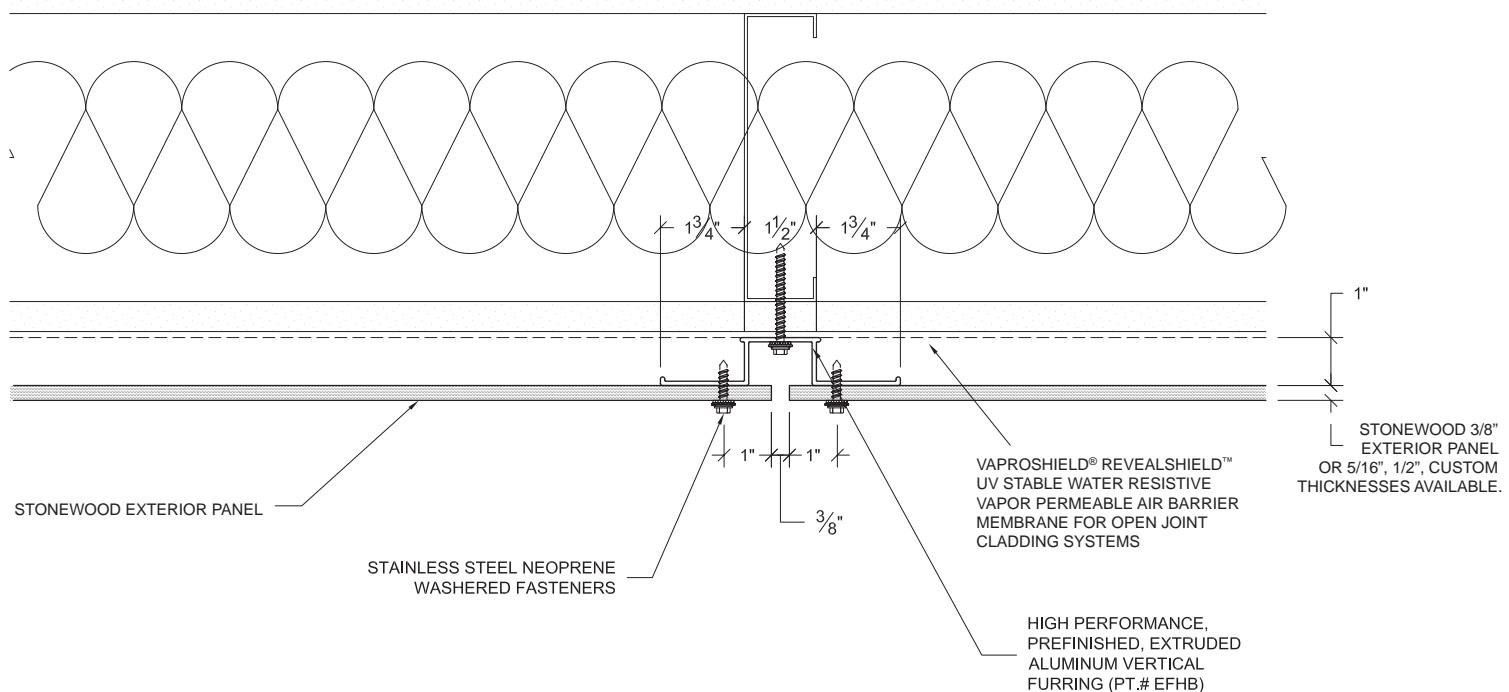

- **Note:** Fasten furring into aligned stud or horizontal blocking. Spacing per engineering, 2'-0" O.C. Max

- For further information regarding Stonewood Architectural Panels call: 800-450-0051 or visit: [www.Stonewoodpanels.com](http://www.Stonewoodpanels.com).

- For details without exterior insulation, or to download the CAD version of this detail, please see [www.northclad.com](http://www.northclad.com).

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**  
rainscreen solutions  
**The EF Series**  
3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012


# VERTICAL FASTENER C

SCALE: 3" = 1' - 0"



STONEWOOD  
ARCHITECTURAL PANELS

Publish Date: 03.2013

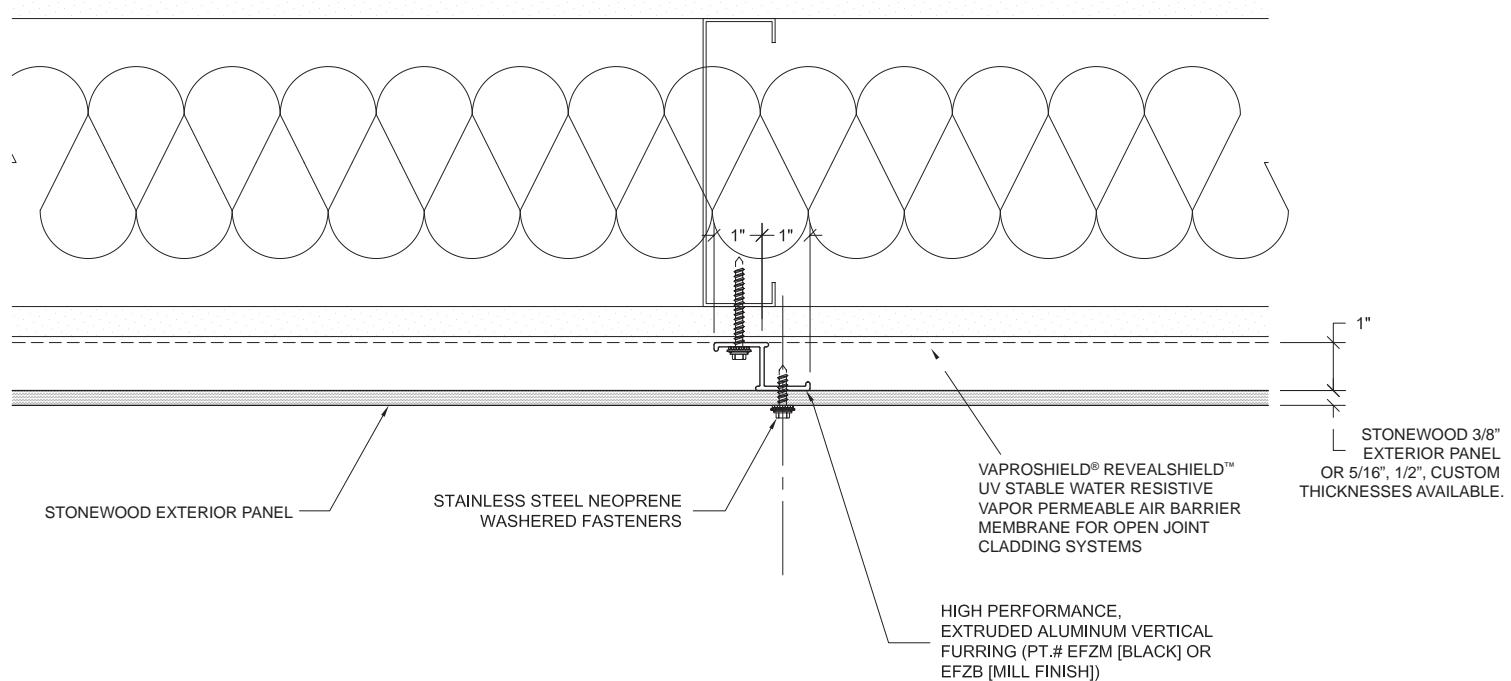

- **Note:** Fasten furring into aligned stud or horizontal blocking. Spacing per engineering, 2'-0" O.C. Max

- For further information regarding Stonewood Architectural Panels call: 800-450-0051 or visit: [www.Stonewoodpanels.com](http://www.Stonewoodpanels.com).

- For details without exterior insulation, or to download the CAD version of this detail, please see [www.northclad.com](http://www.northclad.com).

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**  
rainscreen solutions  
**The EF Series**  
3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012


# BASE DETAIL D

SCALE: 3" = 1' - 0"



**STONEWOOD**  
ARCHITECTURAL PANELS

Publish Date: 03.2013

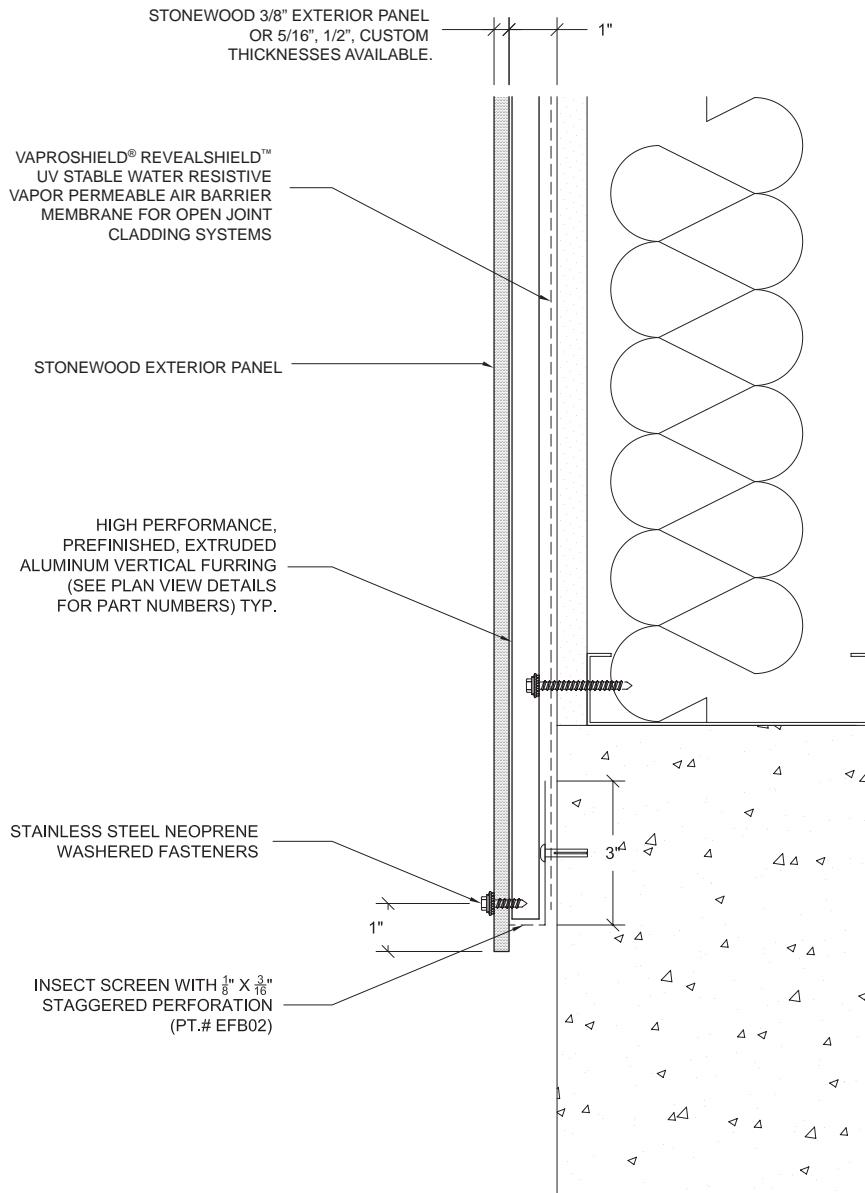

- **Note:** Fasten furring into aligned stud or horizontal blocking. Spacing per engineering, 2'-0" O.C. Max
- For further information regarding Stonewood Architectural Panels call: 800-450-0051 or visit: [www.Stonewoodpanels.com](http://www.Stonewoodpanels.com).
- For details without exterior insulation, or to download the CAD version of this detail, please see [www.northclad.com](http://www.northclad.com).

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**  
rainscreen solutions  
**The EF Series**  
3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012

# COPING


E

SCALE: 3" = 1' - 0"



STONEWOOD  
ARCHITECTURAL PANELS

Publish Date: 03.2013

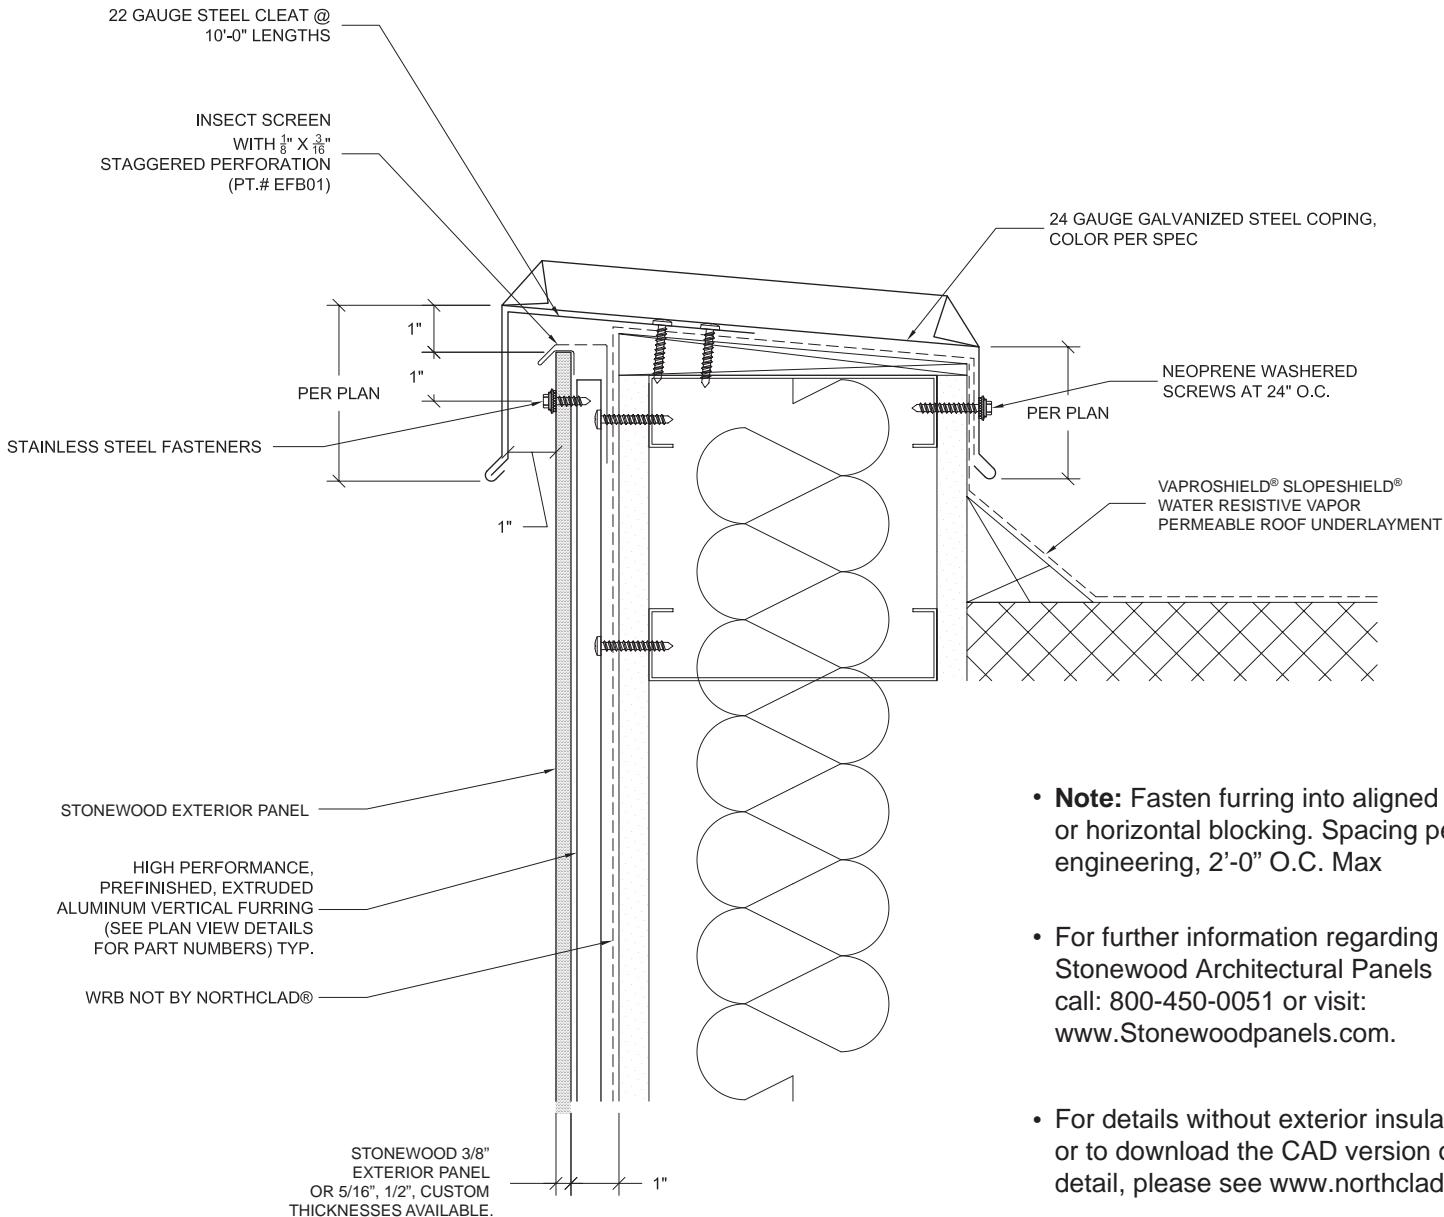

- Note:** Fasten furring into aligned stud or horizontal blocking. Spacing per engineering, 2'-0" O.C. Max
- For further information regarding Stonewood Architectural Panels call: 800-450-0051 or visit: [www.Stonewoodpanels.com](http://www.Stonewoodpanels.com).
- For details without exterior insulation, or to download the CAD version of this detail, please see [www.northclad.com](http://www.northclad.com).

### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**  
rainscreen solutions  
**The EF Series**  
3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012


# OUTSIDE CORNER G

SCALE: 3" = 1' - 0"



**STONEWOOD**  
ARCHITECTURAL PANELS

Publish Date: 03.2013

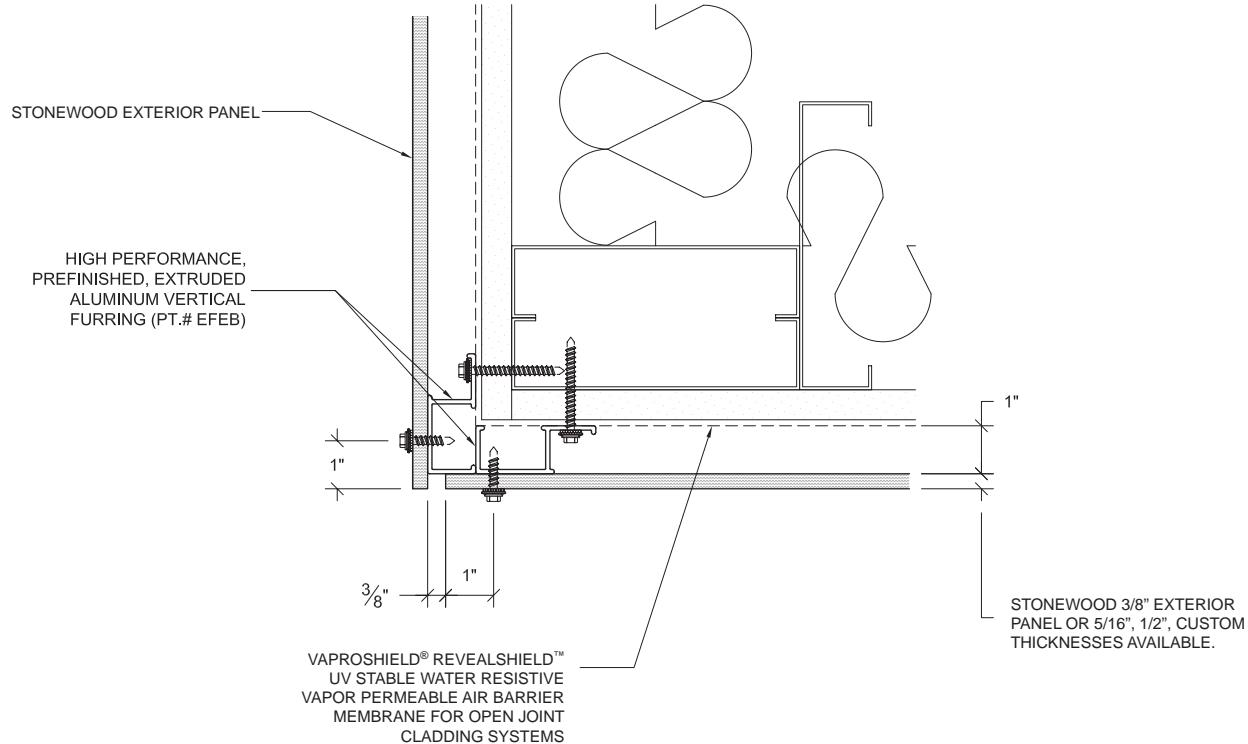

- **Note:** Fasten furring into aligned stud or horizontal blocking. Spacing per engineering, 2'-0" O.C. Max

- For further information regarding Stonewood Architectural Panels call: 800-450-0051 or visit: [www.Stonewoodpanels.com](http://www.Stonewoodpanels.com).

- For details without exterior insulation, or to download the CAD version of this detail, please see [www.northclad.com](http://www.northclad.com).

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**  
rainscreen solutions  
**The EF Series**  
3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012


# INSIDE CORNER H

SCALE: 3" = 1' - 0"



**STONEWOOD**  
ARCHITECTURAL PANELS

Publish Date: 03.2013

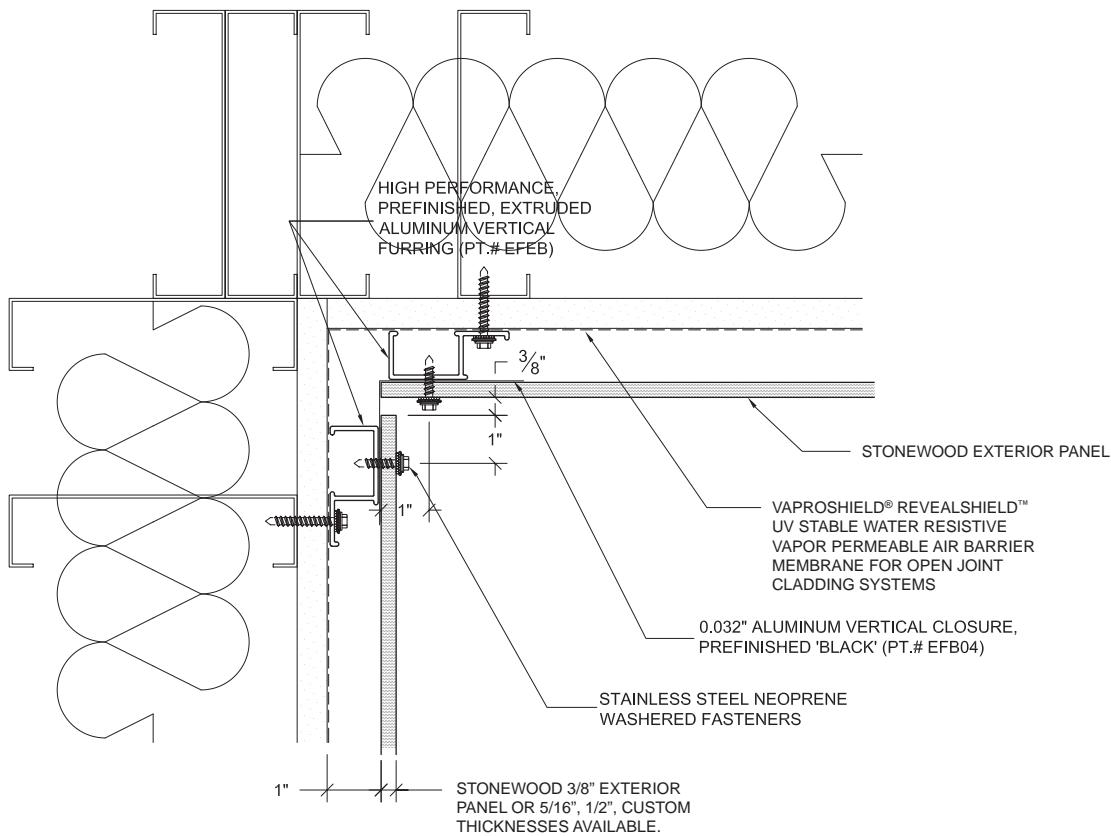

- **Note:** Fasten furring into aligned stud or horizontal blocking. Spacing per engineering, 2'-0" O.C. Max

- For further information regarding Stonewood Architectural Panels call: 800-450-0051 or visit: [www.Stonewoodpanels.com](http://www.Stonewoodpanels.com).

- For details without exterior insulation, or to download the CAD version of this detail, please see [www.northclad.com](http://www.northclad.com).

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**  
rainscreen solutions  
**The EF Series**  
3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012


# WINDOW HEAD J

SCALE: 3" = 1' - 0"



**STONEWOOD**  
ARCHITECTURAL PANELS

Publish Date: 03.2013

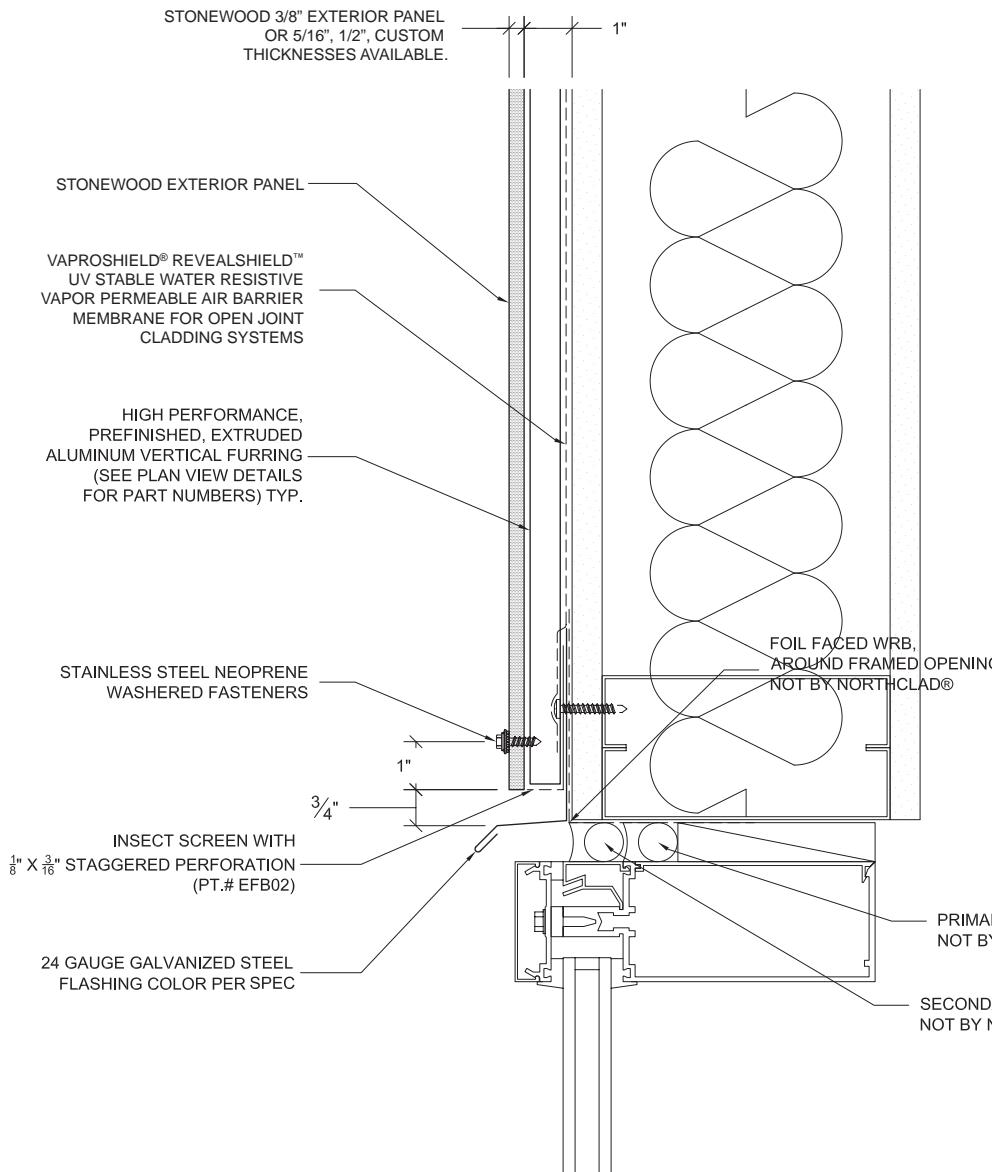

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**  
rainscreen solutions  
**The EF Series**  
3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012


# LOUVER HEAD K

SCALE: 3" = 1' - 0"



**STONEWOOD**  
ARCHITECTURAL PANELS

Publish Date: 03.2013

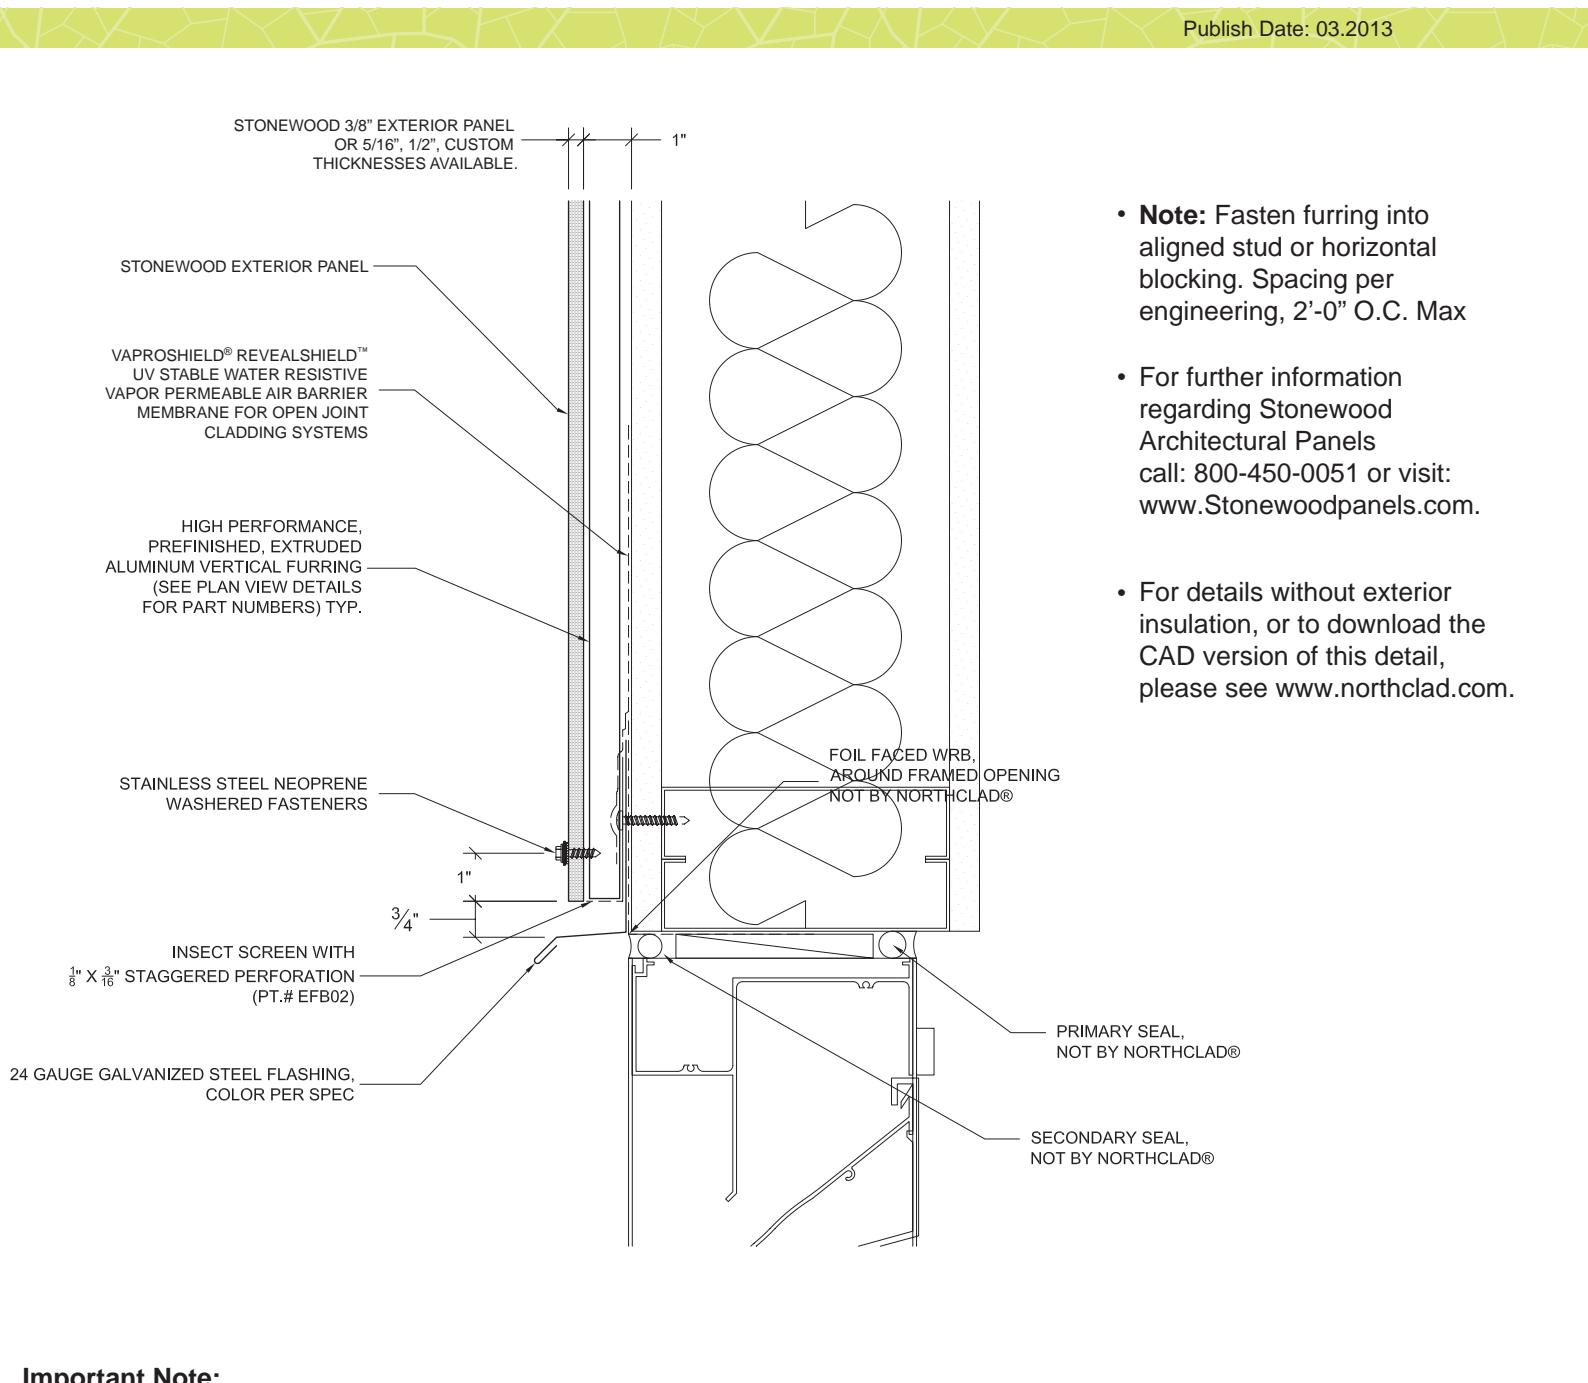

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**  
rainscreen solutions  
The EF Series  
3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012


# DOOR HEAD M

SCALE: 3" = 1' - 0"



STONEWOOD  
ARCHITECTURAL PANELS

Publish Date: 03.2013

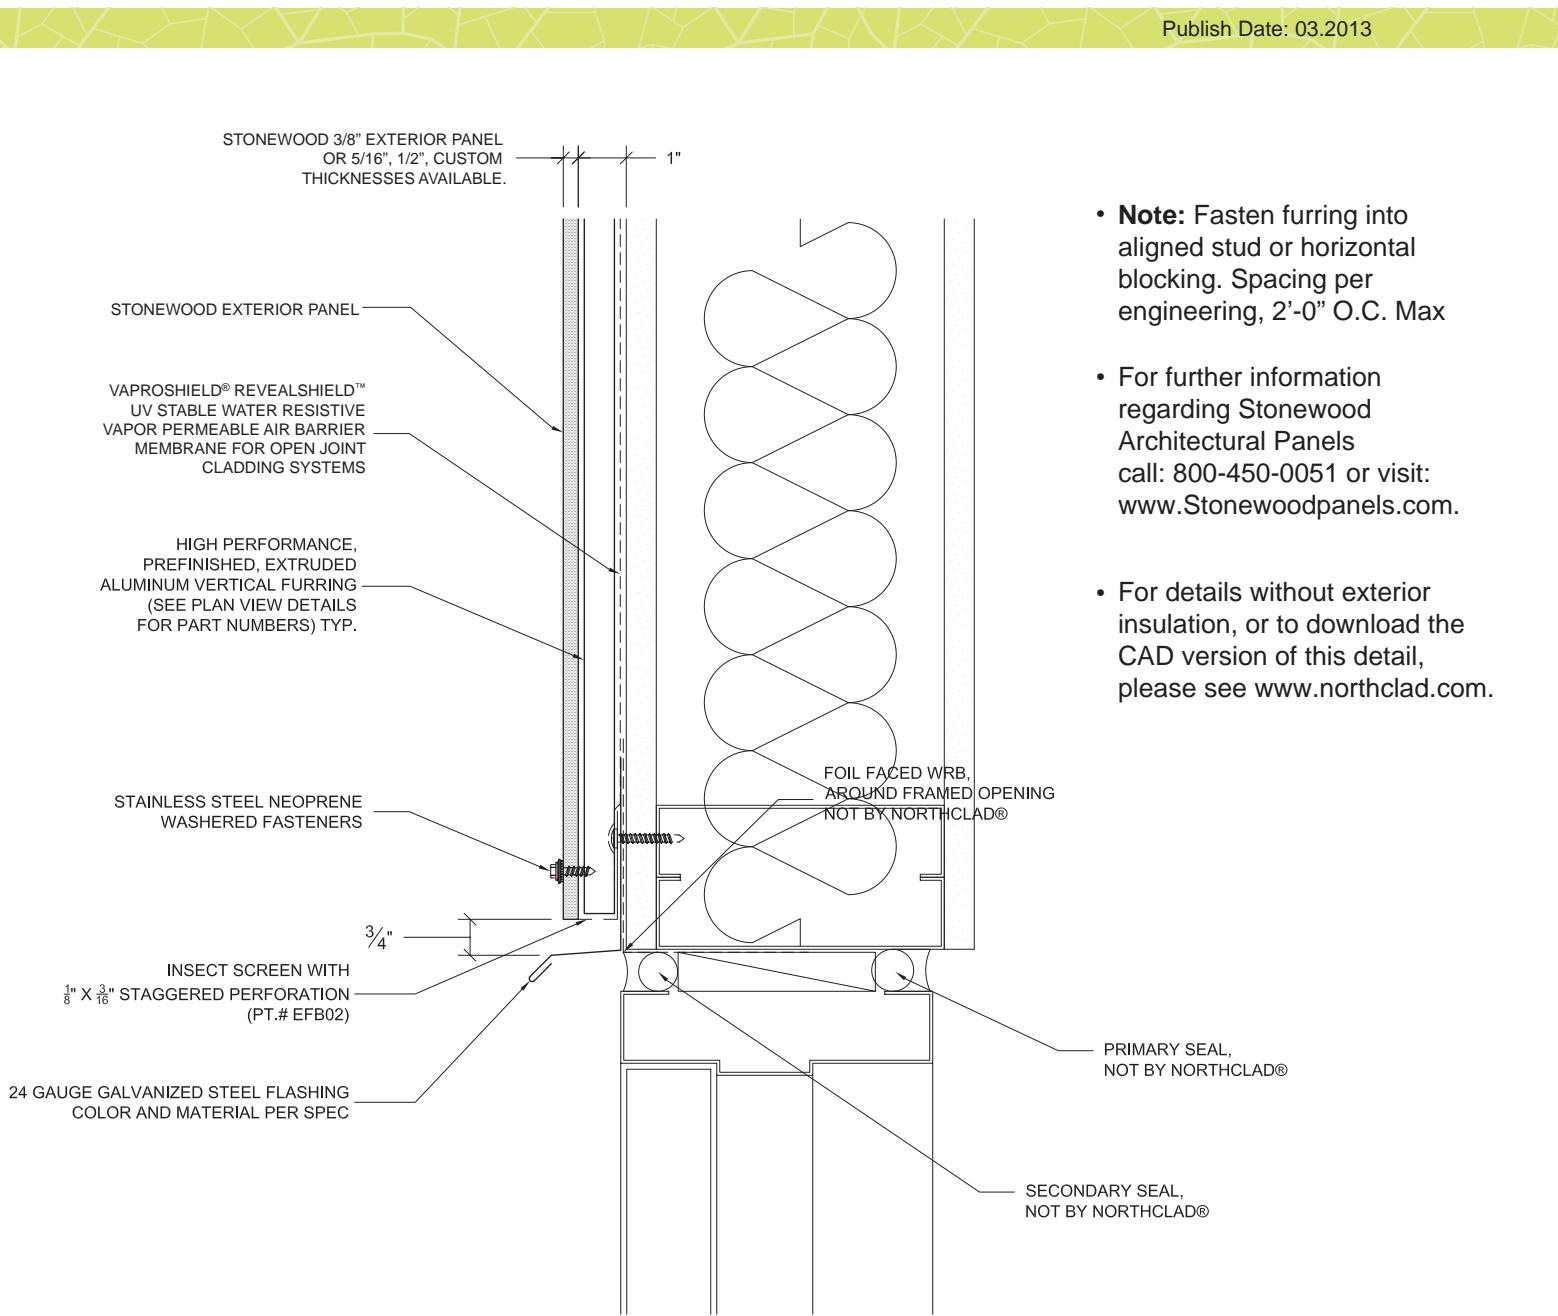

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**<sup>®</sup>  
rainscreen solutions  
**The EF Series**  
3 NorthClad<sup>®</sup> EF Series Exposed Fastener Panel System - Publish Date: 01.2012


# CONCRETE TRANSITION N

SCALE: 3" = 1' - 0"



STONEWOOD  
ARCHITECTURAL PANELS

Publish Date: 03.2013

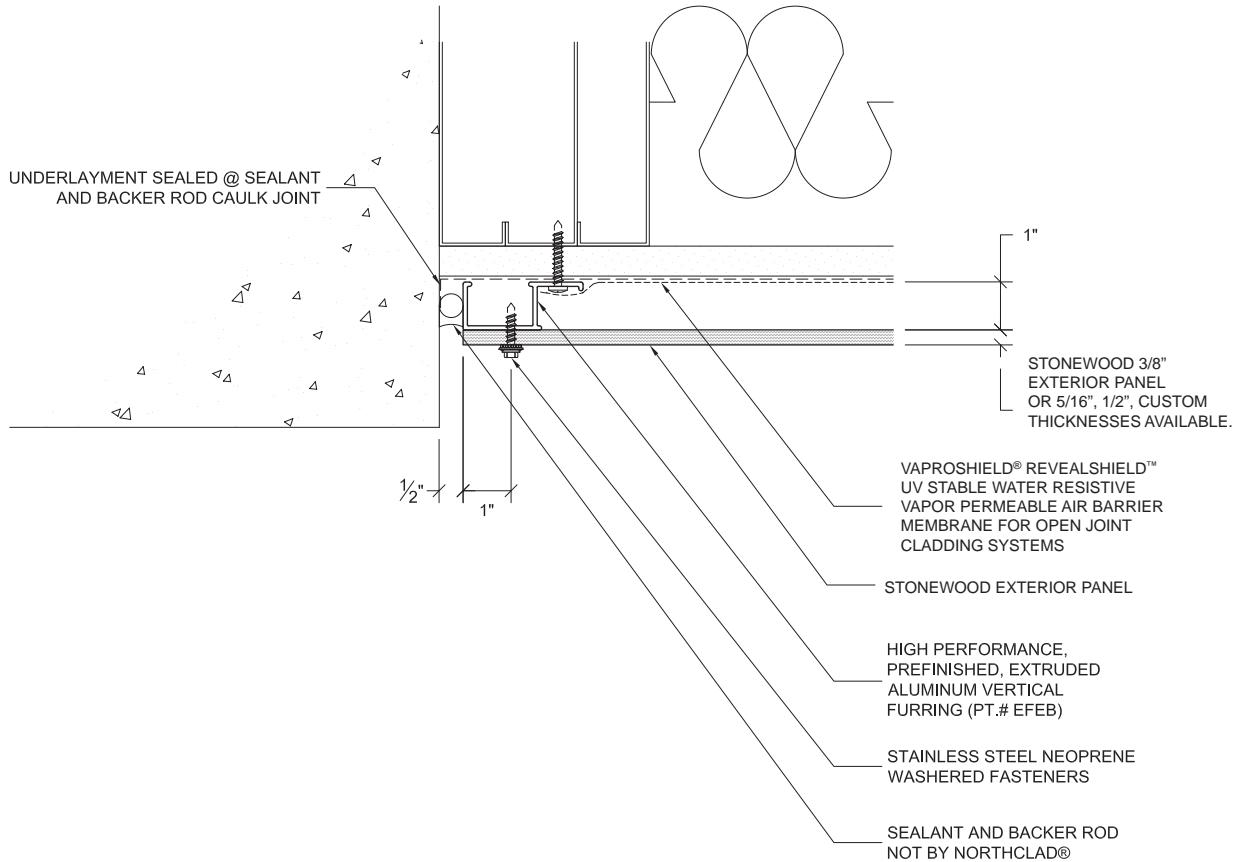

- Note:** Fasten furring into aligned stud or horizontal blocking. Spacing per engineering, 2'-0" O.C. Max

- For further information regarding Stonewood Architectural Panels call: 800-450-0051 or visit: [www.Stonewoodpanels.com](http://www.Stonewoodpanels.com).

- For details without exterior insulation, or to download the CAD version of this detail, please see [www.northclad.com](http://www.northclad.com).

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**  
rainscreen solutions  
**The EF Series**  
3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012

# VERTICAL TERMINATION


P

SCALE: 3" = 1' - 0"



STONEWOOD  
ARCHITECTURAL PANELS

Publish Date: 03.2013

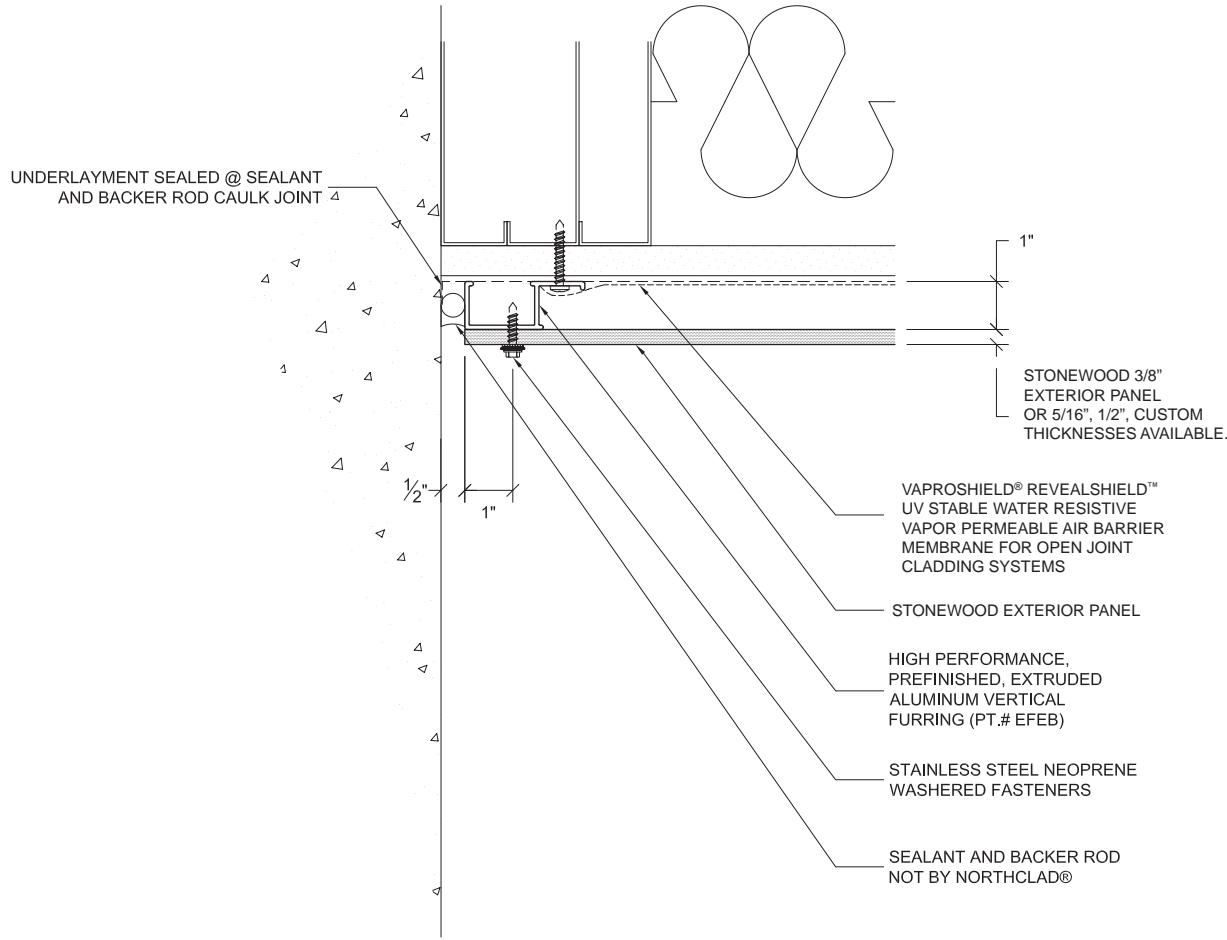

- Note:** Fasten furring into aligned stud or horizontal blocking. Spacing per engineering, 2'-0" O.C. Max

- For further information regarding Stonewood Architectural Panels call: 800-450-0051 or visit: [www.Stonewoodpanels.com](http://www.Stonewoodpanels.com).

- For details without exterior insulation, or to download the CAD version of this detail, please see [www.northclad.com](http://www.northclad.com).

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**  
rainscreen solutions

**The EF Series**

3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012


# WINDOW JAMB R

SCALE: 3" = 1' - 0"



STONEWOOD  
ARCHITECTURAL PANELS

Publish Date: 03.2013

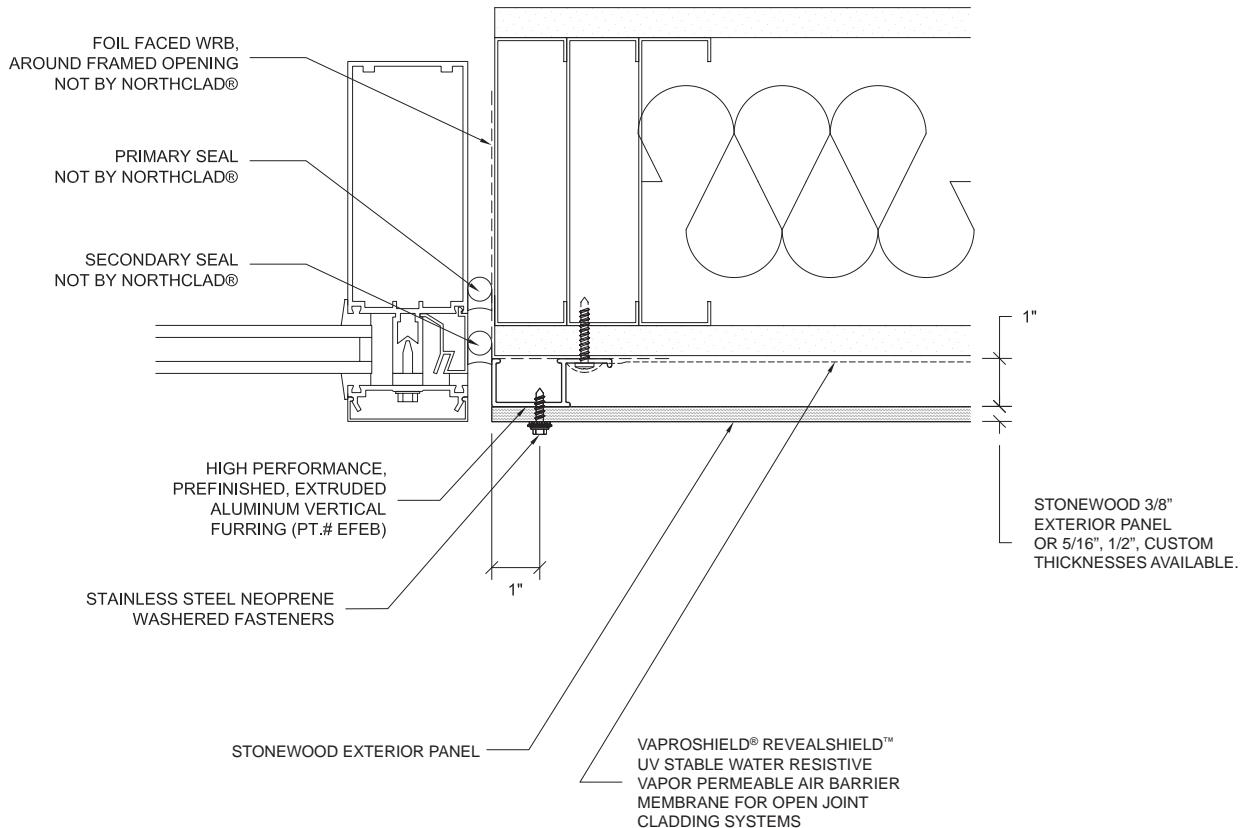

- Note:** Fasten furring into aligned stud or horizontal blocking. Spacing per engineering, 2'-0" O.C. Max

- For further information regarding Stonewood Architectural Panels call: 800-450-0051 or visit: [www.Stonewoodpanels.com](http://www.Stonewoodpanels.com).

- For details without exterior insulation, or to download the CAD version of this detail, please see [www.northclad.com](http://www.northclad.com).

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**  
rainscreen solutions  
**The EF Series**  
3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012


# LOUVER JAMB S

SCALE: 3" = 1' - 0"



STONEWOOD  
ARCHITECTURAL PANELS

Publish Date: 03.2013

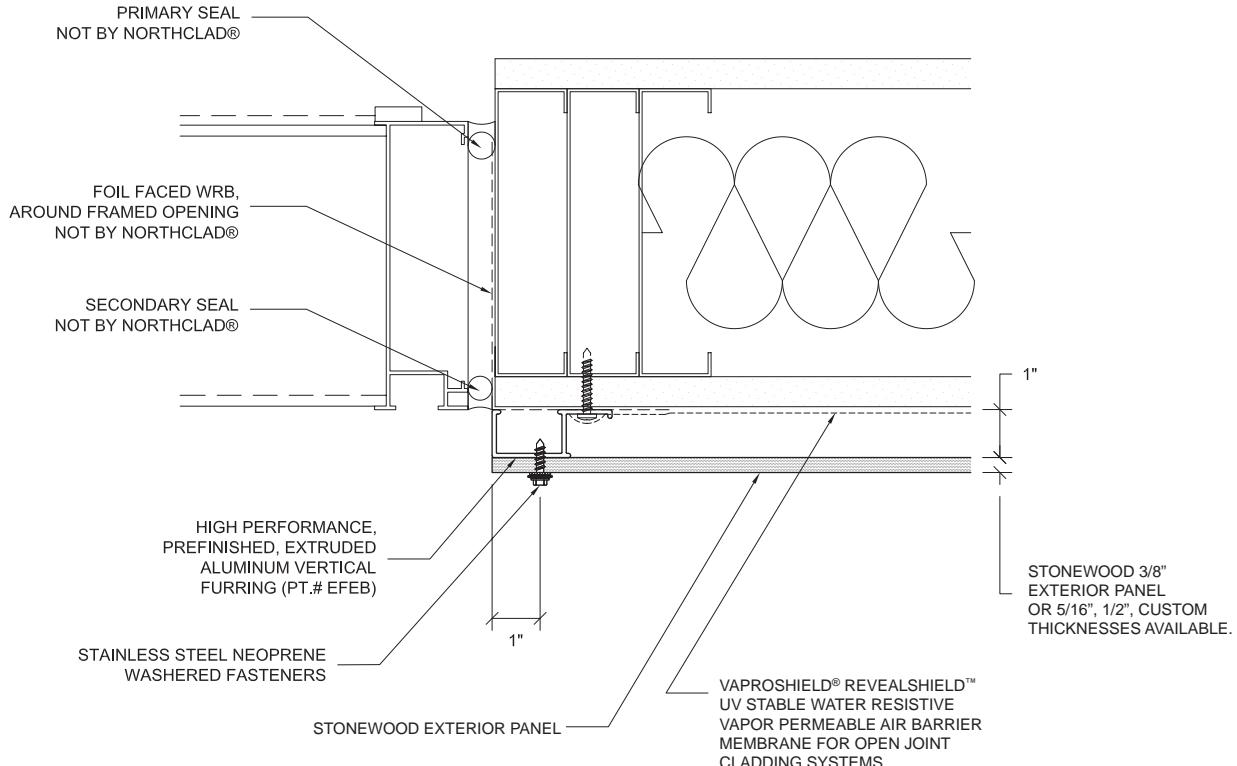

- Note:** Fasten furring into aligned stud or horizontal blocking. Spacing per engineering, 2'-0" O.C. Max

- For further information regarding Stonewood Architectural Panels call: 800-450-0051 or visit: [www.Stonewoodpanels.com](http://www.Stonewoodpanels.com).

- For details without exterior insulation, or to download the CAD version of this detail, please see [www.northclad.com](http://www.northclad.com).

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad®**  
rainscreen solutions  
**The EF Series**  
3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012

# DOOR JAMB




SCALE: 3" = 1' - 0"



**STONEWOOD**  
ARCHITECTURAL PANELS

Publish Date: 03.2013

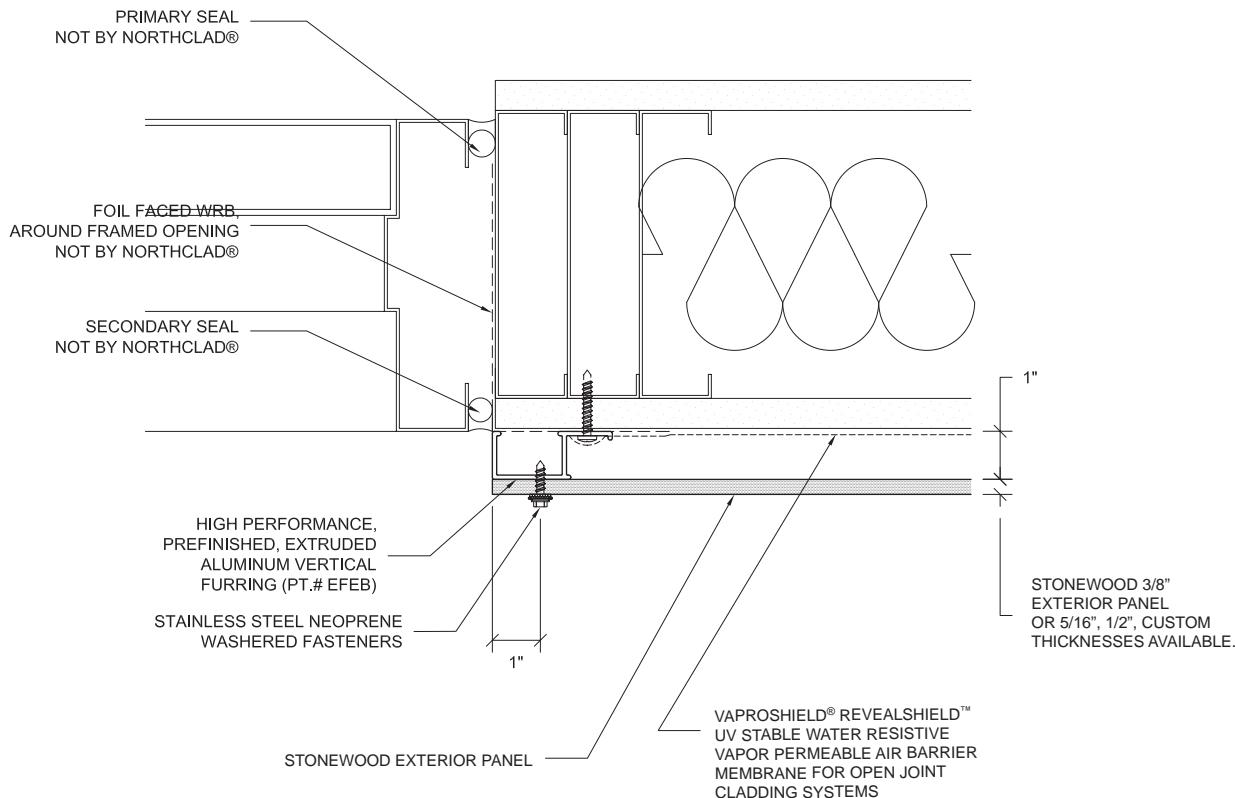

- **Note:** Fasten furring into aligned stud or horizontal blocking. Spacing per engineering, 2'-0" O.C. Max

- For further information regarding Stonewood Architectural Panels call: 800-450-0051 or visit: [www.Stonewoodpanels.com](http://www.Stonewoodpanels.com).

- For details without exterior insulation, or to download the CAD version of this detail, please see [www.northclad.com](http://www.northclad.com).

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**  
rainscreen solutions

**The EF Series**

3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012


# WINDOW SILL U

SCALE: 3" = 1' - 0"



**STONEWOOD**  
ARCHITECTURAL PANELS

Publish Date: 03.2013

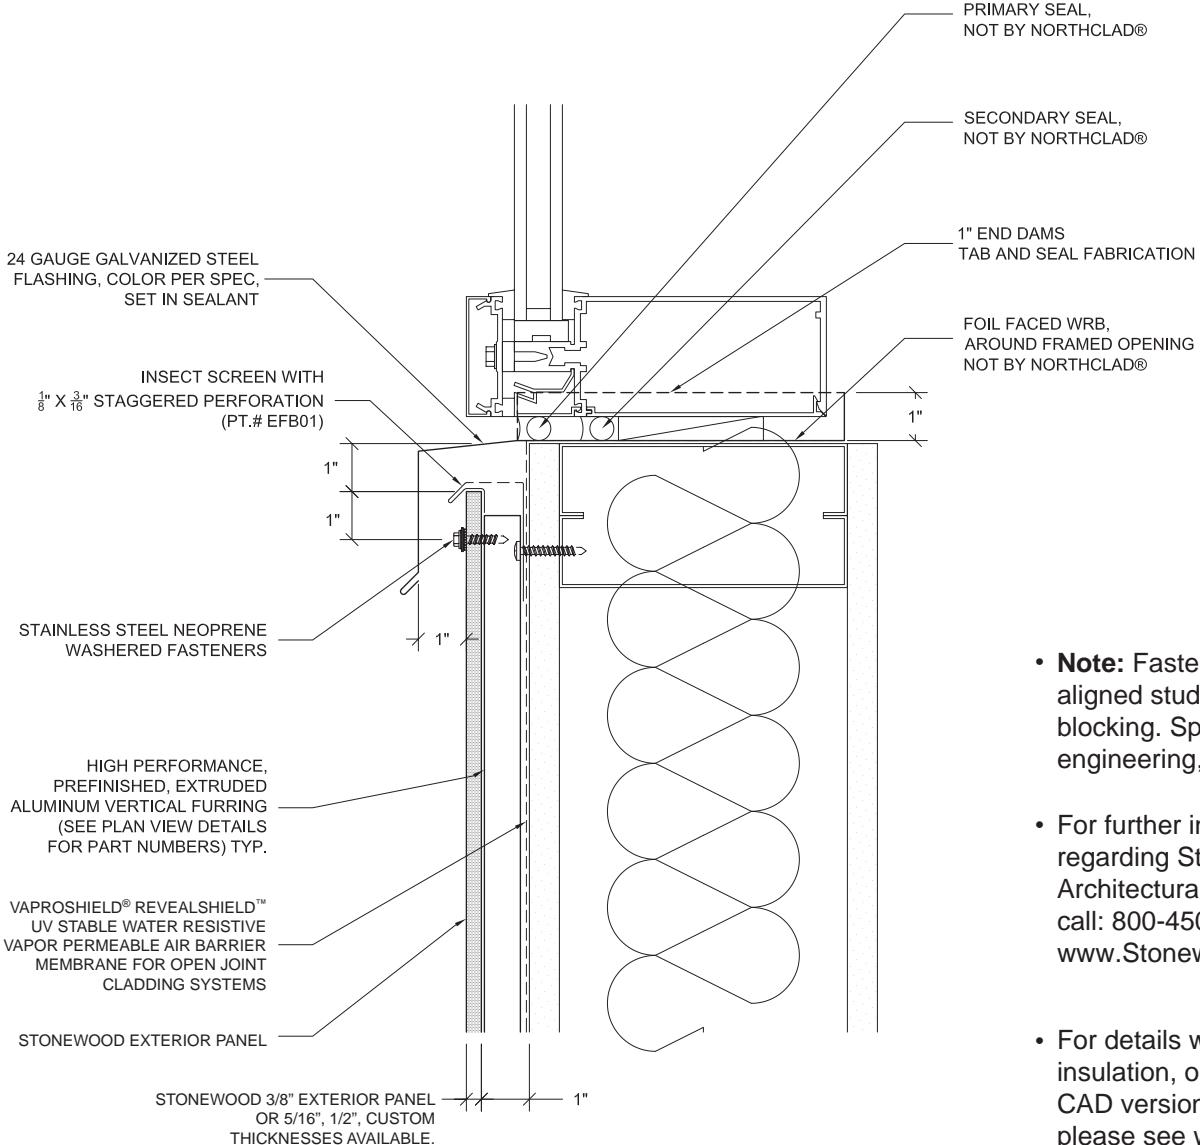

- **Note:** Fasten furring into aligned stud or horizontal blocking. Spacing per engineering, 2'-0" O.C. Max
- For further information regarding Stonewood Architectural Panels call: 800-450-0051 or visit: [www.Stonewoodpanels.com](http://www.Stonewoodpanels.com).
- For details without exterior insulation, or to download the CAD version of this detail, please see [www.northclad.com](http://www.northclad.com).

#### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**<sup>®</sup>  
rainscreen solutions  
**The EF Series**  
3 NorthClad<sup>®</sup> EF Series Exposed Fastener Panel System - Publish Date: 01.2012


# LOUVER SILL V

SCALE: 3" = 1' - 0"



**STONEWOOD**  
ARCHITECTURAL PANELS

Publish Date: 03.2013

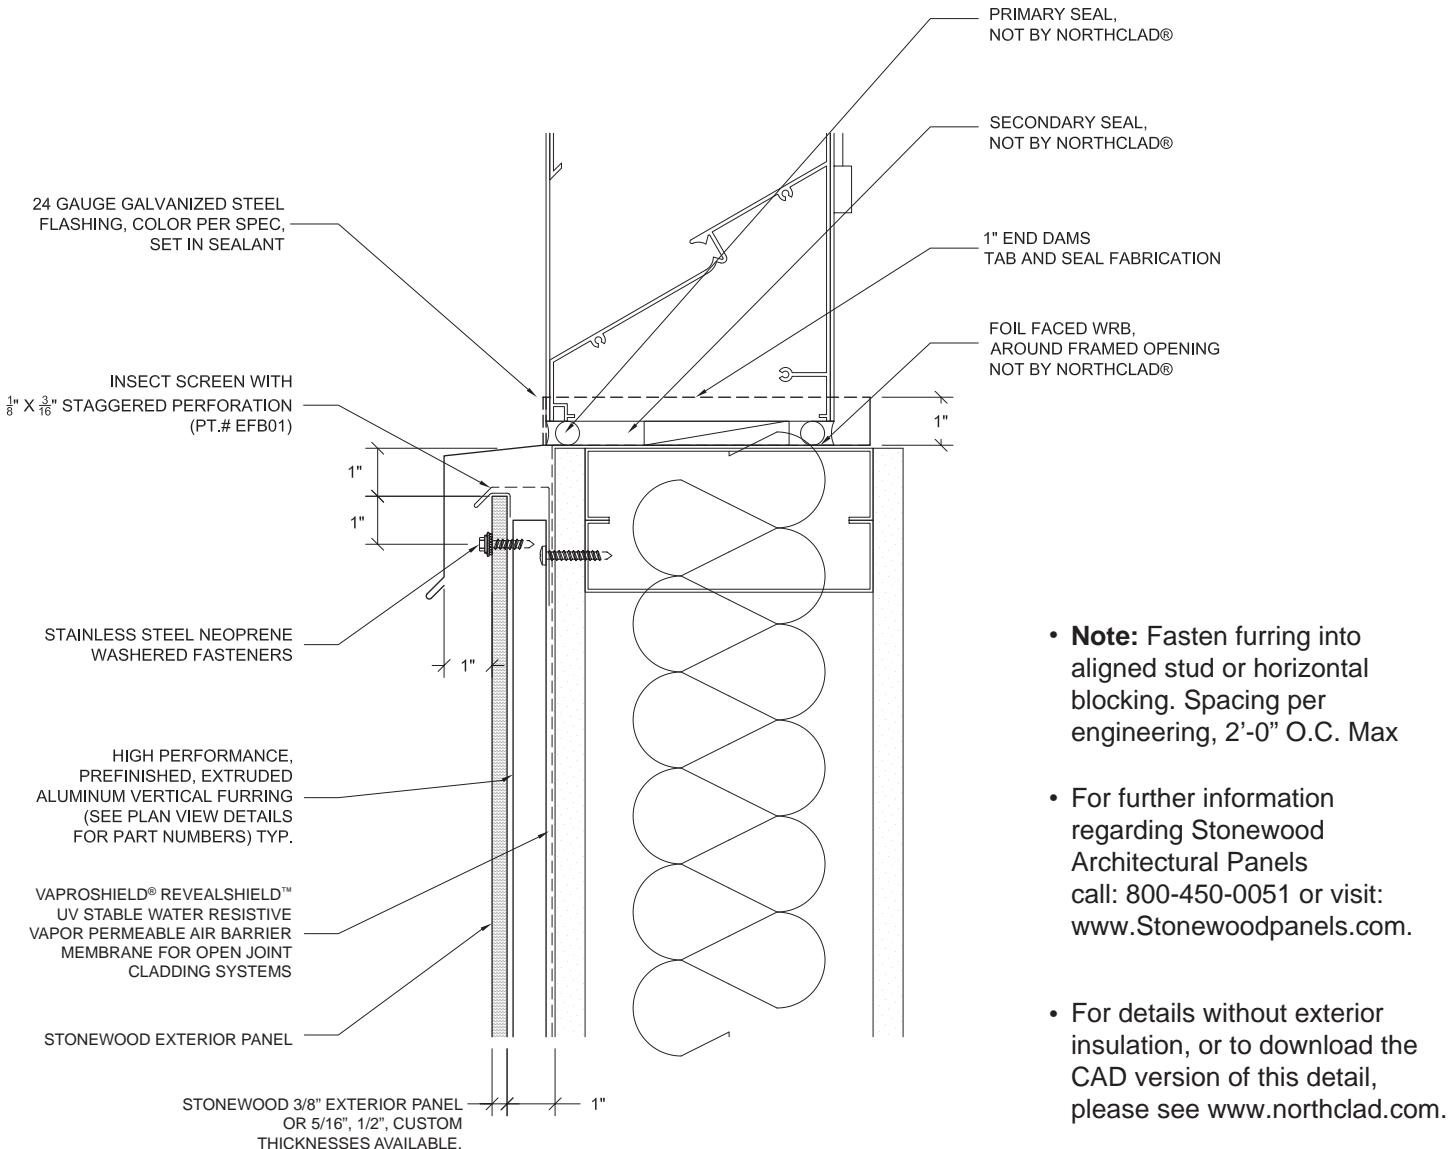

### Important Note:

Fiberesin Industries and Northclad Rainscreen Solutions independently warrant the performance of their products. Please contact Fiberesin Industries or NorthClad Rainscreen Solutions or visit [Stonewoodpanels.com](http://Stonewoodpanels.com) and [Northclad.com](http://Northclad.com) for more warranty information.

**NorthClad**  
rainscreen solutions  
**The EF Series**  
3 NorthClad® EF Series Exposed Fastener Panel System - Publish Date: 01.2012