

FramSat-1 Downlink Reception & Telemetry Decoding Guide

Technical Specifications for Amateur Radio Operators

Orbit NTNU – SatCom Team
Trondheim, Norway
<https://orbitntnu.com>

September 5, 2026

Abstract

This document provides the radio frequency (RF), modulation, and data link layer specifications for the UHF telemetry downlink of the **FramSat-1** CubeSat, developed by Orbit NTNU. It is intended to assist amateur radio operators, SatNOGS ground station owners, and enthusiasts in receiving, demodulating, and extracting raw frames transmitted by the satellite.

1 Introduction

FramSat-1 is a 1U student satellite developed by Orbit NTNU in Trondheim, Norway. The satellite transmits periodic beacon and telemetry frames on the amateur satellite 70 cm band. All transmissions adhere strictly to open amateur radio protocols, utilizing standard AX.25 UI-frames modulated with G3RUH 9600 bps GFSK.

Amateur radio operators are invited to listen for downlinks and submit reception reports to the Orbit NTNU ground operations team.

2 Physical Layer (RF & Modulation)

The physical layer parameters for the UHF downlink are summarized in Table 1.

Table 1: FramSat-1 Downlink RF Specifications

Parameter	Value / Specification
Downlink Frequency	435.141 MHz (IARU Coordinated)
Frequency Band	70 cm Amateur Satellite Service (435–438 MHz)
Modulation Scheme	GFSK (2-FSK with Gaussian filter)
Bitrate / Baudrate	9600 bps
Frequency Deviation (Δf)	± 3.0 kHz
Modulation Index (h)	≈ 0.625
Pulse Shaping Filter	Gaussian ($BT = 0.5$, G3RUH standard)
Scrambling Scheme	Standard G3RUH ($1 + x^{12} + x^{17}$, Mask: 0x21)
Bit Encoding	NRZI (Non-Return-to-Zero Inverted)
Preamble Length	50 bytes, nominal (0x7E / alternating synchronization bytes)
Postamble Length	7 bytes

3 Data Link Layer (AX.25 Frame Structure)

FramSat-1 utilizes standard AX.25 Unnumbered Information (UI) frames encapsulated within HDLC framing flags (0x7E) and verified by a 16-bit CRC-CCITT Frame Check Sequence (FCS).

The standard packet header is exactly 16 bytes long. The byte breakdown is specified in Table 2.

Table 2: AX.25 16-Byte Header Breakdown

Byte Range	Length	Field	Content / Encoding
0–5	6 B	Destination Callsign	"CQ " (ASCII left-shifted $\ll 1$)
6	1 B	Destination Control	0x60 ($C = 0, RR = 11, SSID = 0, Ext = 0$)
7–12	6 B	Source Callsign	"LA10RB" (ASCII left-shifted $\ll 1$)
13	1 B	Source Control	0x61 ($C = 0, RR = 11, SSID = 0, Ext = 1$)
14	1 B	Control Byte	0x03 (AX.25 UI-Frame, Unnumbered Information)
15	1 B	Protocol ID (PID)	0xF0 (No Layer 3 Protocol / Custom Telemetry)
16+	N B	Information Field	Raw Telemetry / Mission Payload

3.1 Address Bit-Shifting Rule

In accordance with the AX.25 specification, standard 7-bit ASCII characters for the callsign are left-shifted by one bit:

$$b_{\text{encoded}} = b_{\text{ASCII}} \ll 1 \quad (1)$$

Callsigns with fewer than 6 characters are space-padded with ASCII 0x20 (which encodes to 0x40). The last bit (bit 0) of byte 13 is set to 1 to signify the end of the address field.

4 GNU Radio Companion (GRC) Receiver Pipeline

A complete demodulation chain can be built in GNU Radio Companion utilizing the standard `gr-satellites` and `gr-osmosdr` out-of-tree modules (both included by default in the recommended Radioconda distribution). Figure 1 illustrates the recommended flowgraph utilizing a standard RTL-SDR receiver.

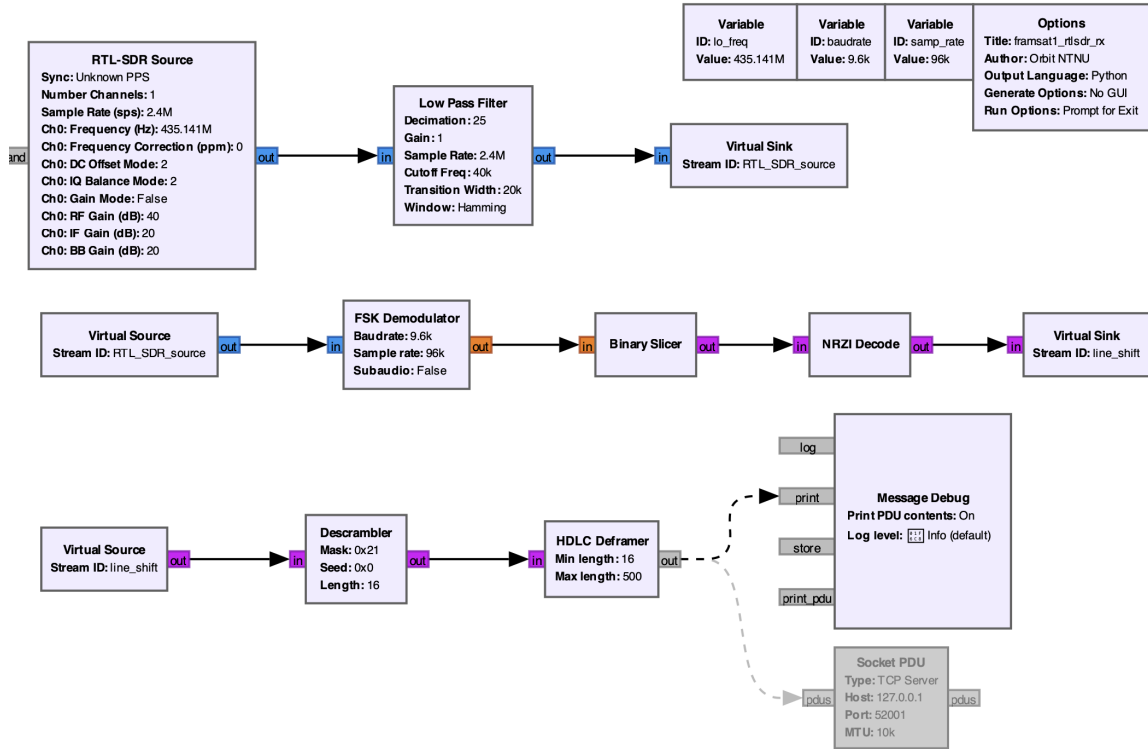


Figure 1: Recommended GNU Radio receiver pipeline for FramSat-1 using an RTL-SDR dongle (sampling at 2.4 MSps and decimated to 96 kSps).

The recommended demodulator architecture consists of:

1. **RTL-SDR Source:** Set center frequency to 435.141 MHz and sample rate to 2.4 MSps (standard stable rate for RTL2832U devices).
2. **Low Pass Filter (Decimator):** Decimates the stream by a factor of 25 (reducing the rate from 2.4 MSps to exactly 96 kSps), with a cutoff frequency of 40 kHz and transition width of 20 kHz to suppress out-of-band noise.
3. **FSK Demodulator:** Operates at the decimated sample rate of 96 kSps with baud rate set to 9600 bps.
4. **Binary Slicer:** Converts demodulated audio-frequency excursions into binary symbols (0 and 1).
5. **NRZI Decode:** Decodes bit transitions according to standard AX.25 NRZI conventions.
6. **Descrambler:** Mask: 0x21, Seed: 0x0, Length: 16 (Standard G3RUH polynomial).
7. **HDLC Deframer:** Minimum frame length: 16 bytes, Maximum: 500 bytes. Validates the 16-bit CRC-CCITT (FCS) and discards corrupt frames.
8. **Message Debug / Socket PDU:** Outputs valid received frames to the console via Message Debug, or optionally streams them to external software via Socket PDU.

5 Reference Frame Decoder

To assist the community, an open-source Python reference decoder is maintained in the project repository:

<https://github.com/OrbitNTNU/framsat1-telemetry-decoder>

The script (`framsat1_decoder.py`) provides two operational modes:

- **Live Network Mode** (`--listen`): Connects directly to GNU Radio via TCP (port 52001) to ingest, deframe, and display satellite telemetry in real time during an active pass.
- **Offline / Inspection Mode**: Accepts a raw hexadecimal frame string as a command-line argument to parse historical or crowdsourced frames recorded by other stations.

The decoder automatically extracts the AX.25 address fields (reversing the standard 1-bit shift), verifies the frame type, and unpacks the FS1.0 housekeeping telemetry (including battery voltages, uptime, boot counts, and the 9-sample solar/earth sensor payload arrays).

6 Housekeeping Telemetry Format

FramSat-1 transmits periodic health and status telemetry within the payload field of the AX.25 frame (starting from byte index 16). All multi-byte numeric fields are serialized in standard Little-Endian format (least significant byte first). The layout of the periodic beacon payload is specified in Table 3.

Table 3: FramSat-1 Housekeeping Telemetry Format

Offset	Size	Field	Type	Description / Scaling
0–4	5 B	<code>signature</code>	ASCII String	Static sync signature: "FS1.0"
5	1 B	<code>beacon_id</code>	<code>uint8_t</code>	Packet sequence counter
6	1 B	<code>operating_mode</code>	<code>uint8_t</code>	Mode: 1 = Default, 2 = LEOP
7	1 B	<code>satellite_rssi</code>	<code>uint8_t</code>	Ground uplink RSSI recorded by satellite
8–9	2 B	<code>telecommand_count</code>	<code>uint16_t</code>	Total telecommands accepted by satellite
10	1 B	<code>eps_flags</code>	<code>uint8_t</code>	EPS status and subsystem power flags
11–12	2 B	<code>reboot_count</code>	<code>uint16_t</code>	Total OBC / EPS reboot counter
13–14	2 B	<code>battery_voltage</code>	<code>uint16_t</code>	Battery voltage ($V = \text{val}/1000.0\text{ V}$)
15–18	4 B	<code>uptime_sec</code>	<code>uint32_t</code>	Satellite uptime in seconds
19–198	180 B	<code>sensor_data</code>	Array[9]	9x Attitude sensor samples (Sun & Earth sensors)

6.1 Identification Signature

Ground stations can reliably identify FramSat-1 downlinks by verifying that the first five bytes of the AX.25 payload contain the ASCII signature "FS1.0".

7 Submitting Reception Reports

Orbit NTNU greatly appreciates reports and raw telemetry recordings from the radio community. If you receive packets from FramSat-1, please submit:

- Your callsign and ground station location (grid square or coordinates).
- UTC timestamp of reception.
- Raw hexadecimal packet string or IQ baseband recording (`.wav` / `.sigmf`).
- Estimated SNR or waterfall screenshot.

Reports can be submitted via email to contact@orbitntnu.com or uploaded to the SatNOGS network database under satellite **FramSat-1**.