NE-USB USB Communication
Sample Program
(Windows Java)

CONFIDENTIAL

PATLITE Corporation 2022
All rights reserved

Contents

NE-USB USB Communication Sample Program (Windows Java) 1
1. **Overview** 3
1.1. System Overview 3
2. Development Environment 3
2.1. Windows Environment 3
2.1.1. Environment Construction 4
3. Sample Source Overview 5
3.1. Command Operation 5
3.1.1. Command List 5
3.1.2. LED Control 6
3.1.3. Control Alarm Pattern 7
3.1.4. Control Alarm Volume 7
3.1.5. Control Alarm Pattern and Volume 8
3.1.6. Connection Display Settings 8
3.1.7. Reset 8

CONFIDENTIAL

PATLITE Corporation 2022
All rights reserved

1. Overview

This is an outline of sample programming to control NE-USB via USB communication.

The programs are intended to control the unit using Windows Java without the use of DLLs provided by PATLITE.

1.1. System Overview

The system configuration diagram of this program is as follows.

This program controls one NE-USB by USB communication.

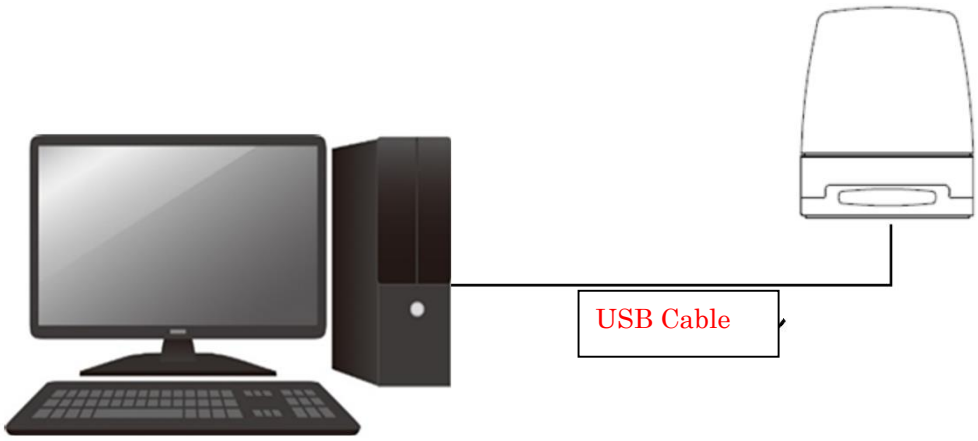

2. Development Environment

The development environment of the sample program is shown below.

2.1. Windows Environment

Development Environment		Remarks
Development OS	Windows 10	
Development Language	Java	11.0 or later
Package	usb4java	1.3.0 or later
Library	libusb,	1.0.25 or later

CONFIDENTIAL

PATLITE Corporation 2022
All rights reserved

2.1.1. Environment Construction

・Installation of libusb

Download libusb binaries from GitHub.

*As of 2022/03/30, the current version is v1.0.25

https://github.com/libusb/libusb/releases

Unzip VS2019¥MS64¥dll¥libusb-1.0.dll in the compressed file and place it in the C:¥Windows¥System32.

* Administrator privileges are required.

・Installation of usb4java

Download the package.

https://github.com/usb4java/usb4java/releases

Place commons-lang3-3.8.1.jar, libusb4java-1.3.0-win32-x86-64.jar, and usb4java-1.3.0.jar in the compressed file in the same folder as Main.java.

CONFIDENTIAL

PATLITE Corporation 2022
All rights reserved

3. Sample Source Overview

3.1. Command Operation

At the Command Prompt, specify the command line arguments to execute commands for each operation.

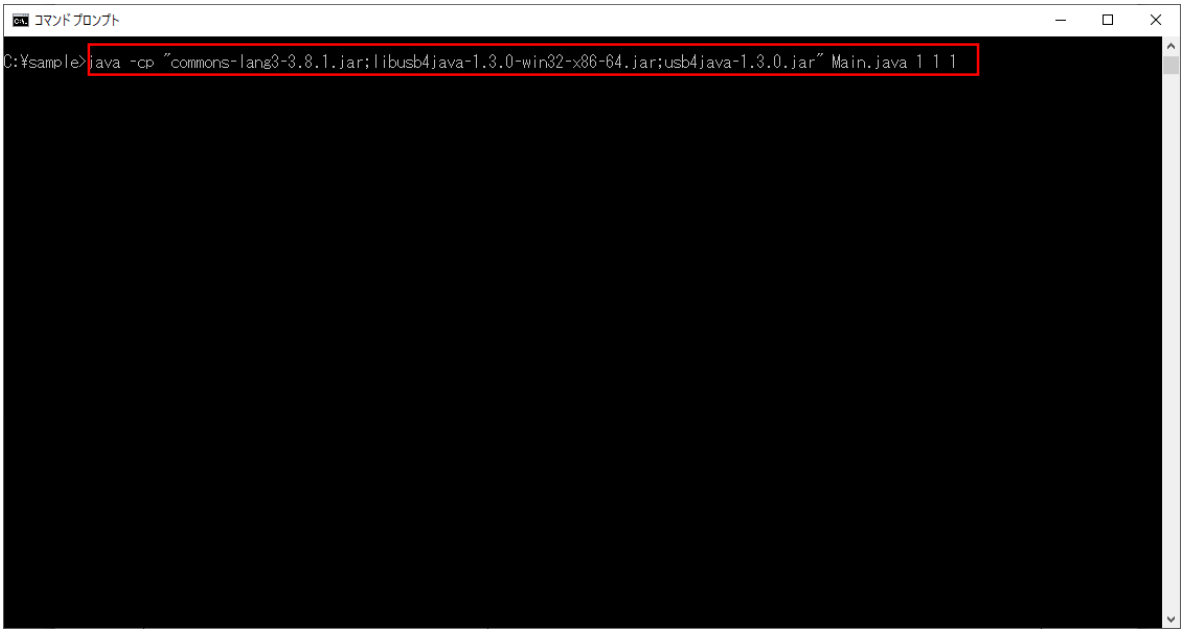

3.1.1. Command List

Command Name	Description
LED Control	Set LED color and LED pattern to display and activate it.
Control Alarm Pattern	Set the alarm pattern and the number of cycles.
Control Alarm Volume	Set alarm volume and activate it.
Control Alarm Pattern and Volume	Set alarm pattern, number of times, and volume and activate it.
Connection Display Settings	Change the display settings when connecting.
Reset	Turn off all LED units and stop the alarm.

CONFIDENTIAL

PATLITE Corporation 2022
All rights reserved

3.1.2. LED Control

Execute the command with the following command line arguments.

No.	Command Line Arguments	Value
1	Command Identifier	1
2	LED Color	Off: 0 Red: 1 Green: 2 Amber: 3 Blue: 4 Purple: 5 Sky Blue: 6 White: 7 No change: 15
3	LED Pattern	Off: 0 Lit: 1 LED pattern 1: 2 LED pattern 2: 3 LED pattern 3: 4 LED pattern 4: 5 LED pattern 5: 6 LED pattern 6: 7 No change: 15

Example: java -cp "commons-lang3-3.8.1.jar; libusb4java-1.3.0-win32-x86-64.jar; usb4java-1.3.0.jar" Main.java 1 1 1

CONFIDENTIAL

PATLITE Corporation 2022
All rights reserved

3.1.3. Control Alarm Pattern

Execute the command with the following command line arguments.

No.	Command Line Arguments	Value
1	Command Identifier	2
2	Alarm Pattern	Stop: 0 Sounding (Continuous): 1 Sweep sound: 2 Intermittent sound: 3 Weak caution sound: 4 Strong caution sound: 5 Twinkle, Twinkle Little Star: 6 London Bridge: 7 No change: 15
3	Alarm Continuous Operation and Number of Cycles	Continuous operation: 0 Number of cycles: 1 to 1 4 No change: 15

Example: java -cp "commons-lang3-3.8.1.jar; libusb4java-1.3.0-win32-x86-64.jar; usb4java-1.3.0.jar" Main.java 2 1 1

3.1.4. Control Alarm Volume

Execute the command with the following command line arguments.

No.	Command Line Arguments	Value
1	Command Identifier	3
2	Alarm Volume	Mute: 0 Volume: 1-9 Maximum volume: 10 No change: 15

Example: java -cp "commons-lang3-3.8.1.jar; libusb4java-1.3.0-win32-x86-64.jar; usb4java-1.3.0.jar" Main.java 3 1

CONFIDENTIAL

PATLITE Corporation 2022
All rights reserved

3.1.5. Control Alarm Pattern and Volume

Execute the command with the following command line arguments.

No.	Command Line Arguments	Value
1	Command Identifier	4
2	Alarm Pattern	Stop: 0 Sounding (Continuous): 1 Sweep sound: 2 Intermittent sound: 3 Weak caution sound: 4 Strong caution sound: 5 Twinkle, Twinkle Little Star: 6 London Bridge: 7 No change: 15
3	Alarm Continuous Operation and Number of Cycles	Continuous operation: 0 Number of cycles: 1 to 1 4 No change: 15
4	Alarm Volume	Mute: 0 Volume: 1-9 Maximum volume: 10 No change: 15

Example: java -cp "commons-lang3-3.8.1.jar; libusb4java-1.3.0-win32-x86-64.jar; usb4java-1.3.0.jar" Main.java 4 1 3 5

3.1.6. Connection Display Settings

Execute the command with the following command line arguments.

No.	Command Line Arguments	Value
1	Command Identifier	5
2	Connection Display Settings	OFF: 0 ON: 1

Example: java -cp "commons-lang3-3.8.1.jar; libusb4java-1.3.0-win32-x86-64.jar; usb4java-1.3.0.jar" Main.java 5 0

3.1.7. Reset

Execute the command with the following command line arguments.

No.	Command Line Arguments	Value
1	Command Identifier	6

Example: java -cp "commons-lang3-3.8.1.jar; libusb4java-1.3.0-win32-x86-64.jar; usb4java-1.3.0.jar" Main.java 6

CONFIDENTIAL

PATLITE Corporation 2022
All rights reserved