



Instruction for installation

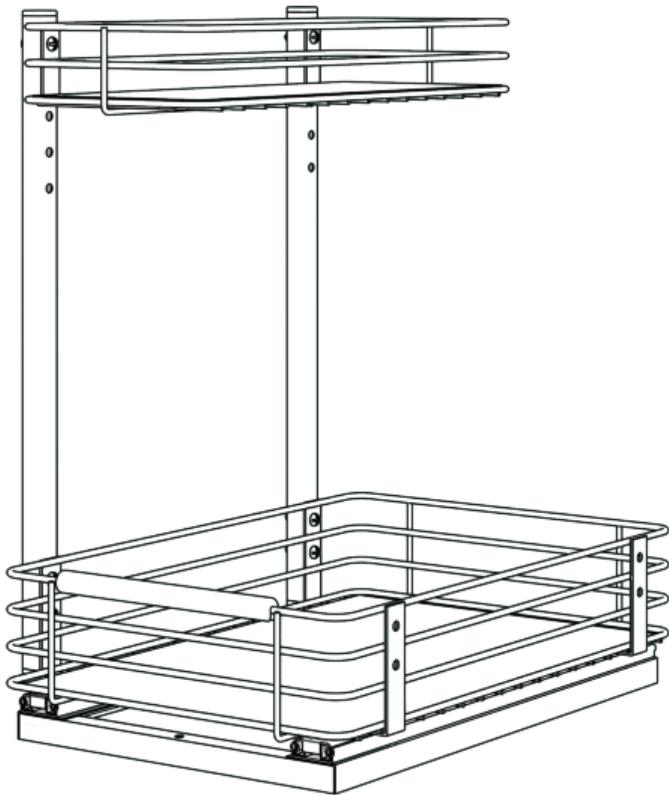


WP560

Installation Steps


- ❶ Tighten the two support rods with screws (use a hex key to secure the nuts on the left side and a screwdriver to tighten the screws on the right side). Note: The direction with more holes on the support rods should face upward.

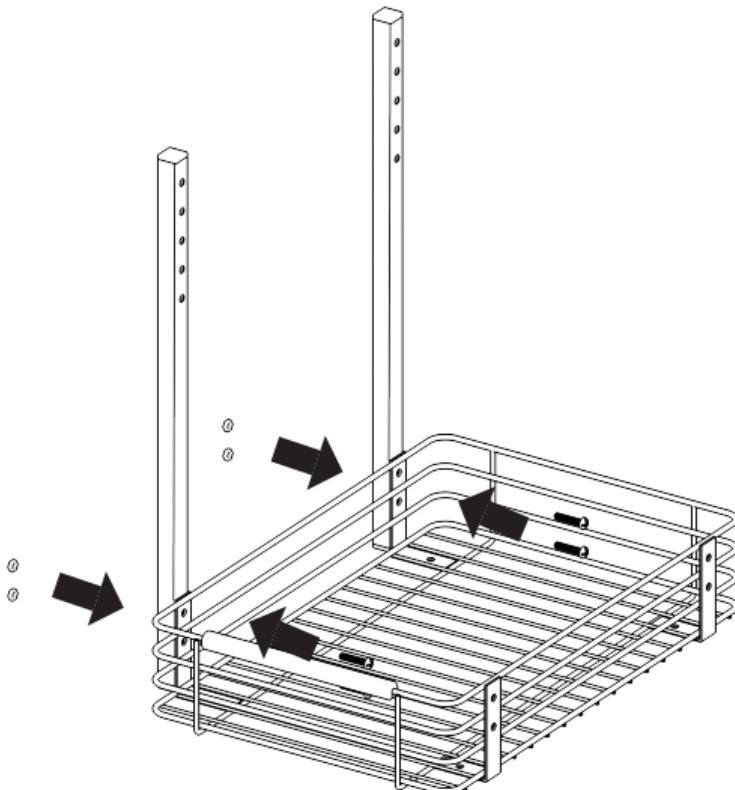


② Secure the upper small basket using the same method (you can adjust the height of the basket installation according to the height of the scene).

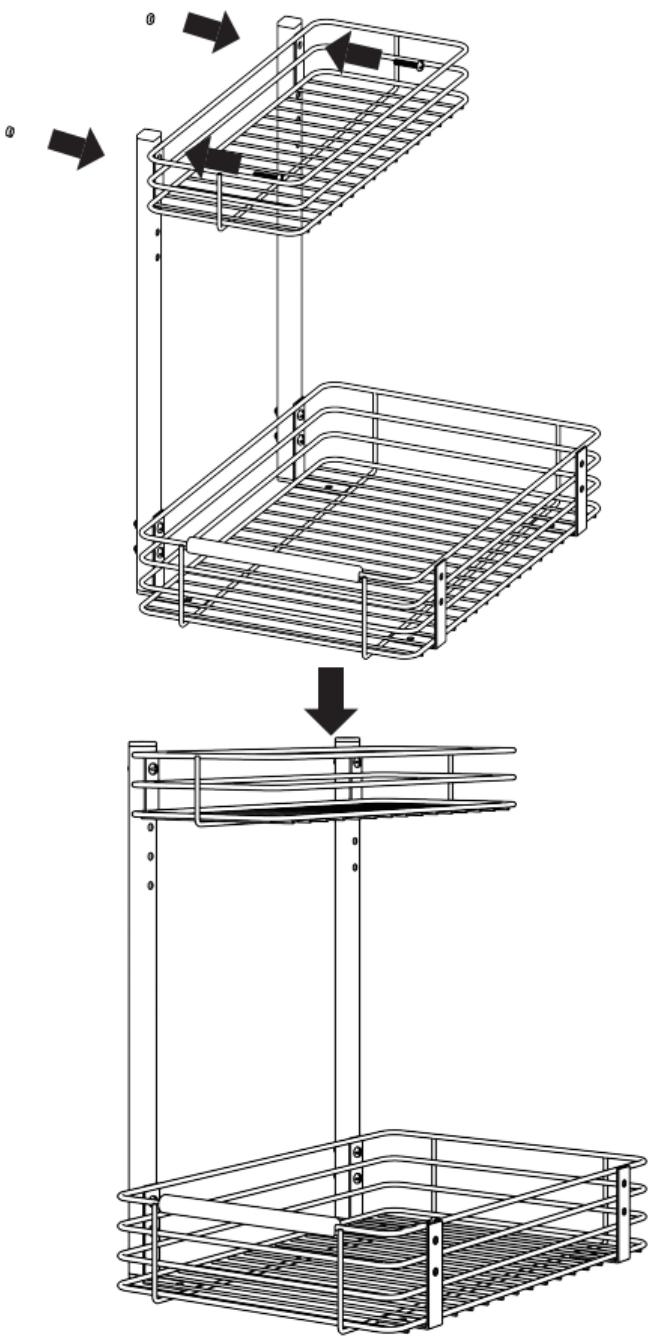


③ Place the base and basket in the appropriate position inside the cabinet and mark the spots where holes need to be drilled.

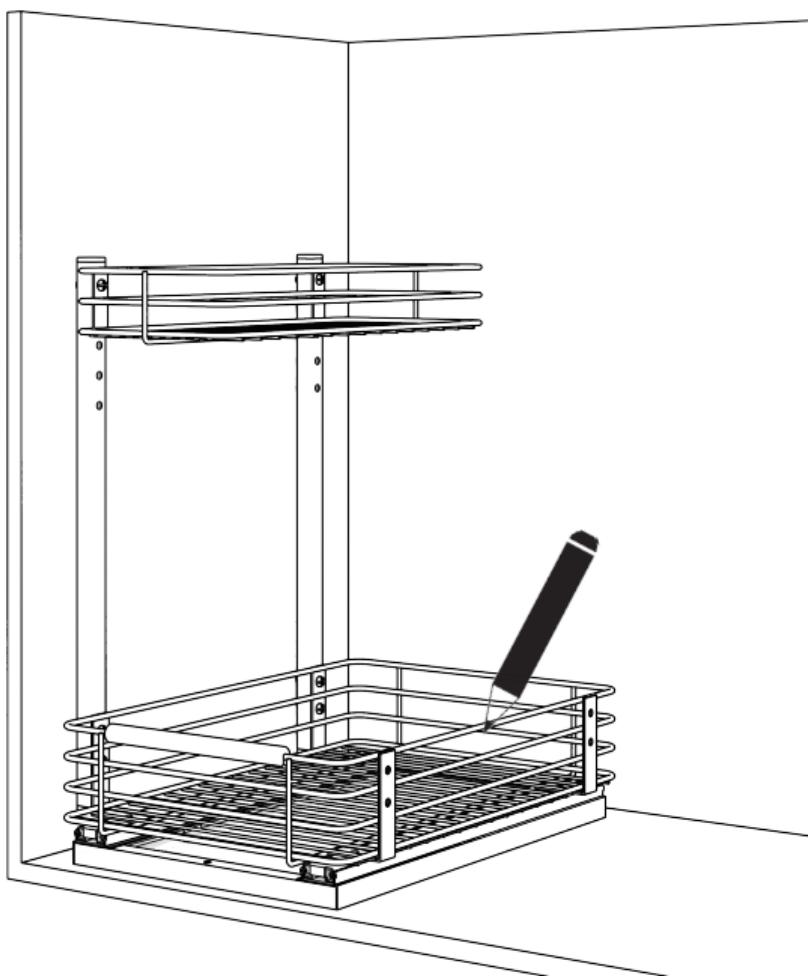


④ Place the base and basket in the appropriate position inside the cabinet and mark the spots where holes need to be drilled. After marking, remove the upper bracket and secure the base inside the cabinet with screws. (Note: The sliding rails should face outward.)

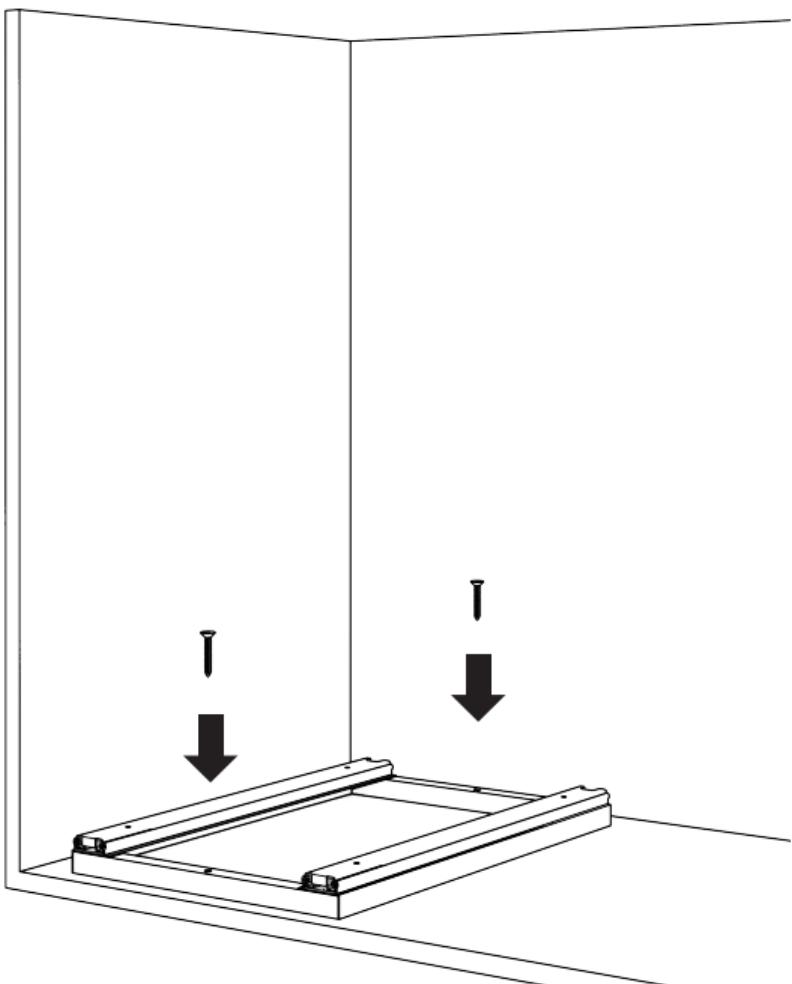

④ Secure the basket to the base.

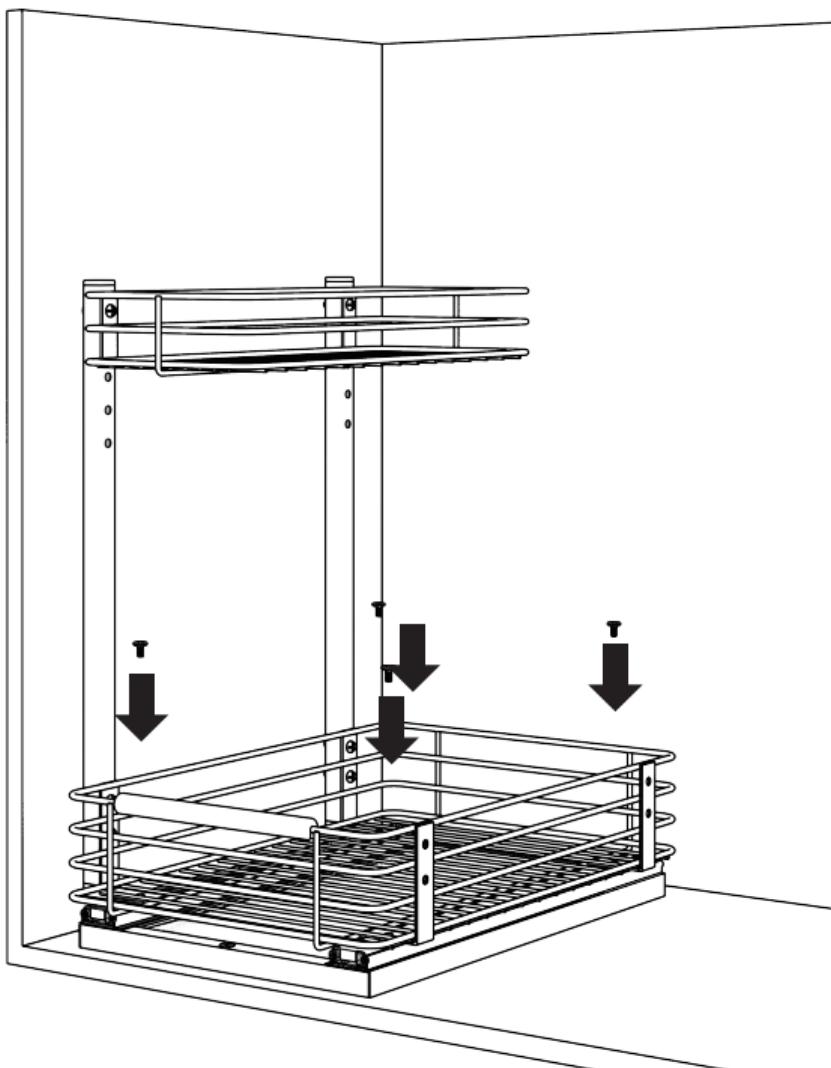

④ Insert the corresponding sheet.

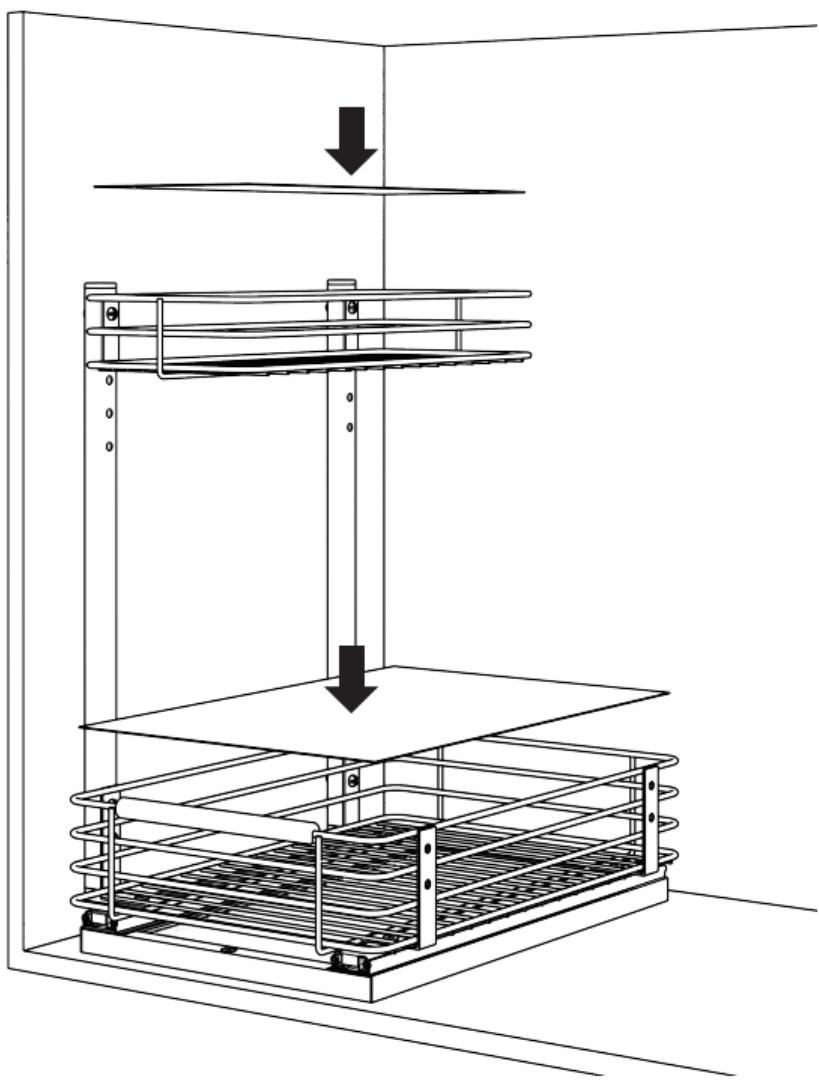

Final effect

