


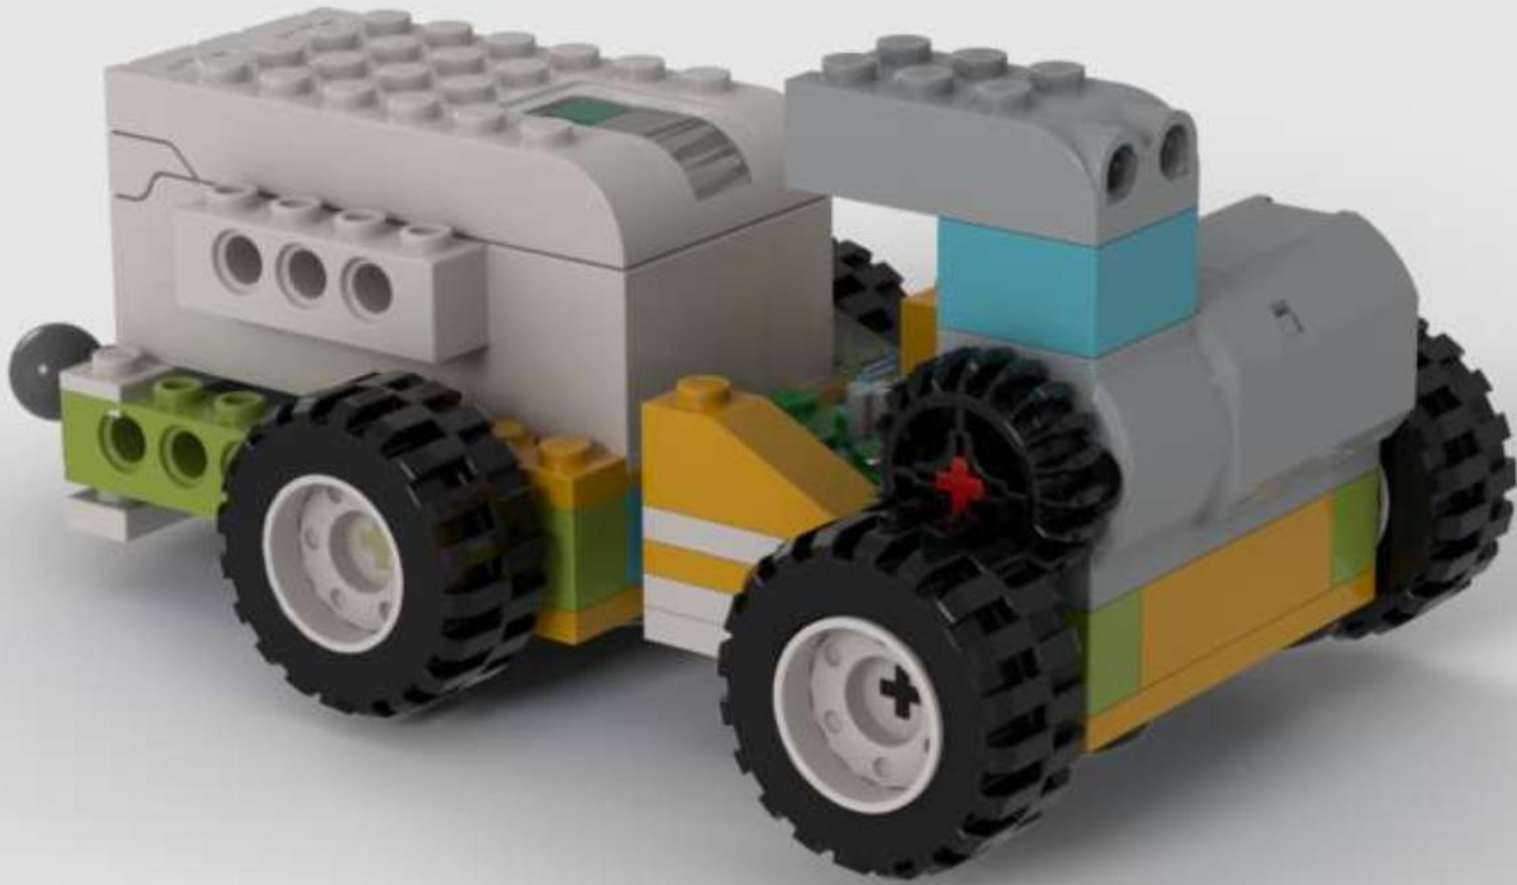


SMART CAR



1x
32270
Black



4x
92402
Black

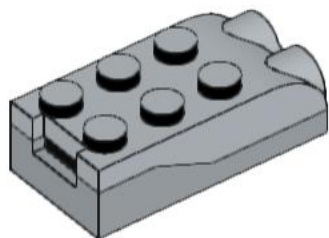

1x
20844
Light Bluish Gray



4x
55982
White




4x
2654
Black




1x
15535
Dark Bluish Gray



2x
18651
Black

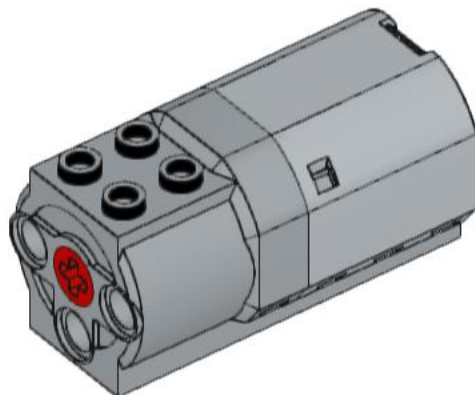


1x
21980
Light Bluish Gray

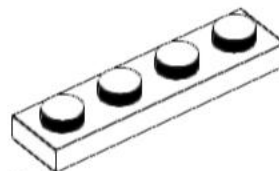


2x
3710
White




1x
32269
Black

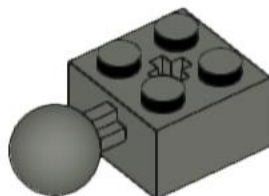


2x
57909b
Dark Bluish Gray

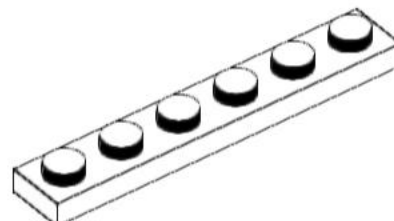


2x
3666
White



4x
3023
White

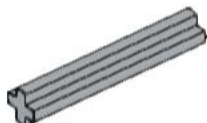


1x
4519
Light Bluish Gray

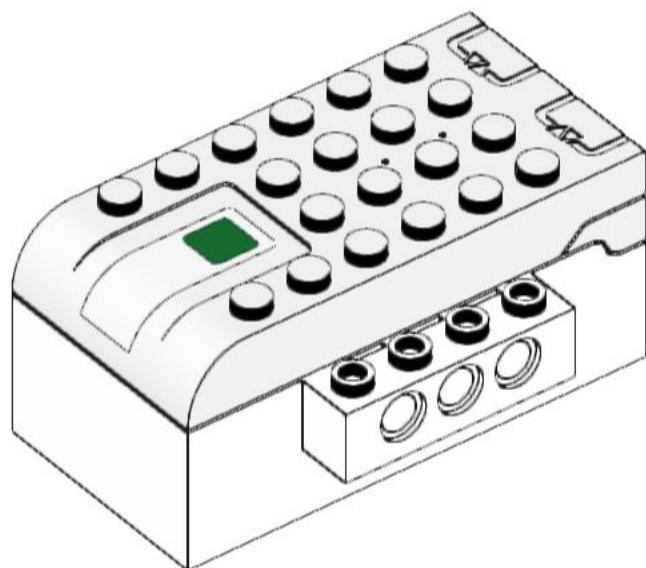


1x
19071c01
White




1x
32062
Red




2x
3749
Tan

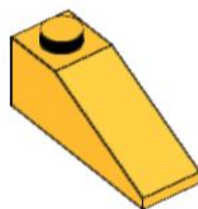


2x
4286
Bright Light Orange

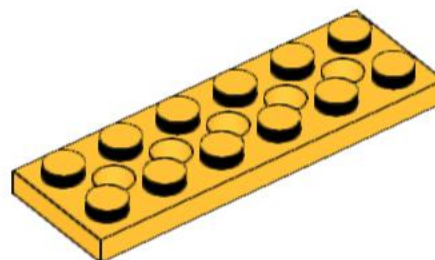


2x
32001
Bright Light Orange

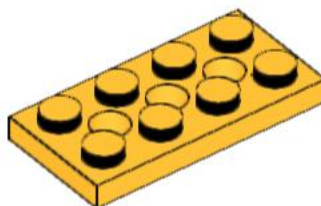


4x
3709b
Bright Light Orange

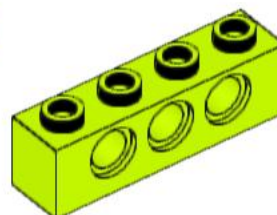

2x
3701
Lime

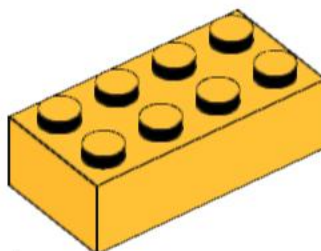


1x
3001
Bright Light Orange

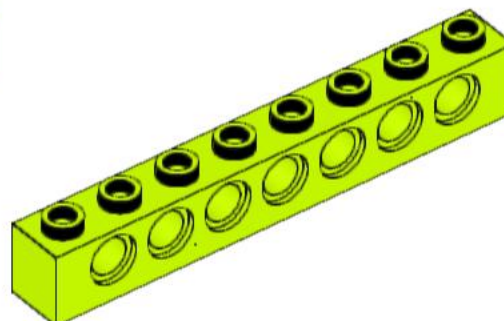


2x
3702
Lime




1x
4032
Bright Green

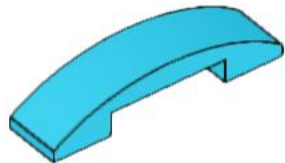


2x
93273
Medium Azure

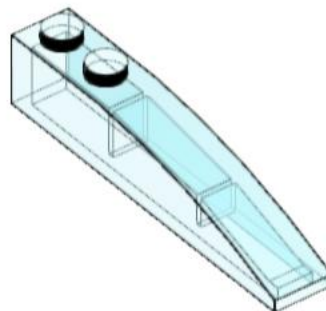


1x
42022
Trans-Light Blue

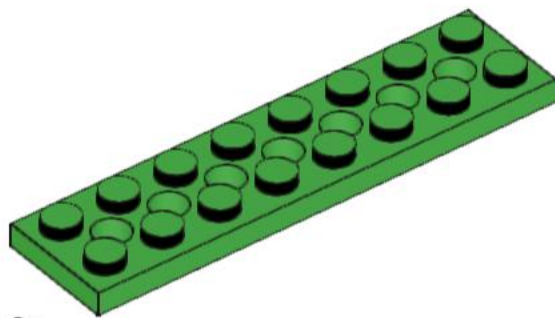


2x
3738
Bright Green

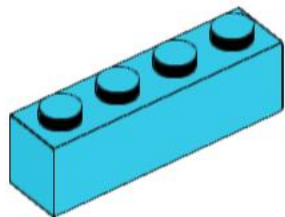


2x
3010
Medium Azure

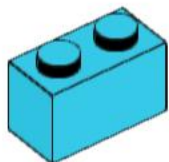

1x
3004
Medium Azure


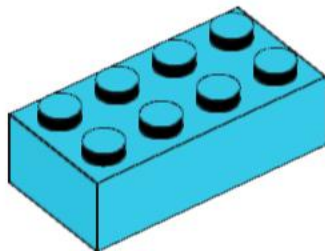


1x
3001
Medium Azure


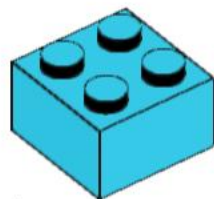


1x
3003
Medium Azure



1

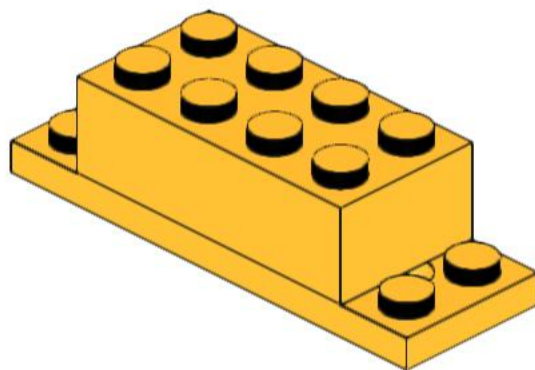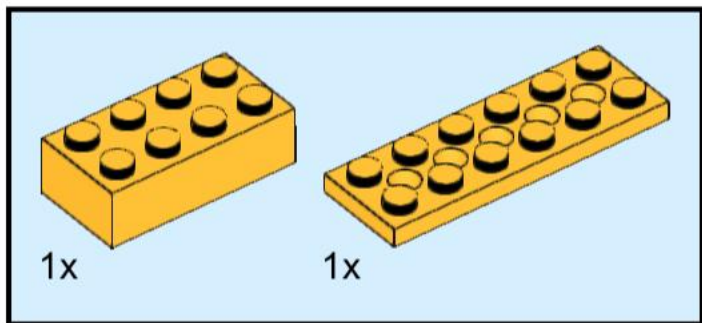



2

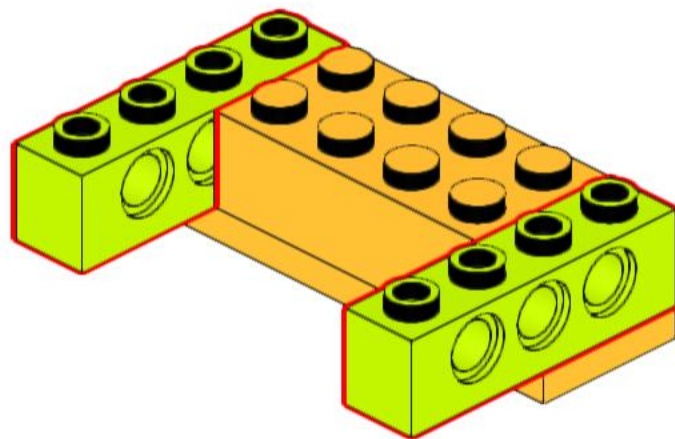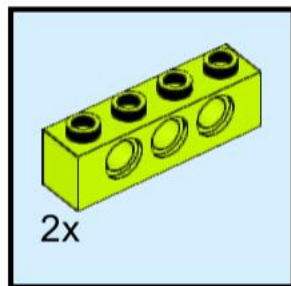


3

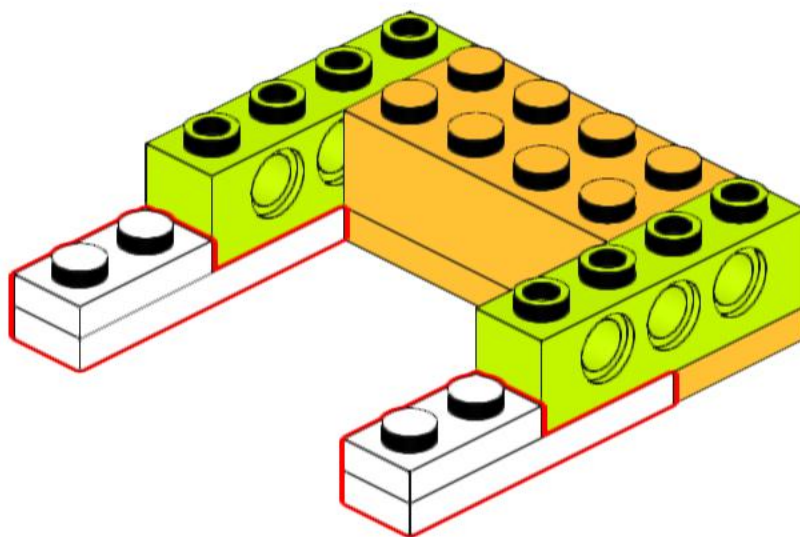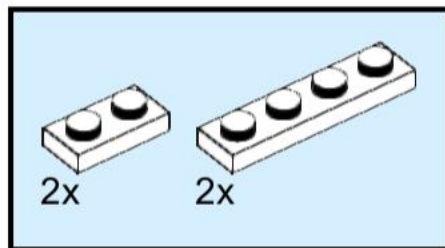



4

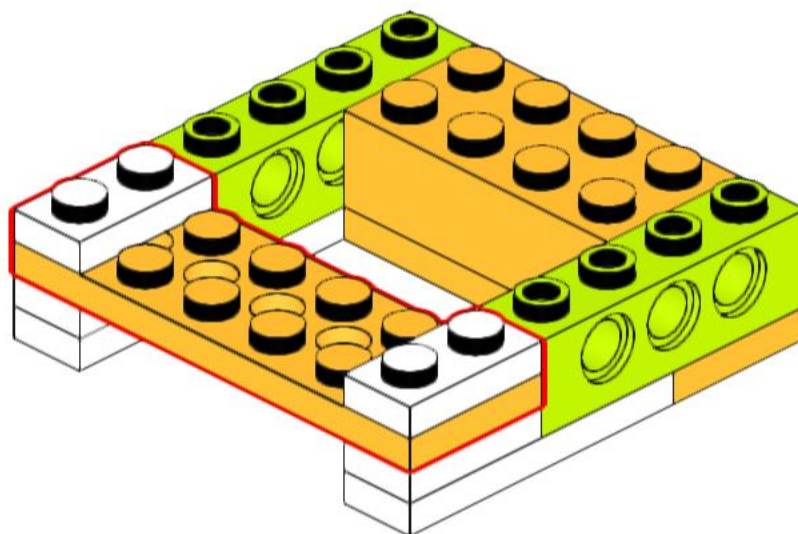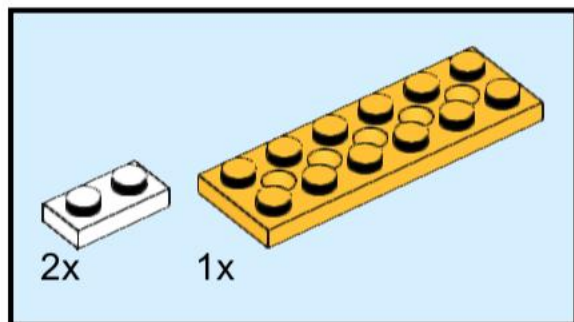


5

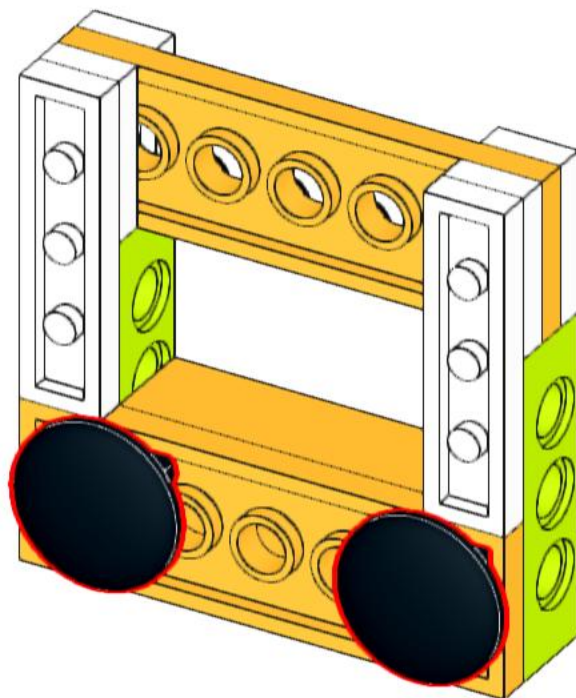



6

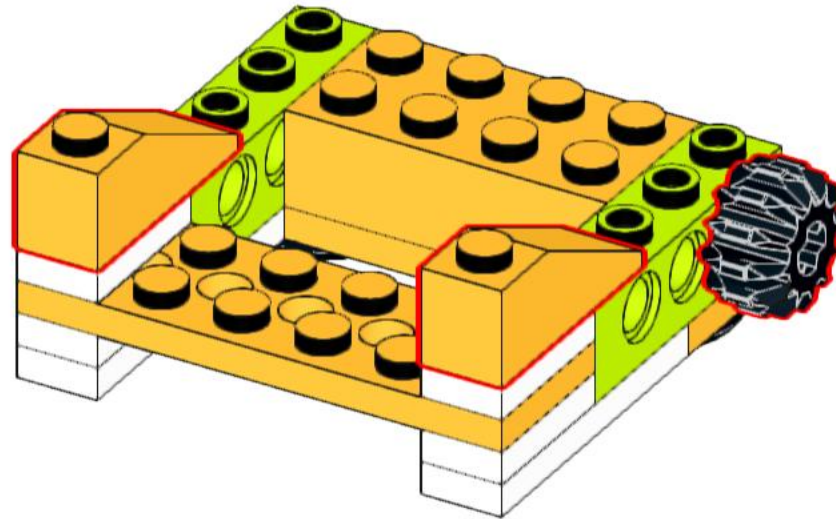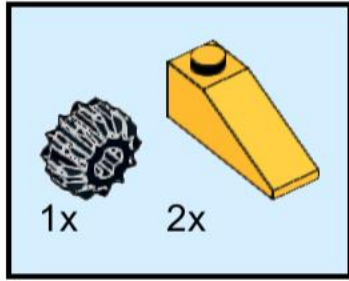



7

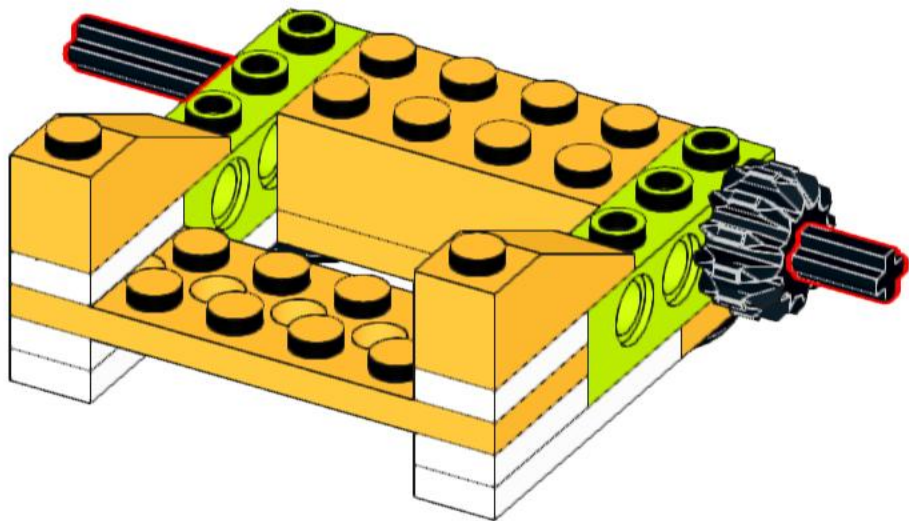



8

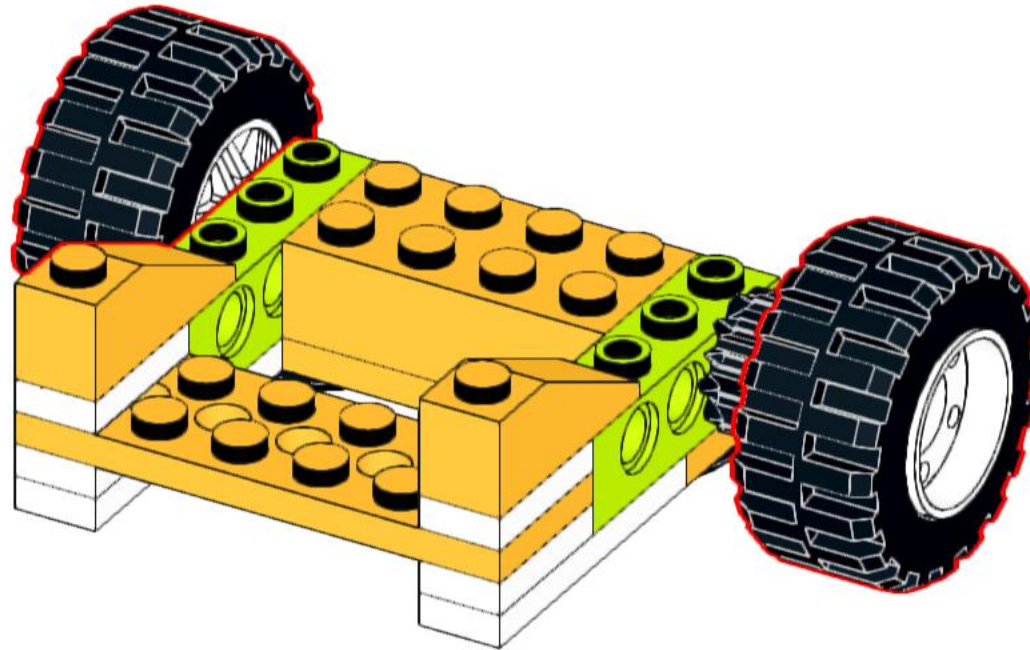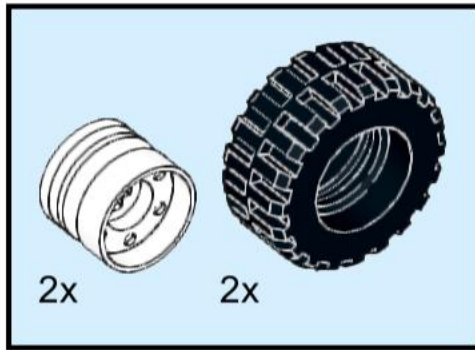




9

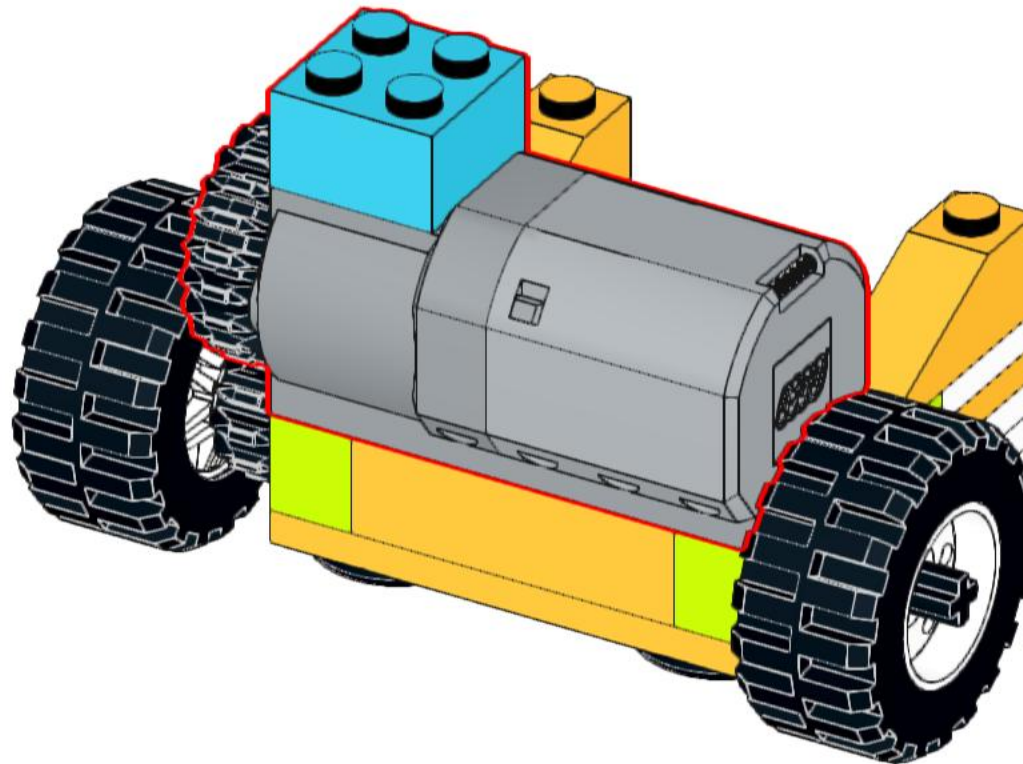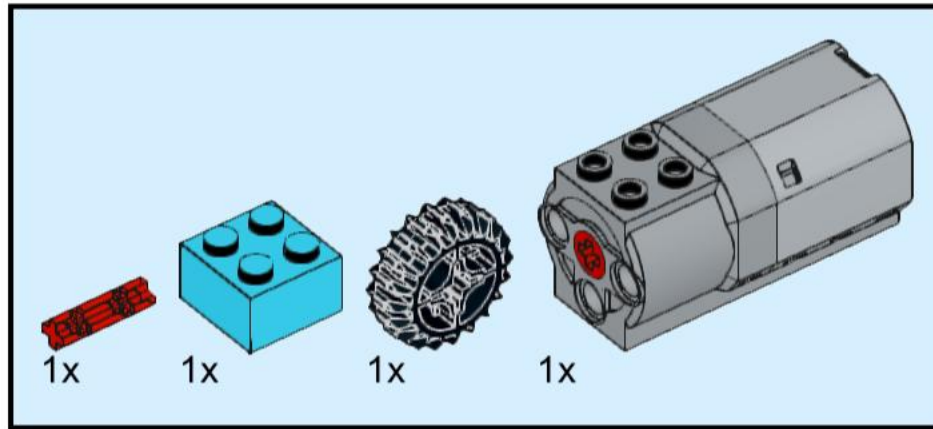



10

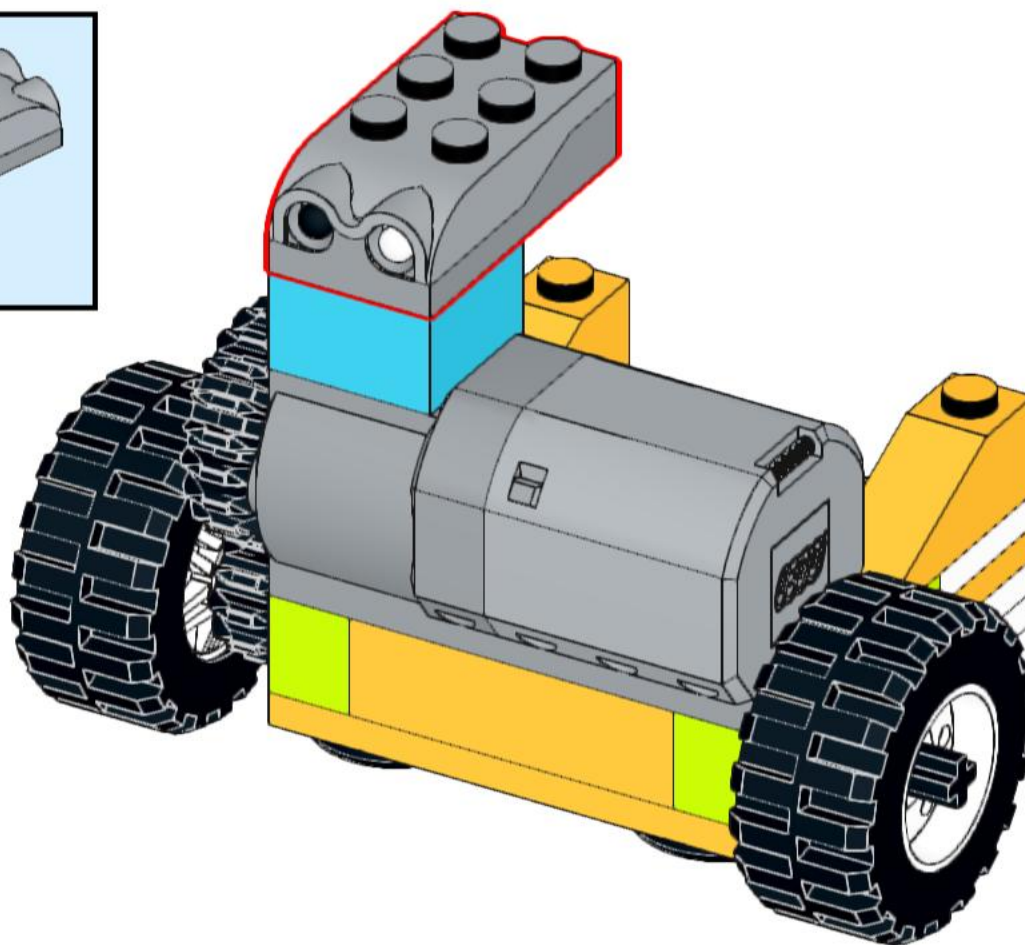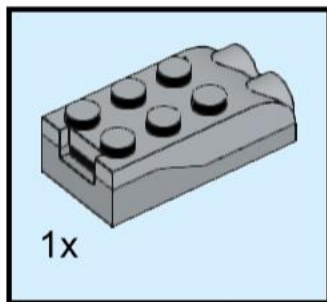



11

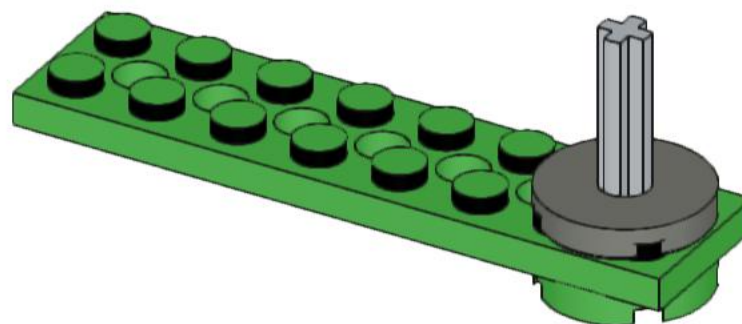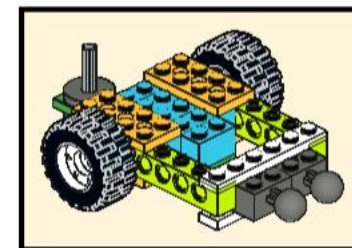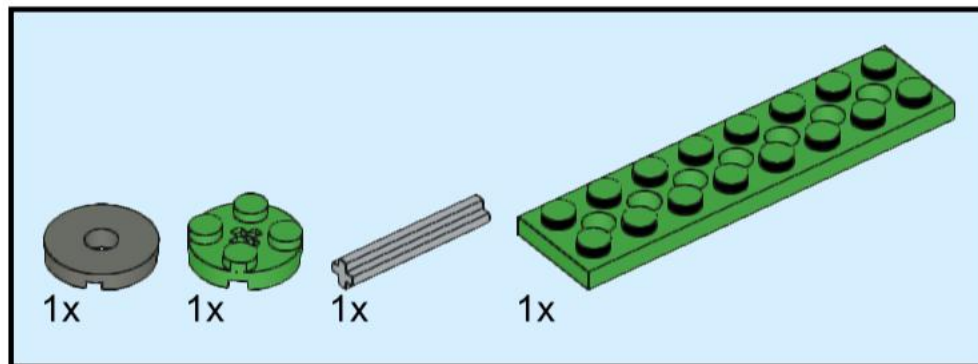



12

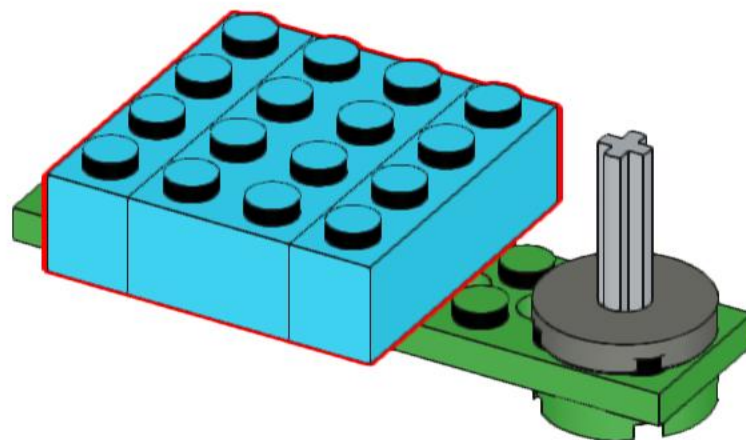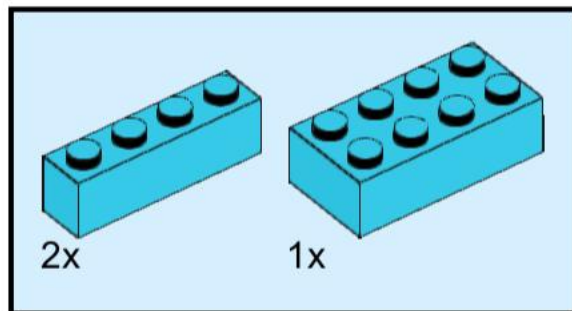



13

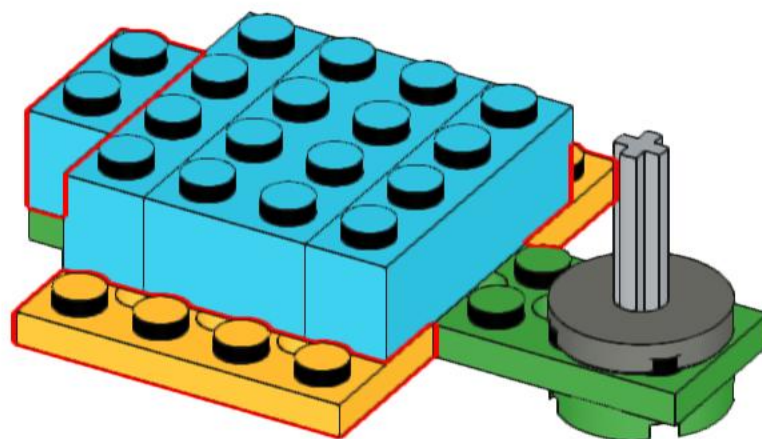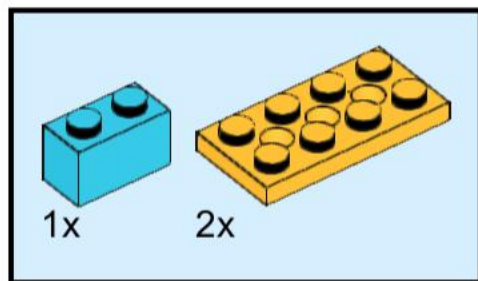



14

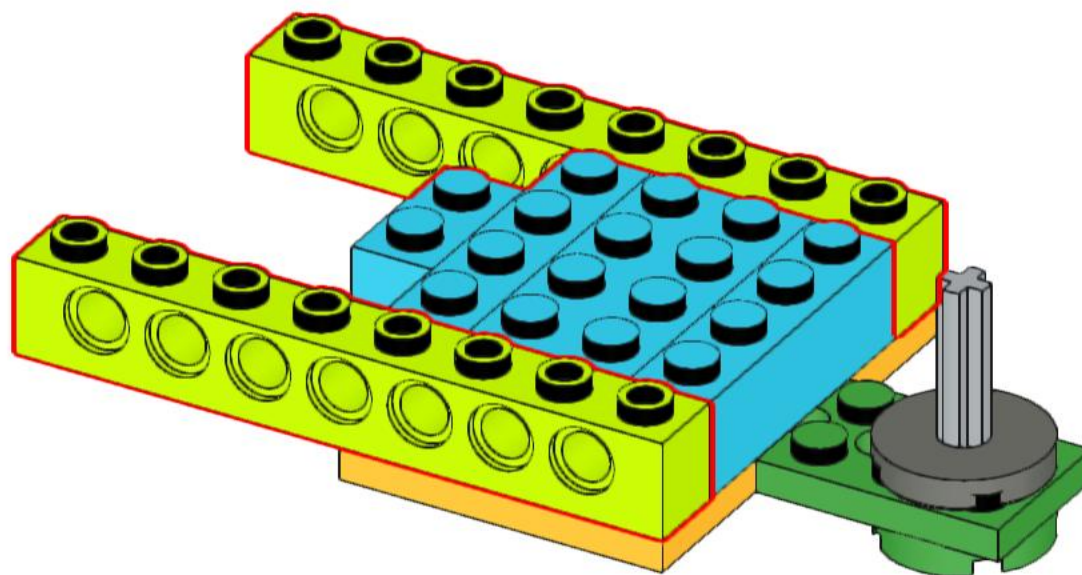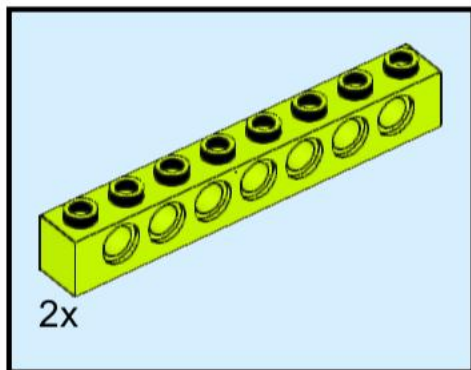


15

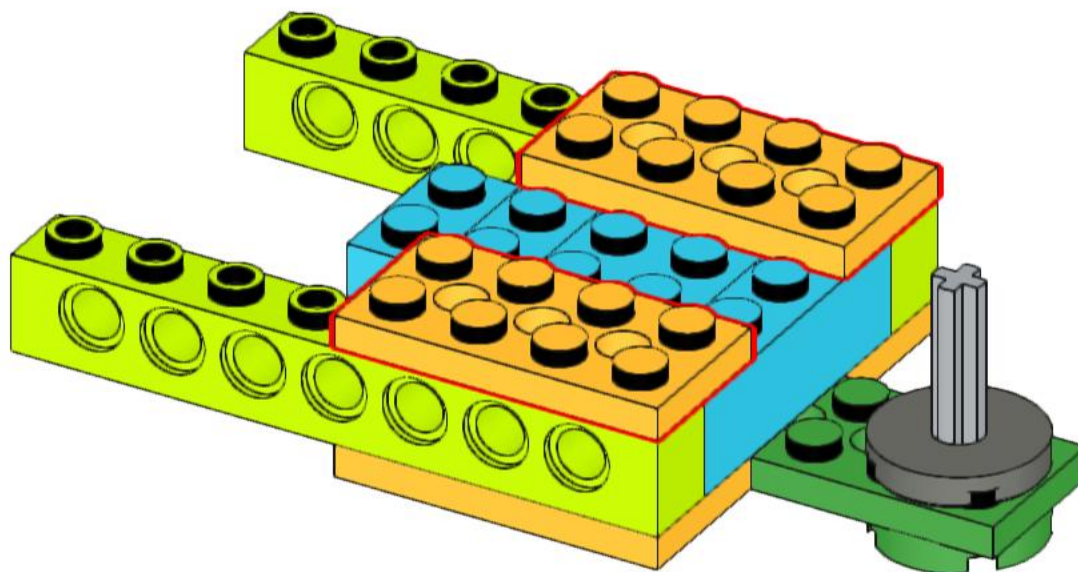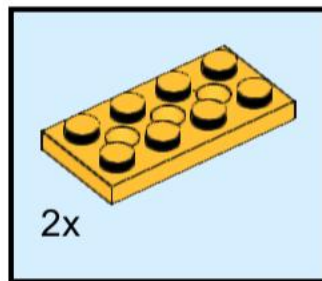



16

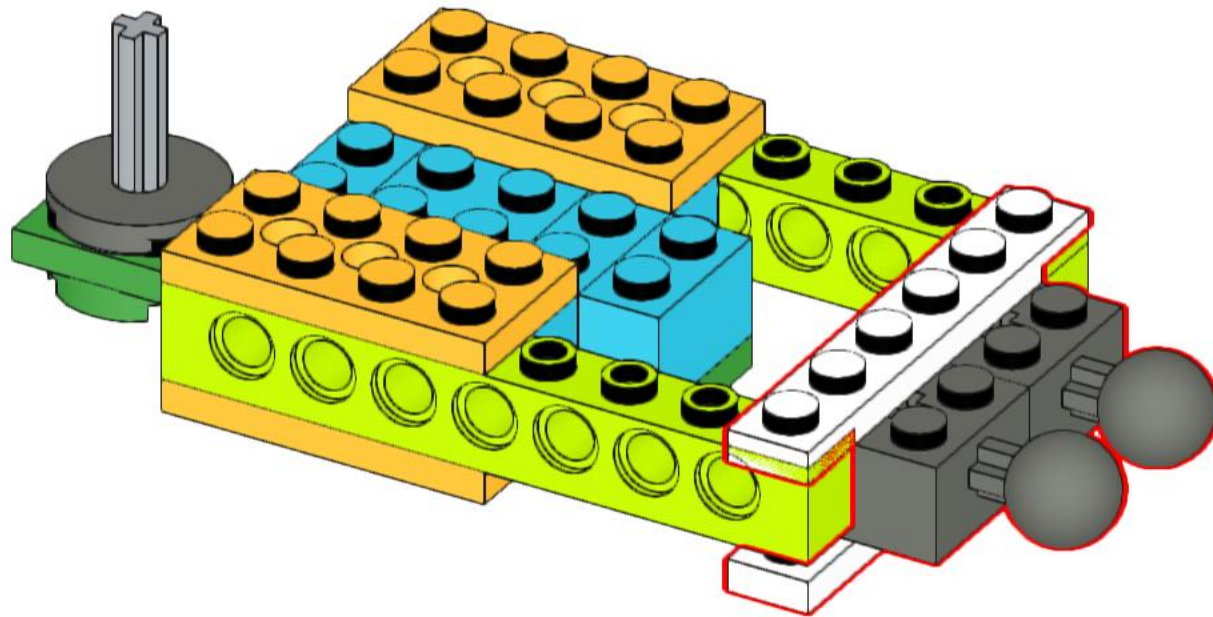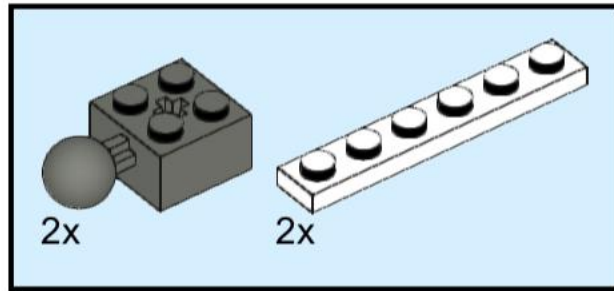



17

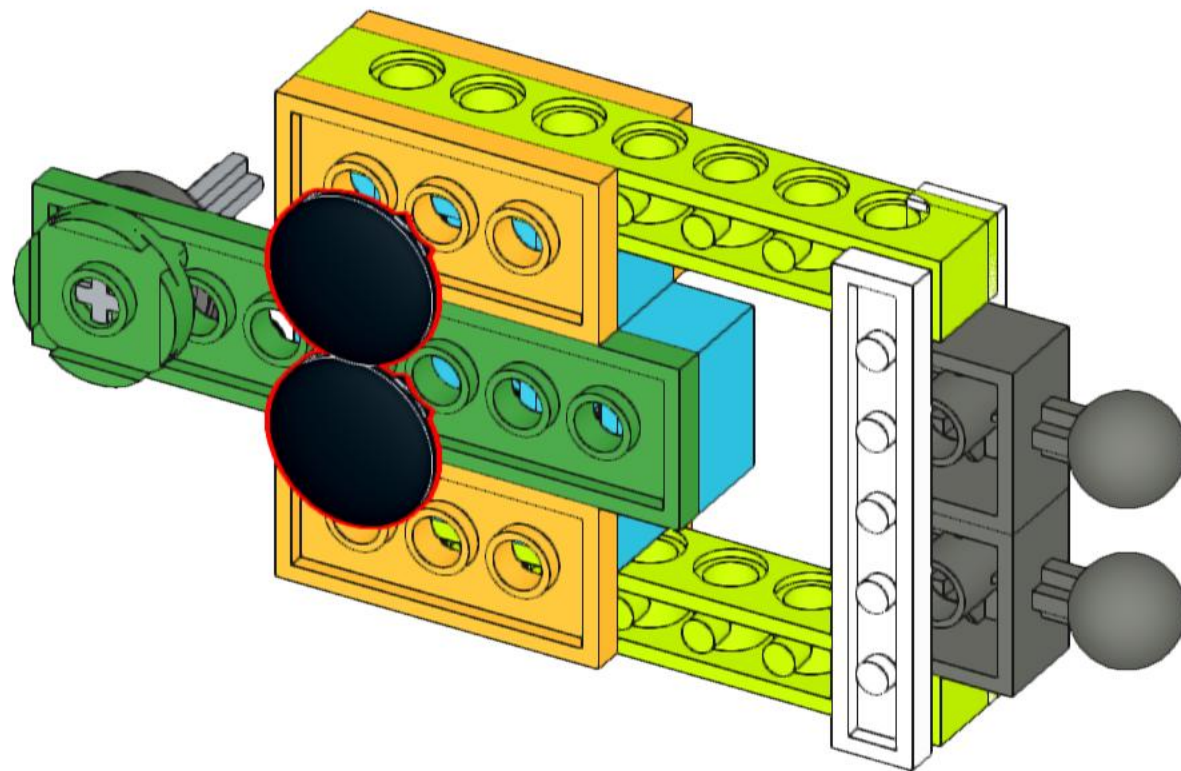


18

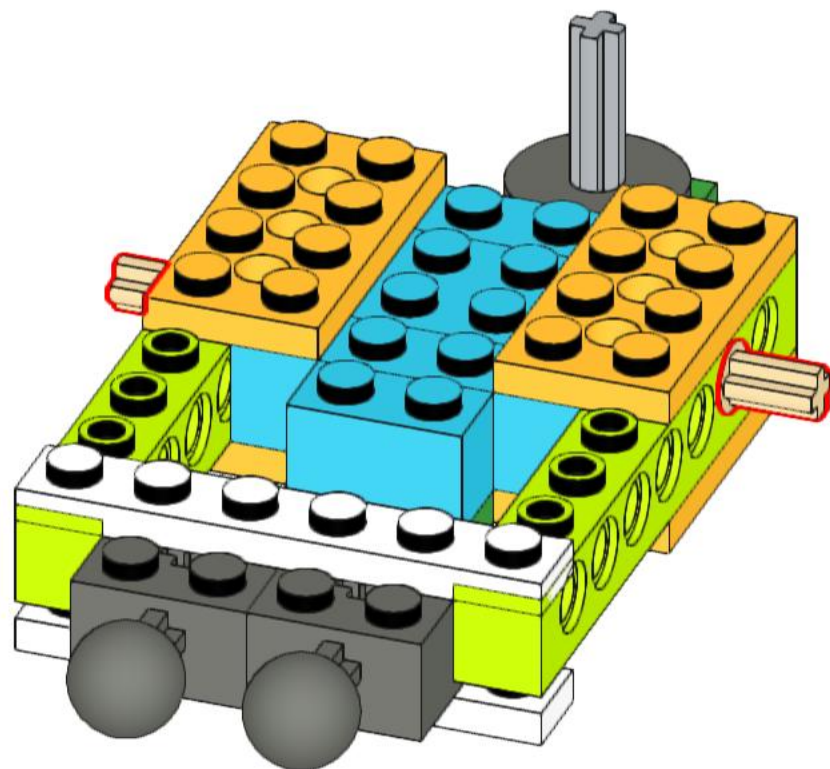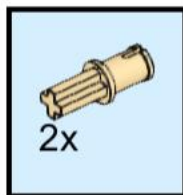



19

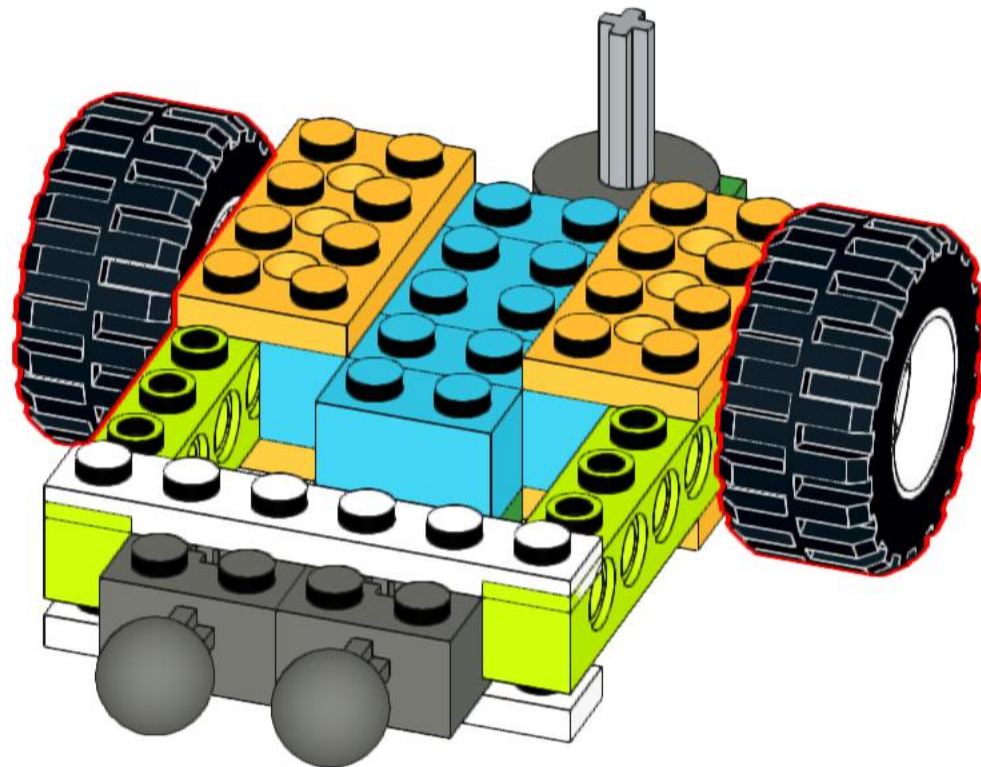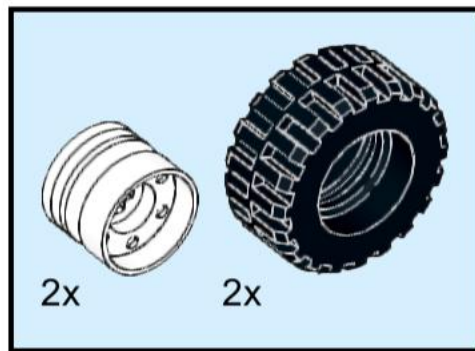


20

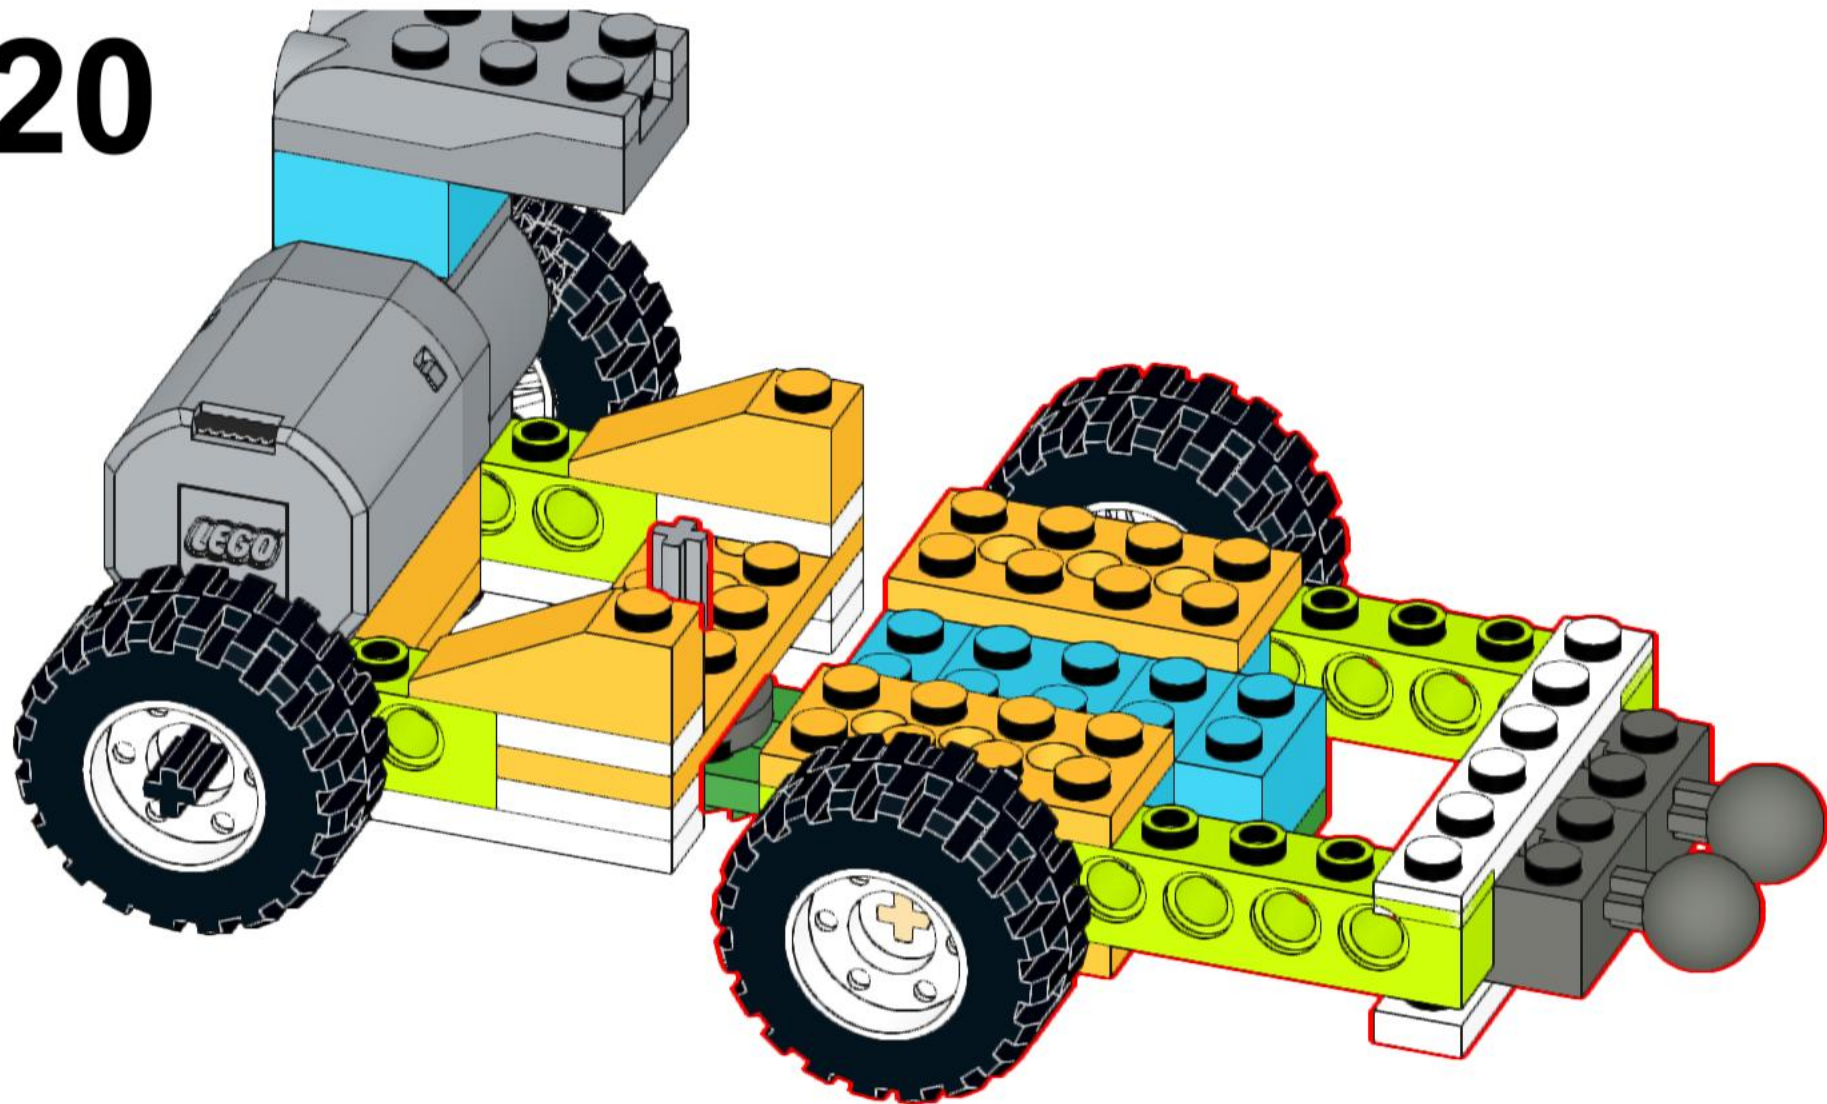


21

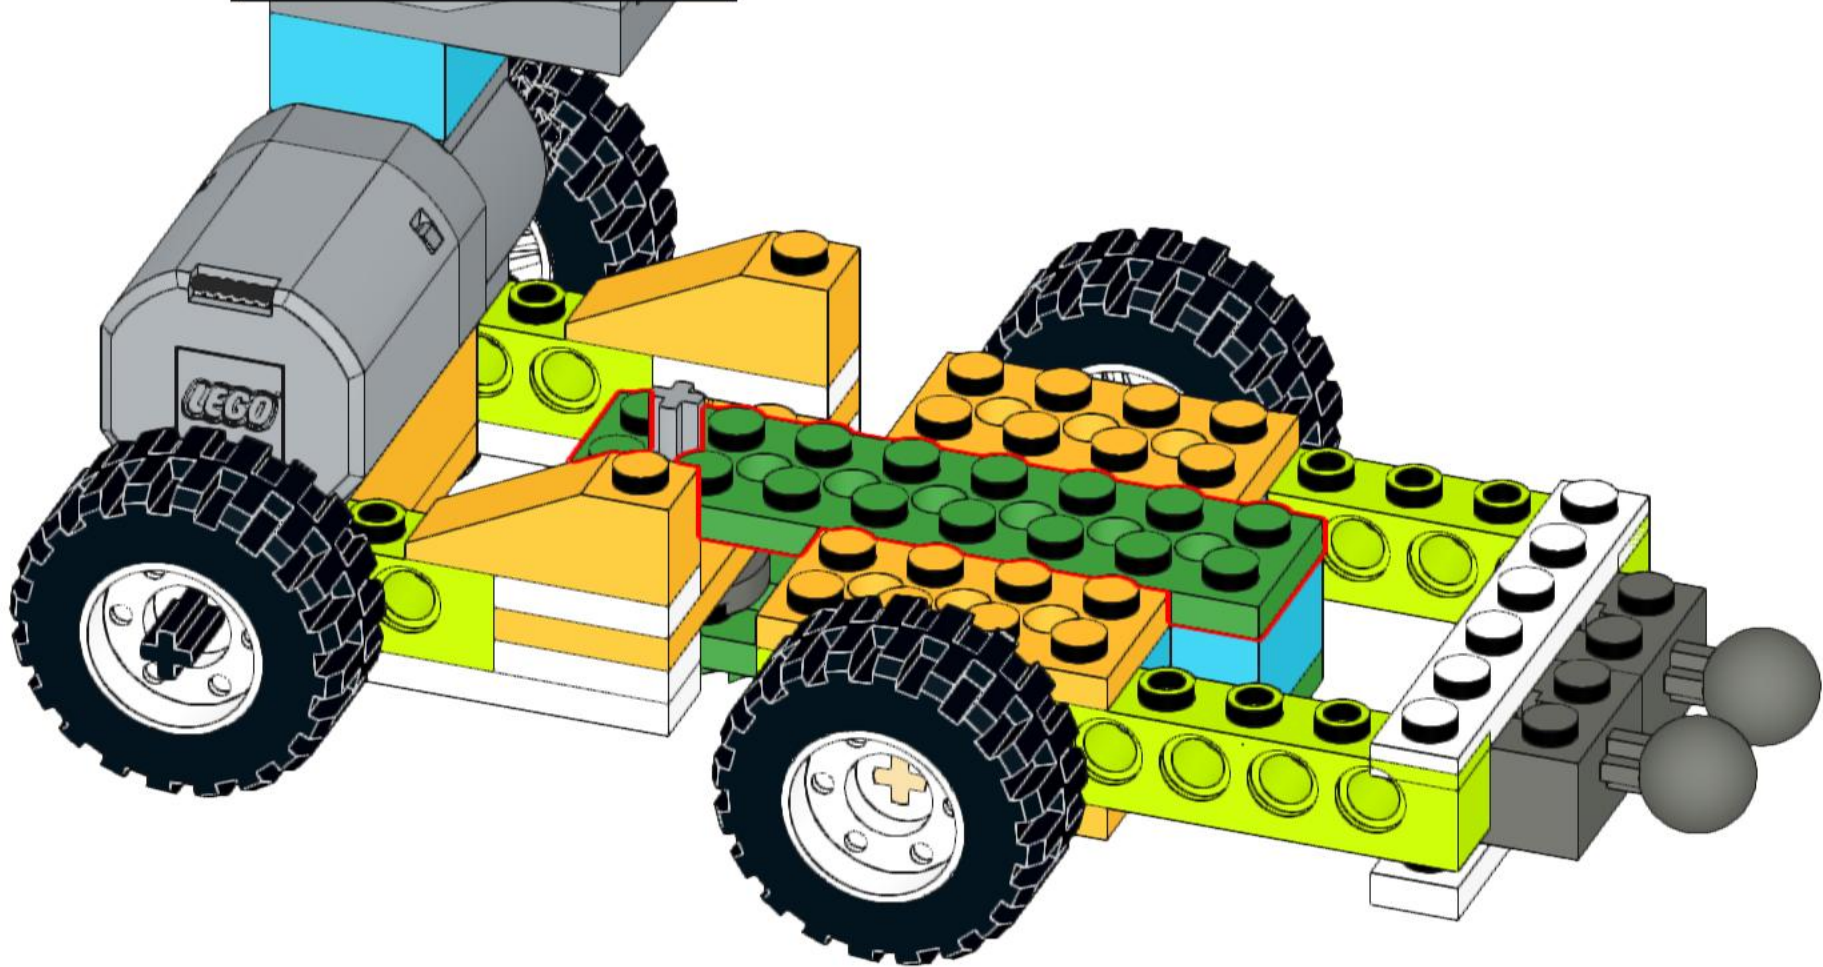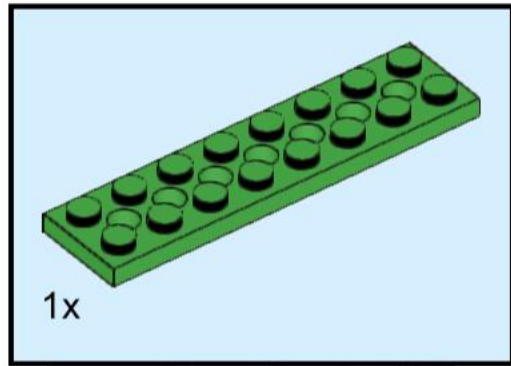

22

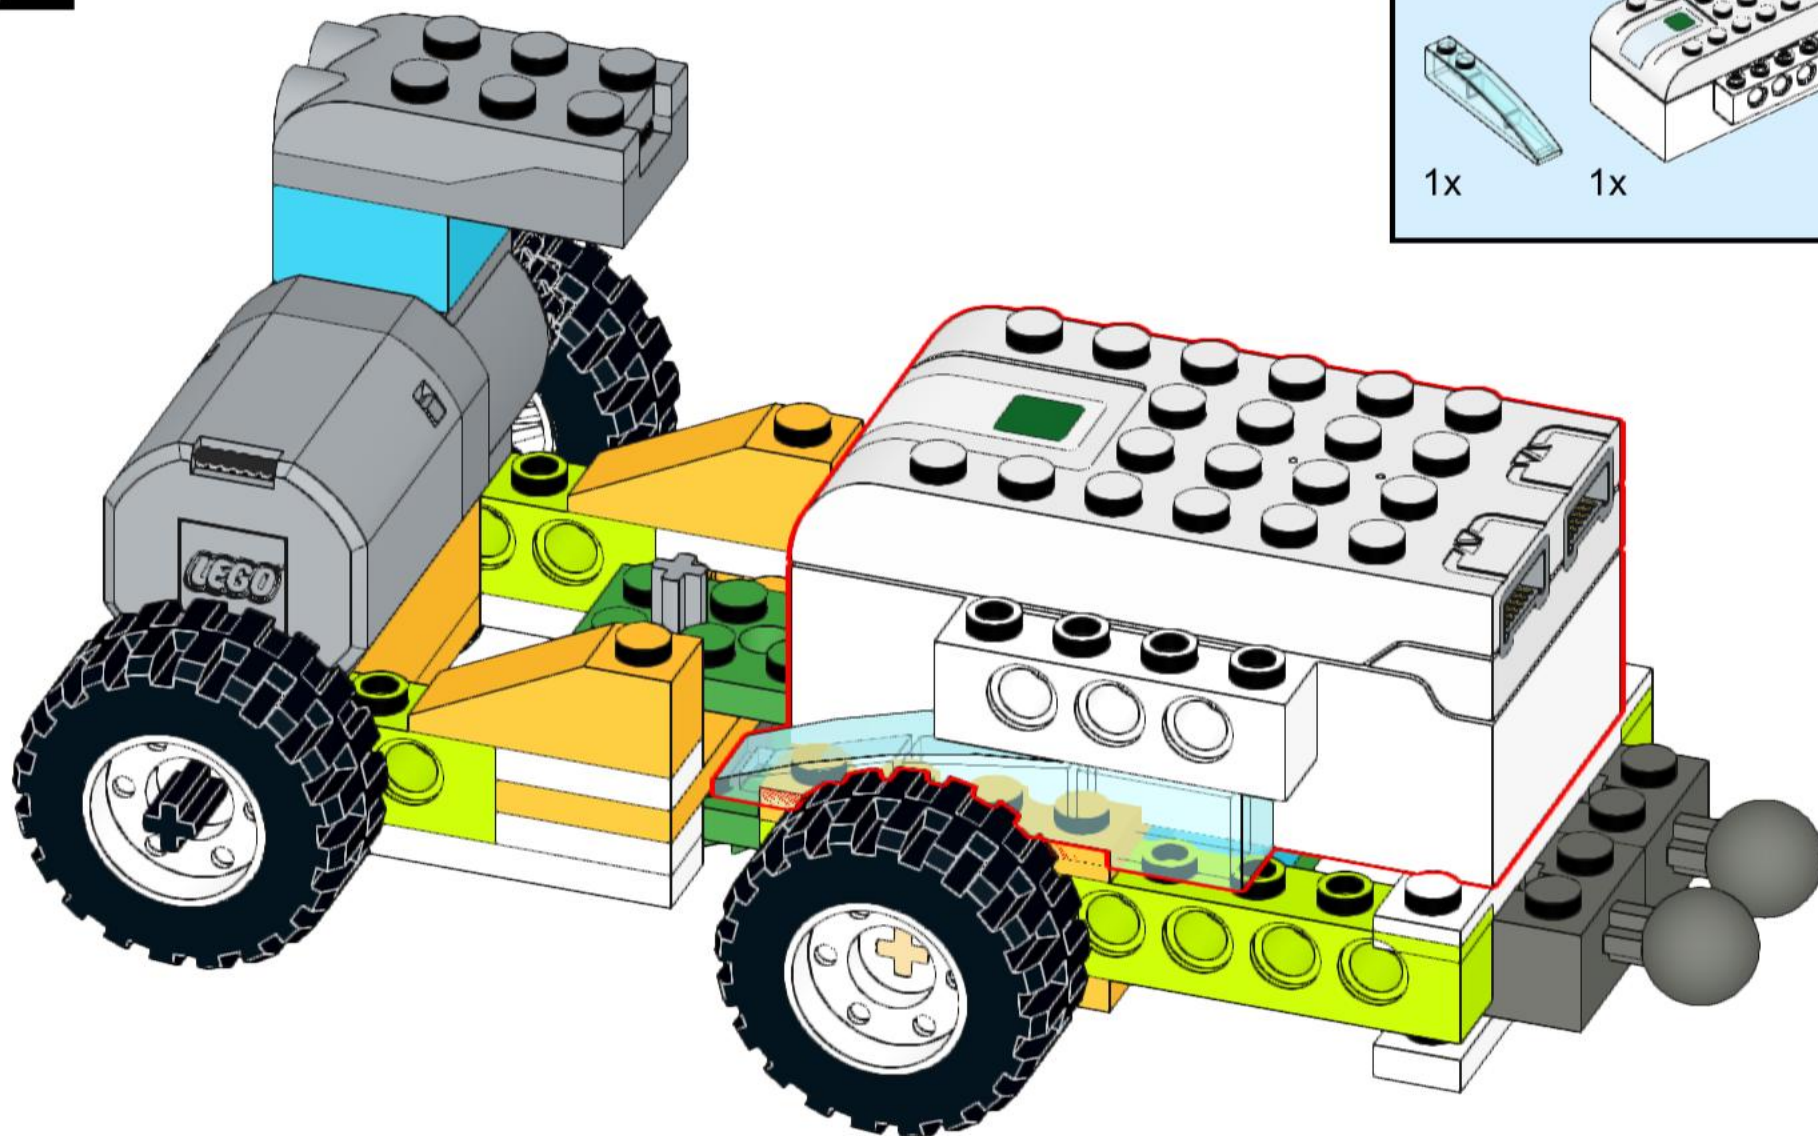

23

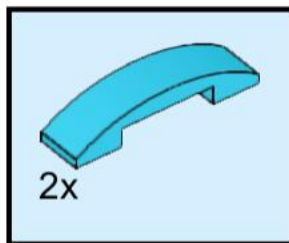

Los cables traten
de pasarlos por
aquí debajo

