
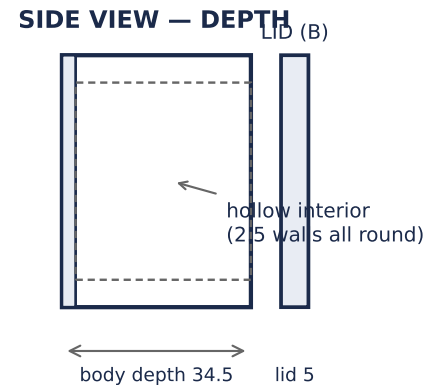
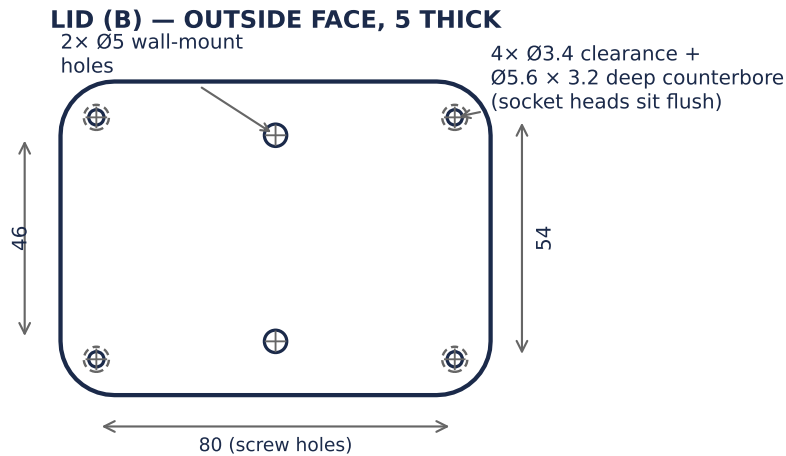


WhatsApp Doorbell Cam — Pebble Enclosure

Dimensioned views · Body (A) and Lid (B) · STLs in the case folder

Rev 2026-10-08

Units: mm · JakinsCraft

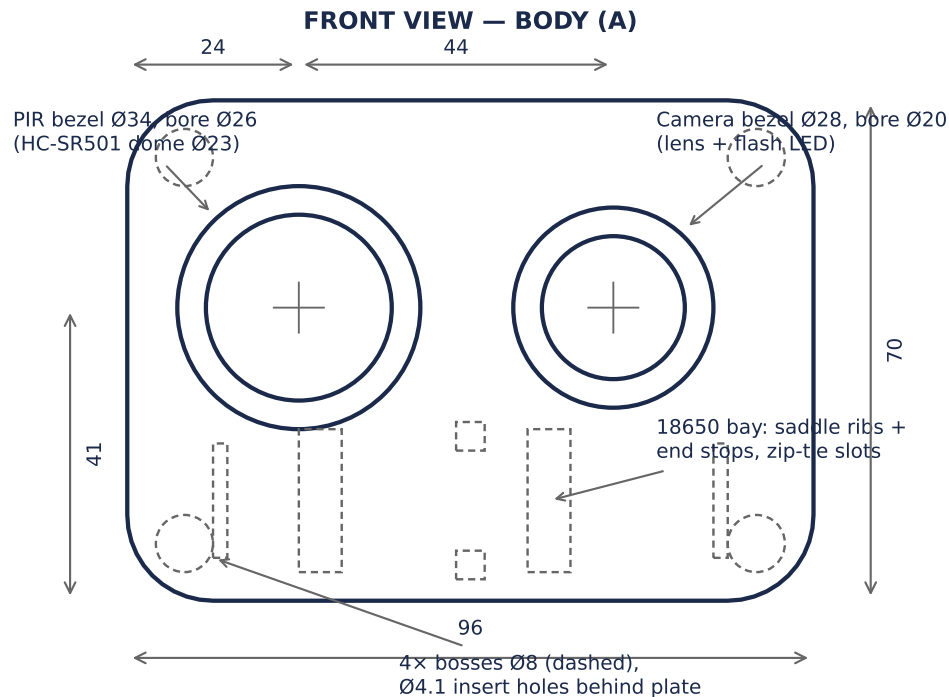

BOTTOM VIEW — USB NOTCH



notches 5.5 tall behind front plate: main USB x 41-55 (14 wide), charger USB x 66-78 (12 wide)

PRINTING

- PETG recommended (porch sun/heat). 0.2 mm layers, 3 walls, 15% infill.
- Body prints FRONT-FACE-DOWN; lid prints flat. No supports needed.
- Both STLs are single watertight solids – they open directly in Bambu Studio (fixed 2026-10-02; the old files were not).

BEFORE A LONG PRINT


- Test-fit your parts: HC-SR501 dome is Ø23 (bore Ø26); ESP32-CAM boards vary slightly between sellers. Print, check, then commit.
- USB power cable routes out through the bottom notch.
- Press the 4 M3 brass inserts into the bosses (≈200°C iron) before wiring anything.

Assembly — WhatsApp Doorbell Cam

Exploded stack, parts list, wiring and build order

Rev 2026-10-08

Units: mm · JakinsCraft

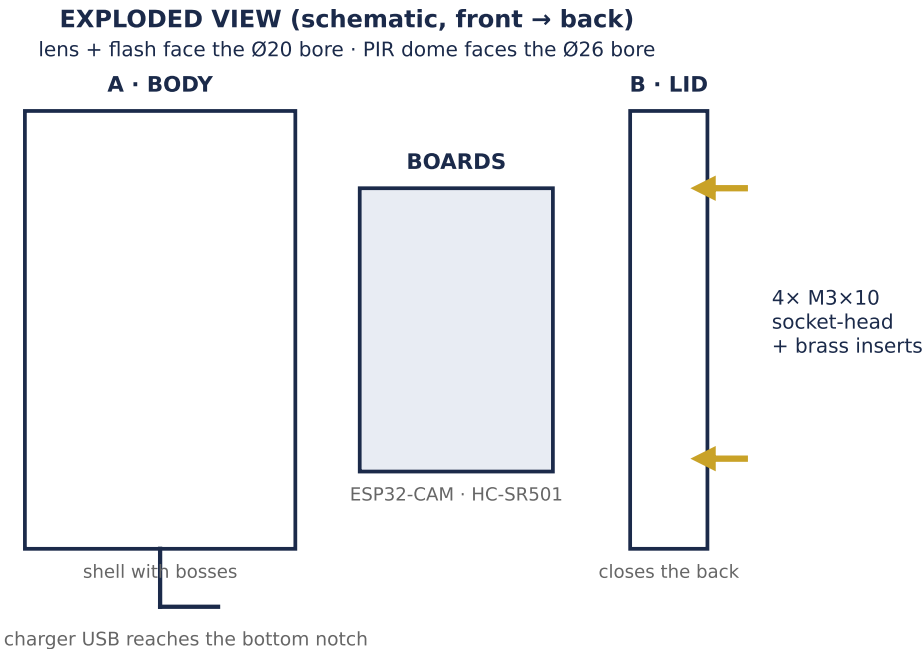

PARTS LIST (* FTDI is for flashing only)

#	Part	Qty
A	Enclosure body (3D print, PETG)	1
B	Enclosure lid (3D print, PETG)	1
1	ESP32-CAM (AI-Thinker) + OV2640	1
2	HC-SR501 PIR motion sensor	1
3	M3 × 10 socket-head screws	4
4	M3 brass heat-set inserts	4
5	18650 cell + TP4056 + 5V boost + zip tie	1 ea.
6	470 µF capacitor (across 5V/GND)	1
7	FTDI USB-to-TTL programmer *	1

ASSEMBLY ORDER

1. Print A (face-down) and B (flat). No supports.
2. Press 4 brass inserts into the body bosses, flush.
3. Flash the ESP32-CAM with the FTDI before it goes in.
4. Wire the power chain + PIR per the table below;
470 µF across 5V/GND, close to the ESP32-CAM.
5. Seat the PIR dome in the Ø26 bore, ESP32-CAM lens in the Ø20 bore (board long-side horizontal).
VHB tape or hot glue.
6. Lay the 18650 in the cradle; zip tie up through one floor slot, over the cell, down the other slot.
7. Tape the TP4056 + boost beside the cradle; line the charger USB up with its bottom notch.
8. Bench-test: wave at the PIR → WhatsApp photo.
9. Fix the lid (B) to the wall through the Ø5 holes – counterbore recesses face OUT.
10. Close the body onto the lid with 4× M3×10; heads sit flush in the counterbores.

WIRING

From	To	Note
18650 +/–	TP4056 B+/B–	check polarity first
TP4056 OUT	boost IN	—
boost +5V	ESP32-CAM 5V	470 µF across 5V/GND
GND	common everywhere	battery –, PIR, ESP
PIR VCC	5V rail	—
PIR OUT	ESP32-CAM GPIO 13	wake-up trigger