
WhatsApp Doorbell Cam — Pebble Enclosure

Rev 2026-10-20


Dimensioned views · Body (A) and Lid (B) · STLs in the case folder

Units: mm · JakinsCraft


FRONT VIEW — BODY (A)

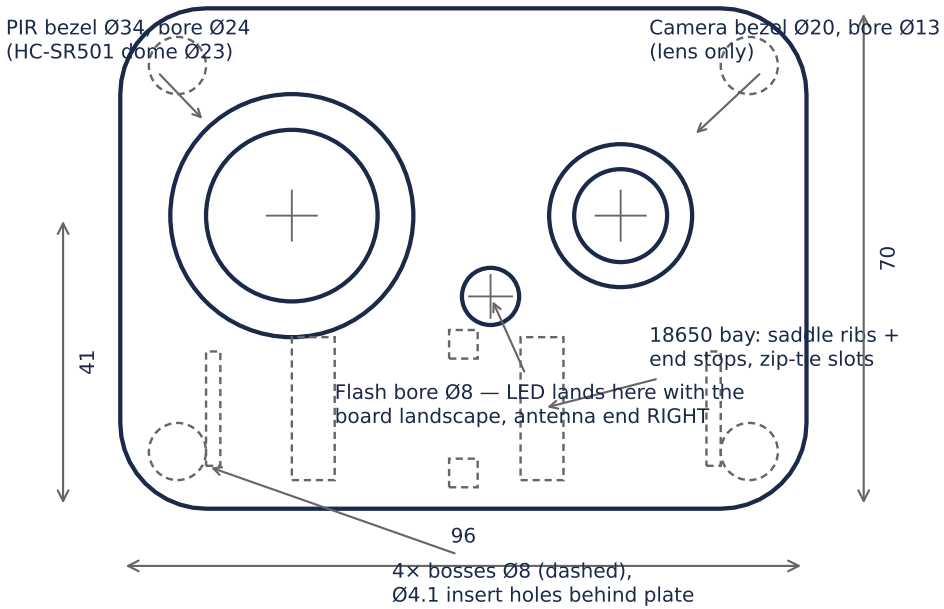

LID (B) — OUTSIDE FACE, 5 THICK

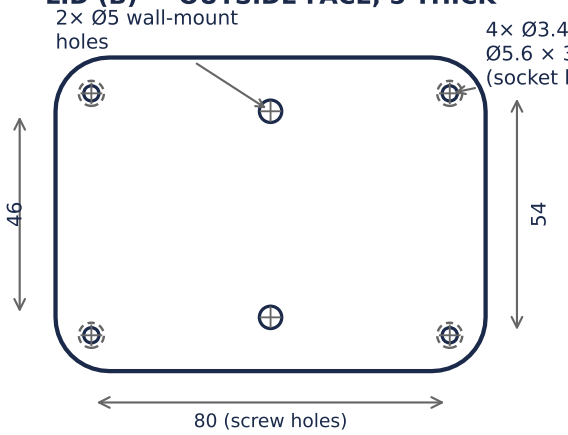

SIDE VIEW — DEPTH

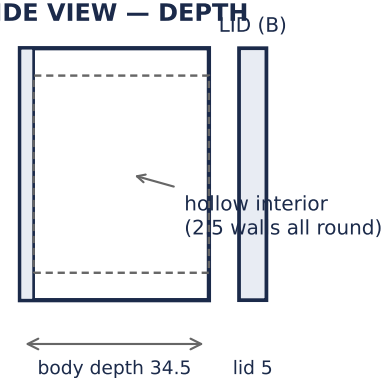

BOTTOM VIEW — USB NOTCH



charger USB notch x 66–78 (12 wide), 5 tall, set deep at z 26–31 beside the lid, where the TP4056 stands

PRINTING
- PETG recommended (porch sun/heat). 0.2 mm layers, 3 walls, 15% infill.
- Body prints FRONT-FACE-DOWN; lid prints flat. No supports needed.
- Both STLs are single watertight solids — they open directly in Bambu Studio (fixed 2026-10-02; the old files were not).

BEFORE A LONG PRINT
- Test-fit your parts: HC-SR501 dome is Ø23 (bore Ø24); ESP32-CAM boards vary slightly between sellers. Print, check, then commit.
- Charging cable reaches the TP4056 through the deep bottom notch.
- Press the 4 M3 brass inserts into the bosses (≈200°C iron) before wiring anything.

Assembly — WhatsApp Doorbell Cam


Rev 2026-10-20

Exploded stack, parts list, wiring and build order

Units: mm · JakinsCraft

EXPLODED VIEW (schematic, front → back)

lens faces the Ø13 bore, flash the Ø8 bore · PIR dome faces the Ø24 bore

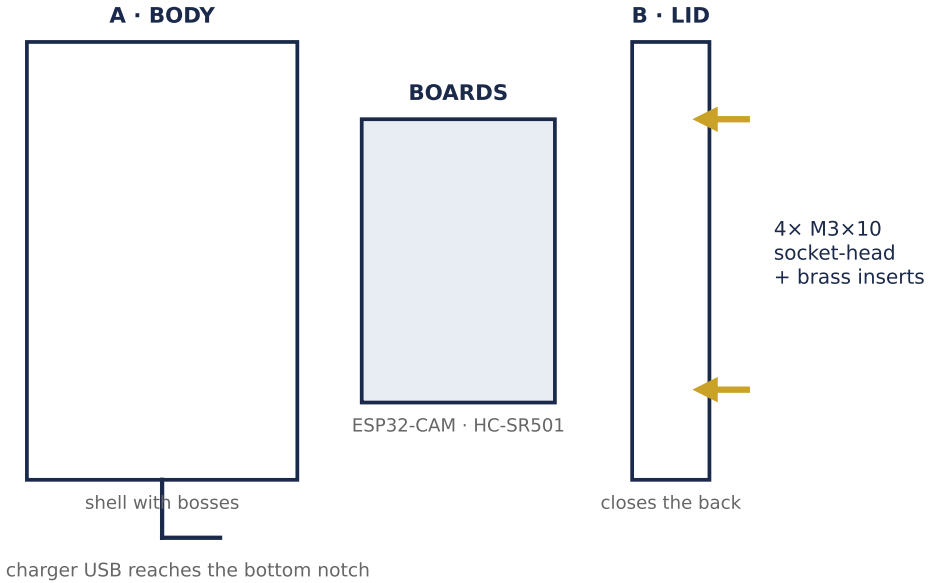

PARTS LIST (* FTDI is for flashing only)

#	Part	Qty
A	Enclosure body (3D print, PETG)	1
B	Enclosure lid (3D print, PETG)	1
1	ESP32-CAM (AI-Thinker) + OV2640	1
2	HC-SR501 PIR motion sensor	1
3	M3 × 10 socket-head screws	4
4	M3 brass heat-set inserts	4
5	18650 cell + TP4056 + 5V boost + zip tie	1 ea.
6	470 µF capacitor (across 5V/GND)	1
7	FTDI USB-to-TTL programmer *	1

```
ASSEMBLY ORDER
1. Print A (face-down) and B (flat). No supports.
2. Press 4 brass inserts into the body bosses, flush.
3. Flash the ESP32-CAM with the FTDI before it goes in.
4. Wire the power chain + PIR per the table below;
   470 µF across 5V/GND, close to the ESP32-CAM.
5. Seat the PIR dome in the Ø24 bore, ESP32-CAM lens
   in the Ø13 bore (board horizontal, antenna end
   RIGHT — flash LED then meets the Ø8 bore). VHB/hot glue.
6. Lay the 18650 in the cradle; zip tie up through one
   floor slot, over the cell, down the other slot.
7. Stand TP4056 + boost upright at the back, along
   the bottom wall; TP4056 USB faces the deep notch.
8. Bench-test: wave at the PIR → WhatsApp photo.
9. Fix the lid (B) to the wall through the Ø5 holes —
   counterbore recesses face OUT.
10. Close the body onto the lid, 4× M3×10, flush.
```

WIRING

From	To	Note
18650 +/−	TP4056 B+/B−	check polarity first
TP4056 OUT	boost IN	—
boost +5V	ESP32-CAM 5V	470 µF across 5V/GND
GND	common everywhere	battery −, PIR, ESP
PIR VCC	5V rail	—
PIR OUT	ESP32-CAM GPIO 13	wake-up trigger


Fit check: AI-Thinker ESP32-CAM ≈ 40.5 × 27 mm · HC-SR501 board ≈ 32 × 24 mm (typical — verify yours)

Pictorial assembly — WhatsApp Doorbell Cam


Rev 2026-10-20

Realistic renders · Blender Cycles · true case STLs + modelled components

Units: mm · JakinsCraft

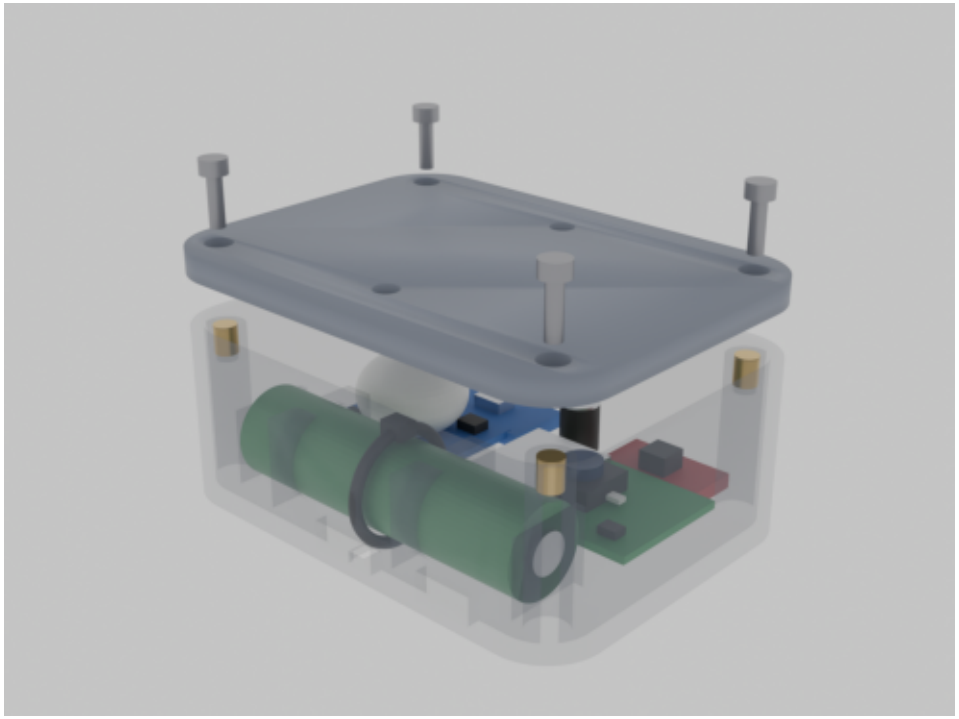

FITTED — transparent body, every component in place,
lid raised with the M3×10 screws above it

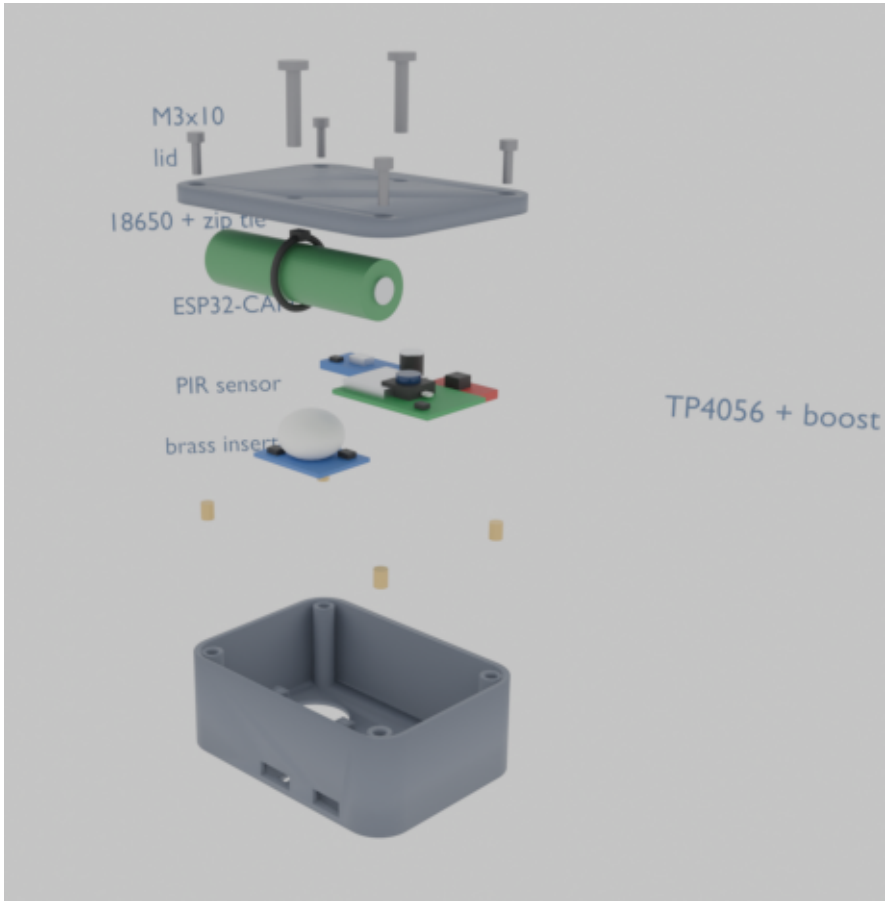

EXPLODED — assembly order, bottom to top:
body → brass inserts → PIR → ESP32-CAM → battery → lid → screws

Component models: ESP32-CAM (40.5×27), HC-SR501 (32×24), 18650 cell,
TP4056 charger, 5V boost, 470µF capacitor, zip tie, brass inserts.