

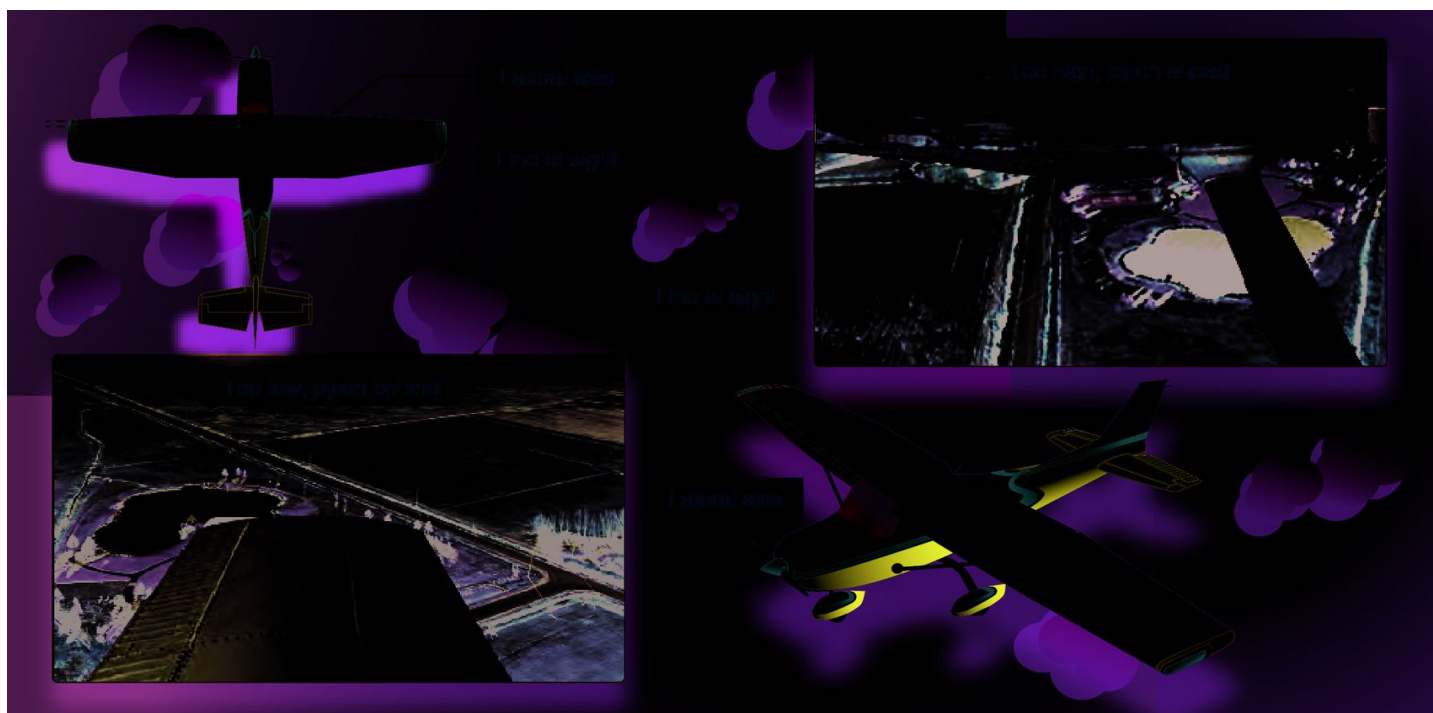


Figure 7-11. *Line of sight.*

The altitude that is appropriate for eights on pylons is called the “pivotal altitude” and is determined by the airplane's groundspeed. In previous ground-track maneuvers, the airplane flies a prescribed path over the ground and the pilot attempts to maintain the track by correcting for the wind. With eights on pylons, the pilot maintains lateral orientation to a specific spot on the ground. This develops the pilot's ability to maneuver the airplane accurately while dividing attention between the flightpath and the selected pylons on the ground.

An explanation of the pivotal altitude is also essential. First, a good rule of thumb for estimating the pivotal altitude is to square the groundspeed, then divide by 15 (if the groundspeed is in miles per hour) or divide by 11.3 (if the groundspeed is in knots), and then add the mean sea level (MSL) altitude of the ground reference. The pivotal altitude is the altitude at which, for a given groundspeed, the projection of the visual reference line to the pylon appears to pivot. Visually, a taut string, if extended from the pilot's eyes to the pylon, would remain parallel to lateral axis as the airplane makes a turn around the pylon. [Figure 7-12] The pivotal altitude does not vary with the angle of bank unless the bank is steep enough to affect the groundspeed.

Groundspeed		Approximate Pivotal Altitude
Knots	MPH	
87	100	670
91	105	735
96	110	810
100	115	885
104	120	960
109	125	1050
113	130	1130

Figure 7-12. *Speed versus pivotal altitude.*

Distance from the pylon affects the angle of bank. At any altitude above that pivotal altitude, the projected reference line appears to move rearward in a circular path in relation to the pylon. Conversely, when the airplane is below the pivotal altitude, the projected reference line appears to move forward in a circular path. [Figure 7-13] To demonstrate this, the pilot will fly at maneuvering speed and at an altitude below the pivotal altitude, and then place the airplane in a medium-banked turn. The projected visual reference line appears to move forward along the ground (pylon appears to move back) as the airplane turns. The pilot then executes a climb to an altitude well above the pivotal altitude. When the airplane is again at maneuvering speed, it is placed in a medium-banked turn. At the higher altitude, the projected visual reference line appears to move backward across the ground (pylon appears to move forward).

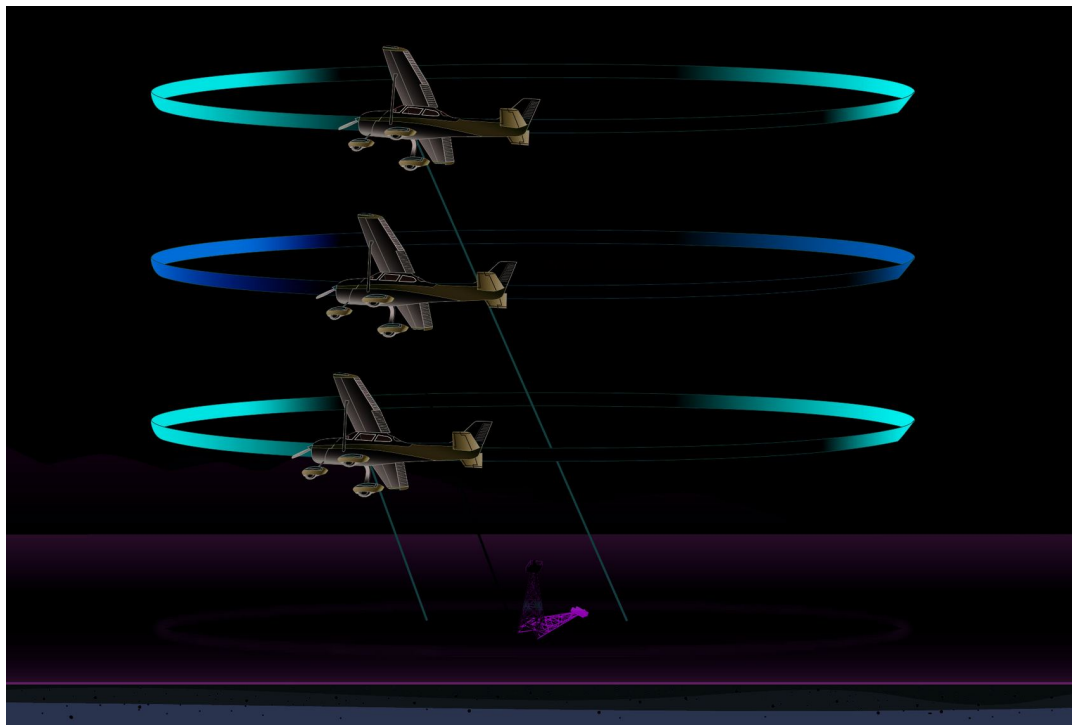


Figure 7-13. Effect of different altitudes on line of sight.

After demonstrating the maneuver at a high altitude, the pilot should reduce power and begin a descent at maneuvering speed in a continuing medium-bank turn around the pylon. The apparent backward movement of the projected visual reference line with respect to the pylon will slow down as altitude is lost and will eventually stop for an instant. If the pilot continues the descent below the pivotal altitude, the projected visual reference line with respect to the pylon will begin to move forward.

The altitude at which the visual reference line ceases to move across the ground is the pivotal altitude. If the airplane descends below the pivotal altitude, the pilot should increase power to maintain airspeed while regaining altitude to the point at which the projected reference line moves neither backward nor forward but actually pivots on the pylon. In this way, the pilot can determine the pivotal altitude of the airplane.

The pivotal altitude changes with variations in groundspeed. Since the headings throughout turns continuously vary from downwind to upwind, the groundspeed constantly changes. This results in the proper pivotal altitude varying slightly throughout the turn. The pilot should adjust for this by climbing or descending, as necessary, to hold the visual reference line on the pylons.

Selecting proper pylons is an important factor of successfully performing eights on pylons. They should be sufficiently prominent so the pilot can view them when completing the turn around one pylon and heading for the next. They should also be adequately spaced to provide time for planning the turns but not spaced so far apart that they cause unnecessary straight-and-level flight between the pylons. The distance between the pylons should allow for the straight-and-level flight segment to last from 3 to 5 seconds. The selected pylons should also be at the same elevation, since differences of over a few feet necessitate climbing or descending between each turn. The pilot should select two pylons along a line that lies perpendicular to the direction of the wind.

The pilot should estimate the pivotal altitude during preflight planning. Weather reports and consultation with other pilots flying in the area may provide both the wind direction and velocity. If the references are previously known (many flight instructors already have these ground-based references selected), the sectional chart will provide the MSL of the references, the Pilot's Operating Handbook (POH) provides the range of maneuvering airspeeds (based on weight), and the wind direction and velocity can be estimated to calculate the appropriate pivotal altitudes. The pilot should calculate the pivotal altitude for each position: upwind, downwind, and crosswind.

The pilot should begin the eight on pylons maneuver by flying diagonally crosswind between the pylons to a point downwind from the first pylon, so that the first turn can be made into the wind. As the airplane approaches a position where the pylon appears to be just ahead of the wingtip, the pilot should begin the turn by lowering the upwind wing to the point where the visual reference line aligns with the pylon. The reference line should appear to pivot on the pylon. As the airplane heads upwind, the groundspeed decreases, which lowers the pivotal altitude. As a result, the pilot should descend to hold the visual reference line on the pylon. As the turn progresses on the upwind side of the pylon, the wind becomes more of a crosswind. Since this maneuver does not require the turn to be completed at a constant radius, the pilot does not need to apply drift correction to complete the turn.

If the visual reference line appears to move ahead of the pylon (pylon appears to move back), the pilot should increase altitude. If the visual reference line appears to move behind the pylon (pylon appears to move ahead), the pilot should decrease altitude. Deflecting the rudder to yaw the airplane and force the wing and reference line forward or backward to the pylon places the airplane in uncoordinated flight, at low altitude, with steep bank angles and should not be attempted.

As the airplane turns toward a downwind heading, the pilot should rollout from the turn to allow the airplane to proceed diagonally to a point tangent on the downwind side of the second pylon. The pilot should complete the rollout with the proper wind correction angle to correct for wind drift, so that the airplane arrives at a point downwind from the second pylon that is equal in distance from the pylon as the corresponding point was from the first pylon at the beginning of the maneuver.

At this point, the pilot should begin a turn in the opposite direction by lowering the upwind wing to the point where the visual reference line aligns with the pylon. The pilot should then continue the turn the same way the corresponding turn was performed around the first pylon but in the opposite direction.

With prompt correction, and a very fine control pressures, it is possible to hold the visual reference line directly on the pylon even in strong winds. The pilot may make corrections for temporary variations, such as those caused by gusts or inattention, by reducing the bank angle slightly to fly relatively straight to bring forward a lagging visual reference line or by increasing the bank angle temporarily to turn back a visual reference line that has moved ahead. With practice, these corrections may become slight enough to be barely noticeable. It is important to understand that variations in pylon position are according to the apparent movement of the visual reference line. Attempting to correct pivotal altitude by the using the altimeter is ineffective.

Eights on pylons are performed at bank angles ranging from shallow to steep. [Figure 7-14] The pilot should understand that the bank chosen does not alter the pivotal altitude. As proficiency is gained, the instructor should increase the complexity of the maneuver by directing the learner to enter at a distance from the pylon that results in a specific bank angle at the steepest point in the pylon turn.

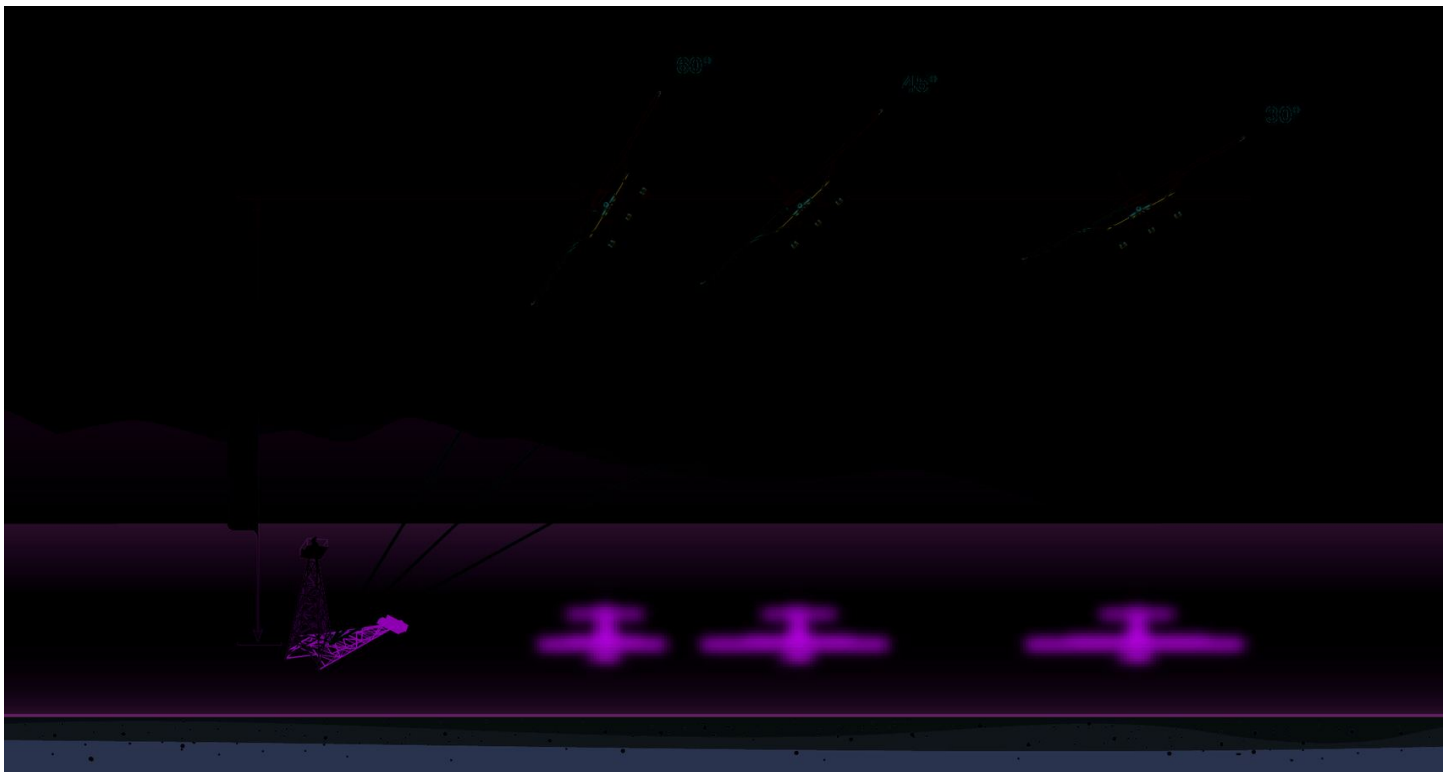


Figure 7-14. Bank angle versus pivotal altitude.

Common Errors

The most common error in attempting to hold a pylon is incorrect use of the rudder. When the projection of the visual reference line moves forward with respect to the pylon, many pilots tend to apply inside rudder pressure to yaw the wing backward. When the reference line moves behind the pylon, pilots tend to apply outside rudder pressure to yaw the wing forward. The pilot should use the rudder only for coordination.

Other common errors in the performance of eights on pylons are:

1. Failure to adequately clear the surrounding area for safety hazards, initially and throughout the maneuver.
2. Skidding or slipping in turns (whether trying to hold the pylon with rudder or not).
3. Excessive gain or loss of altitude.
4. Poor choice of pylons.
5. Not entering the pylon turns into the wind.
6. Failure to assume a heading when flying between pylons that will compensate sufficiently for drift.
7. Failure to time the bank so that the turn entry is completed with the pylon in position.
8. Abrupt control usage.
9. Inability to select pivotal altitude.

Chapter Summary

Ground reference maneuvers require planning and high levels of vigilance to ensure that the practice and performance of these maneuvers are executed where the safety to groups of people, livestock, communities, and the pilot is not compromised. While training to perform ground reference maneuvers, a pilot learns coordination, timing, and division of attention to maneuver the airplane accurately in reference to flight attitudes and specific ground references. After mastering ground reference maneuvers, the pilot should be able to command the airplane to specific pitch, roll, and yaw attitudes, correct for the effects of wind drift, and control the airplane's orientation in relation to ground-based references. While safety is paramount in all aspects of flying, ground reference maneuvers focus on mitigation of risk during low altitude flying. With these enhanced skills, the pilot also significantly improves their competency in everyday flight maneuvers, such as straight-and-level, turns, climbs, and descents.

Airplane Flying Handbook (FAA-H-8083-3C)

Chapter 8: Airport Traffic Patterns

Introduction

Airport traffic patterns ensure that air traffic moves into and out of an airport safely. The direction and placement of the pattern, the altitude at which it is to be flown, and the procedures for entering and exiting the pattern may depend on local conditions. Information regarding the procedures for a specific airport can be found in the Chart Supplements. General information on airport operations and traffic patterns can also be found in the Aeronautical Information Manual (AIM).

Airport Traffic Patterns and Operations

Just as roads and streets are essential for operating automobiles, airports or airstrips are essential for operating airplanes. Since flight begins and ends at an airport or other suitable landing field, pilots need to learn the traffic rules, traffic procedures, and traffic pattern layouts in use at various airports.

When an automobile is driven on congested city streets, it can be brought to a stop to give way to conflicting traffic. Airplane pilots do not have that option. Consequently, traffic patterns and traffic control procedures exist to minimize conflicts during takeoffs, departures, arrivals, and landings. The exact nature of each airport traffic pattern is dependent on the runway in use, wind conditions (which determine the runway in use), obstructions, and other factors.

Airports vary in complexity from small grass or sod strips to major terminals with paved runways and taxiways. Regardless of the type of airport, a pilot should know and abide by the applicable rules and operating procedures. In addition to checking the traffic pattern and operating procedures for airports of intended use in the Chart Supplements, pilots should know how to interpret any airport visual markings and signs that may be encountered. In total, the information provided to the pilot keeps air traffic moving with maximum safety and efficiency. However, the use of any traffic pattern, service, or procedure does not diminish the pilot's responsibility to see and avoid other aircraft from ramp-out to ramp-in.

When operating at an airport with an operating control tower, the pilot receives a clearance to approach or depart, as well as pertinent information about the traffic pattern by radio. The tower operator can instruct pilots to enter the traffic pattern at any point or to make a straight-in approach without flying the usual rectangular pattern. Many other deviations are possible if the tower operator and the pilot work together in an effort to keep traffic moving smoothly. Jets or heavy airplanes will frequently fly wider and/or higher patterns than lighter airplanes, and will sometimes make a straight-in approach for landing.

A pilot is not expected to have extensive knowledge of all traffic patterns at all airports, but if the pilot is familiar with the basic rectangular pattern, it is easy to make proper approaches and departures from most airports, regardless of whether or not they have control towers. However, if there is not a control tower, it is the pilot's responsibility to determine the direction of the traffic pattern, to comply with appropriate traffic rules, and to display common courtesy toward other pilots operating in the area. When operating at airports without a control tower, the pilot may not see all traffic. Therefore, the pilot should develop the habit of continued scanning even when air traffic appears light or nil. Adherence to the basic rectangular traffic pattern reduces the possibility of conflicts and reduces the probability of a midair collision.

Standard Airport Traffic Patterns

An airport traffic pattern includes the direction and altitude of the pattern and procedures for entering and leaving the pattern. Unless the airport displays approved visual markings indicating that turns should be made to the right, the pilot should make all turns in the pattern to the left.

Figure 8-1 shows a standard rectangular traffic pattern. The traffic pattern altitude is usually 1,000 feet above the elevation of the airport surface. The use of a common altitude at a given airport is the key factor in minimizing the risk of collisions at airports without operating control towers.

Aircraft speeds are restrained by 14 CFR part 91, section 91.117. When operating in the traffic pattern at most airports with an operating control tower, aircraft typically fly at airspeeds no greater than 200 knots (230 miles per hour (mph)). Sensible practice suggests flying at or below these speeds when operating in the traffic pattern of an airport without an operating control tower. In any case, the pilot should adjust the airspeed, when necessary, so that it is compatible with the airspeed of other aircraft in the traffic pattern.