

## **Bottom Table**

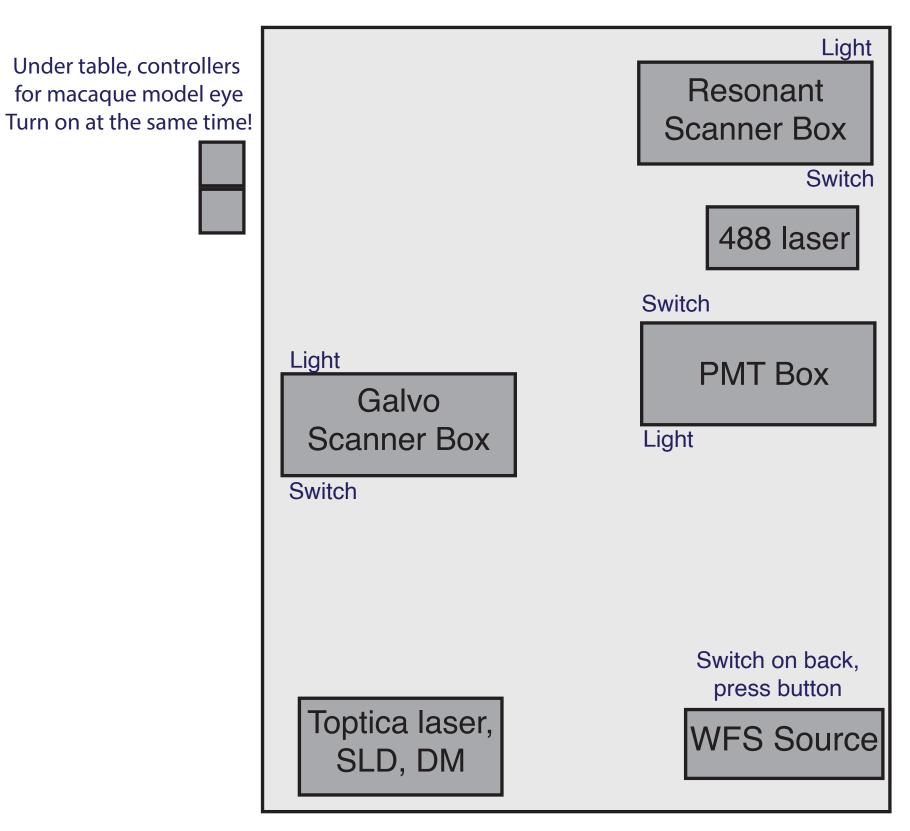



Toptica: turn key and check cable SLD: turn key, mode to high, press On/Off DM: Press button, check for blue light

## Rack

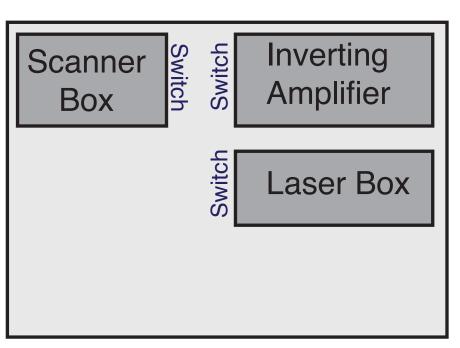

## Top Table

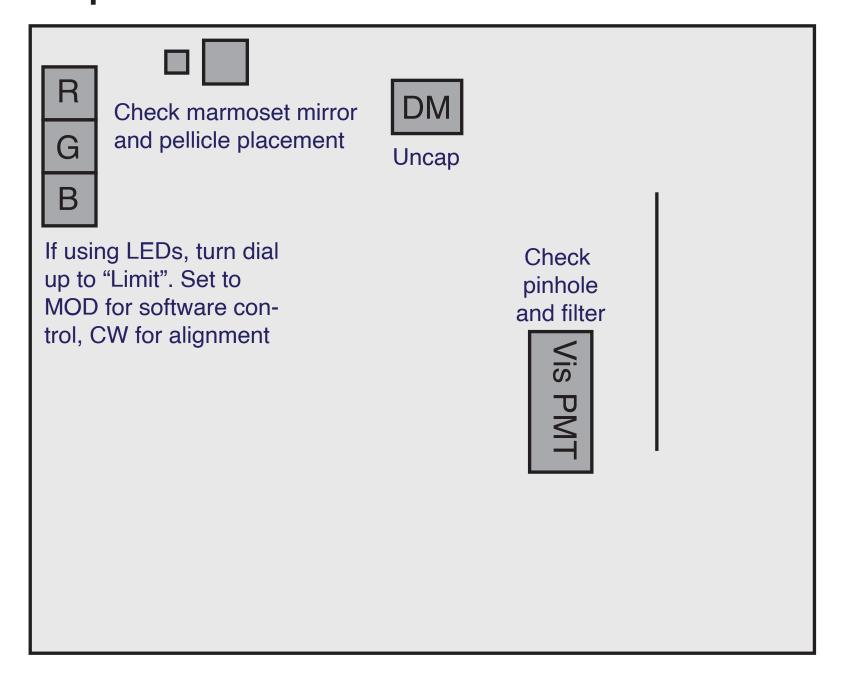

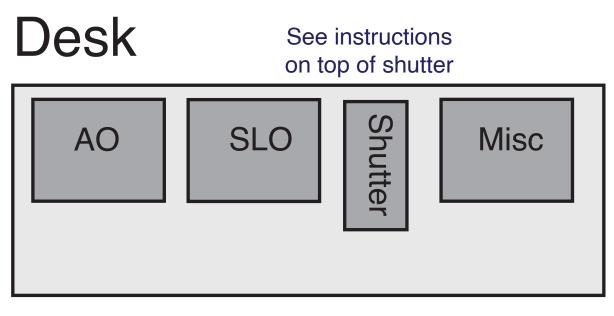

AO: Open Tsunami Wave after DM light stops blinking. Go to the AO tab and press load AO settings. Pick the one starting with "ready\_to\_go"

SLO: Open Desktop>software>real-time>Tracking\_Sara.
Open the ThorLabs APT software for PMT control and MATLAB

Misc: Open Toptica software (if needed), ThorLabs Kinesis software