Exercise Session 3

Theory

- ROS publisher
- rgt User Interface
- TF Transformation System (Optional)
- Robot models (URDF) (Optional)
- Simulation descriptions (SDF) (Optional)

Exercise

The goal of this exercise is to close the control loop for the SMB robot. You will extract the position of a pillar from the laser scan and then control the robot such that it drives into the pillar.

- 1. Adapt the launch file from the last exercise such that:
 - a. The keyboard twist node is removed.
 - b. \$(find smb_highlevel_controller)/worlds/singlePillar.world is loaded as the world. You can download the singlePillar.world file from the moodle page and move it to that folder.
- Extract the position of the pillar from the laser scan with respect to the robot.
- 3. Create a publisher on the topic /cmd_vel to be able to send a twist command to SMB. You need to add geometry_msgs as a dependency to your CMakeLists.txt and package.xml (same structure as with sensor_msgs). (Lecture 2, Slide 5-6)
- 4. Write a simple P controller that drives SMB towards the pillar. Remember to use ROS parameters for your controller gains (Lecture 2, Slide 22)! Write the code in the callback method of the laser scan topic. To ensure that the pillar is well visible in the laser scan, set the <code>laser_scan_min_height</code> to -0.2 and <code>laser_scan_max_height</code> to 1.0. You can pass them as arguments to the <code>smb_gazebo.launch</code>
- 5. Add a RobotModel plugin to RViz to visualize the SMB robot. (Lecture 3, Slide 19)
- 6. Add a TF display plugin to RViz. (Lecture 3, Slides 8)
- 7. Publish a visualization marker for RViz that shows the estimated position of the pillar. (easy) Publish the point in the sensor frame (*rslidar*) as an RViz marker. RViz will automatically transform the marker into the odom frame.

 http://wiki.ros.org/rviz/DisplayTypes/Marker

OR

(more difficult) Implement a TF listener to transform the extracted point from the laser frame to the odom frame.

http://wiki.ros.org/tf/Tutorials/Writing%20a%20tf%20listener%20%28C%2B%2B%29


Publish the point in the *odometry frame* as a RViz marker.

1


http://wiki.ros.org/rviz/DisplayTypes/Marker



Exercise 3

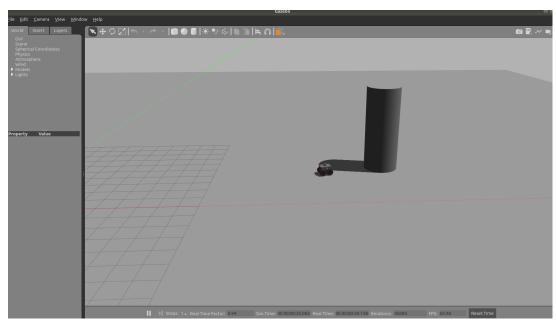

SMB drives into a pillar.

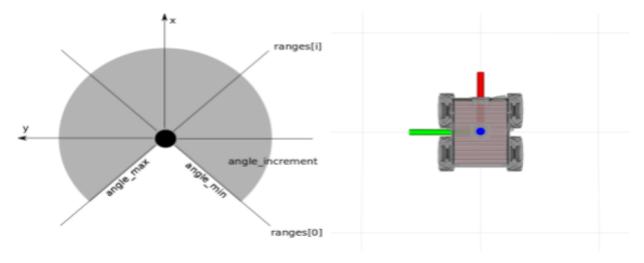

2

The angles of the single rays of a laser scanner range from angle_min to angle_max with an angle_increment. Each of this rays have a range measurement.

The base_link coordinate system of husky is aligned such that x is forward, y is to the left and z is up.



Evaluation

	Start the launch file. SMB should drive into the pillar.		
		SMB drives	[20%]
		SMB hits the pillar	[30%]
	Check	the RViz configuration (TF's, Robot Model and Laser Scan shown).	
		TF	[6%]
		Robot Model	[7%]
		Laser scan	[7%]
	The visualization marker is correctly shown in RViz.		
		If the position of the marker's coordinates are determined correctly	[15%]
If the markes visualizes near the pillar (i.e. all the visualization p			neters are
		correct)	[15%]

Note that all the functionally must be implemented inside the class and not in the main() function where the class is instantiated. You will lose 20% points if you don't adhere to this rule.



3 Exercise 3