PZD-GROOVE-CASE


PROFESSIONAL ENCLOSURE BY PLANET ZERO DESIGNS

Project can be found at: https://github.com/Peteranthony1st/PZD-Daisy-Pod-Groovebox




PRINT SETTINGS:


0.4mm nozzle, 0.2mm layer height. Bambu Lab A1 with CoolPlate SuperTack build plate used in the example.

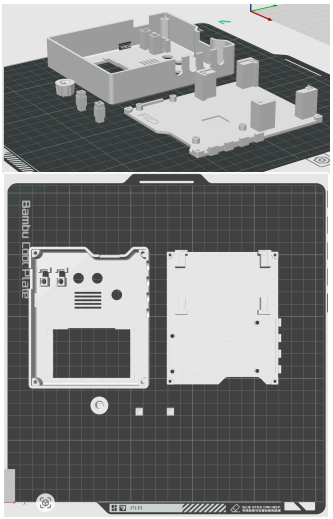


Use the ‘lay on face’ tool and click the top of the top, knob and buttons. Make sure to orient top and base in the same direction.

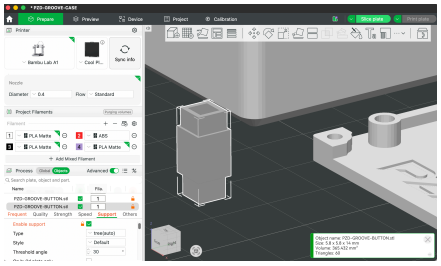


Enable ‘tree(auto)’ for both buttons

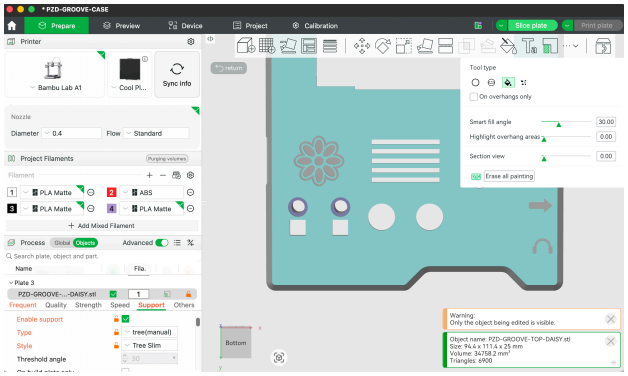

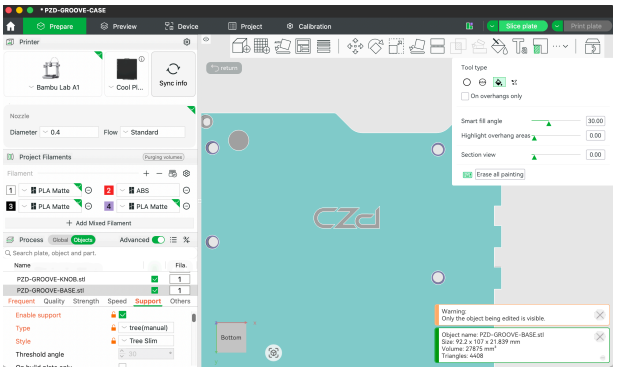

Enable ‘tree(manual)’ ‘Tree slim’ support for the top and base. Select ‘Support painting’ tool and select fill. Add support to the purple areas as shown.

ASSEMBLY INSTRUCTIONS:

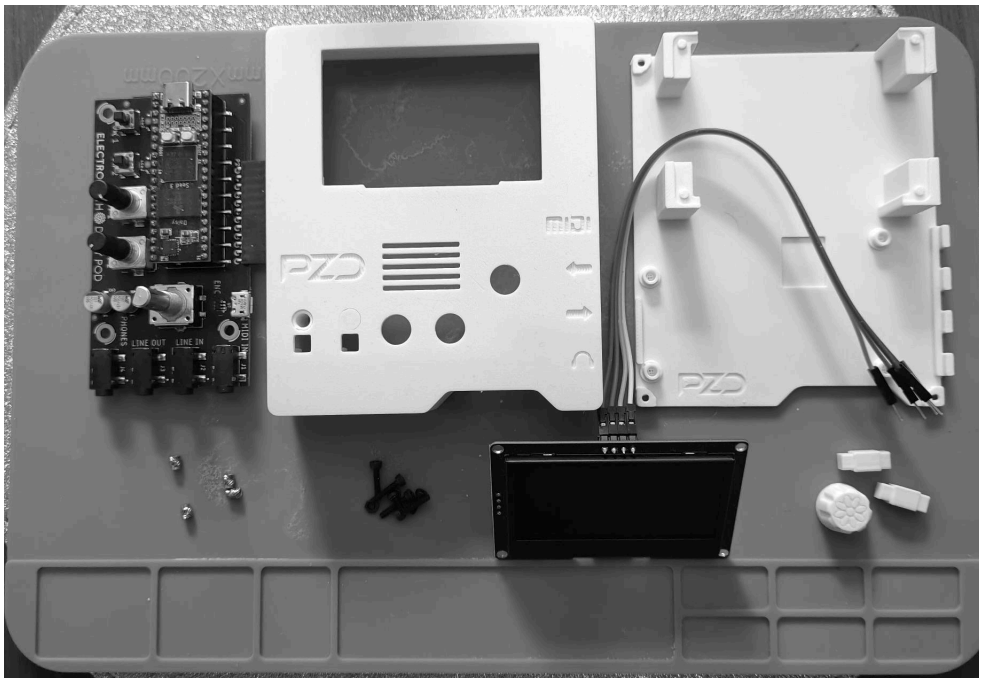

What you will need:

1 x Daisy Pod
1 x PZD-Groove-case
1 x 2.4" 2.42 Inch 128x64 **I2C** OLED LCD Display Module SSD1309 (link below)

4 x Female-Male Jumper wires

8 x M2x6mm hex bolts
4 x M2 nuts

4 x M2 heated inserts (Soldering iron)

6 x 6mm silicone dots


Optional:

12 pin angled female headers (soldered to Daisy). Only if needed.

OLED Display:
https://a.aliexpress.com/_EQ1sEmm


STEP 1:


Insert 4 x M2 heated inserts into the pillars on the top part. Use the soldering iron to insert them until flush. Be careful not to melt the case walls.

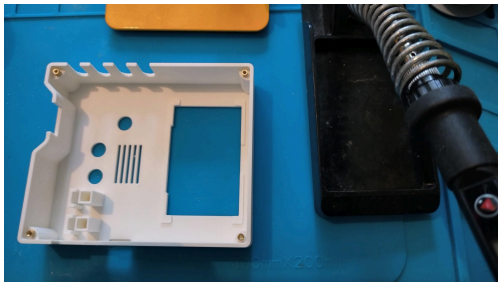

STEP 2:

Use the M2x6mm hex bolts and nuts to secure the pod to the base (bolts enter from bottom). You don't need to use all 4. Bolt heads should be recessed.

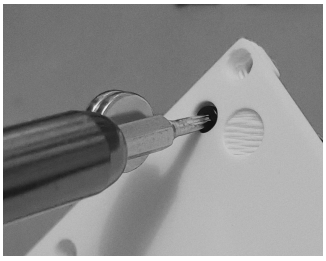

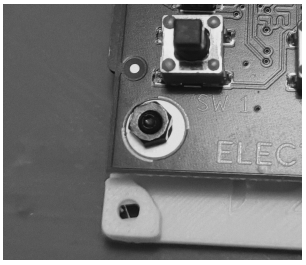



STEP 3:

- Solder pin headers to display and angled female headers to the pod.

- Attach jumper wires between the pod and OLED display.
Ground
3.3v Digital
SDA
SCL

- Place display in its slot as shown.

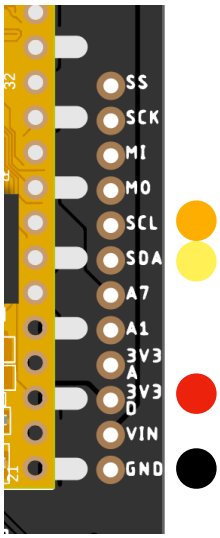


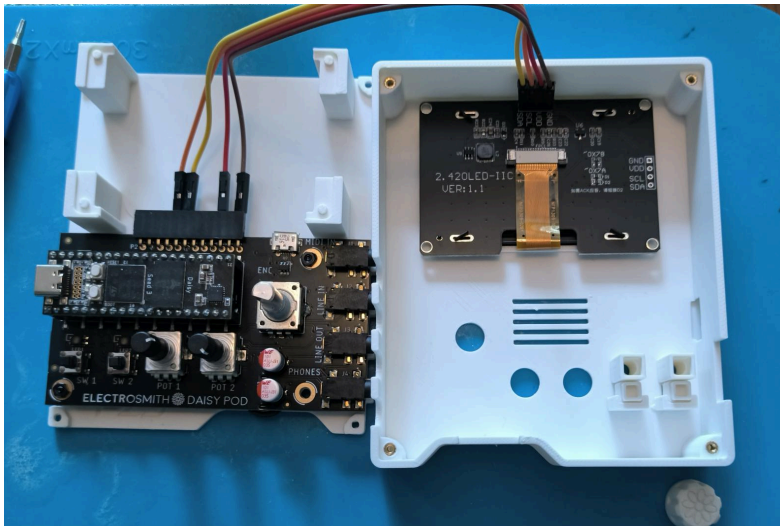


STEP 4:

Place the buttons in their slots.

Carefully place the base on top making sure the pod buttons line up to their inserts.

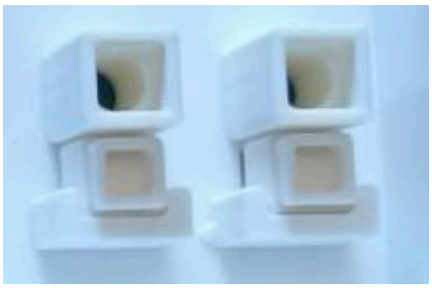

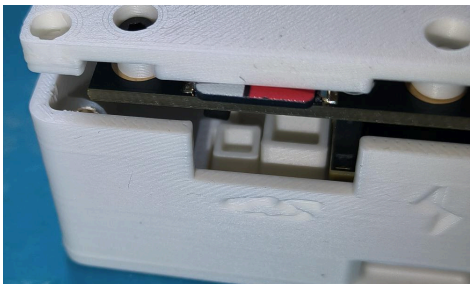

STEP 5:

Use the remaining 4xM2X6mm hex bolts to secure the base to the top.

Apply the 6mm silicone dots to the 4 recesses on the base and into the 2 recesses on the top for the LED holes.

Attach the knob (Lin up as shown) and you are done!

