Summary of previous lecture

- From analogue continuous signals to digital discrete signals:
 - Sampling to discretize time axis
 - Quantization to discretize the amplitude axis
- Loss of information:
 - Sampling does not lead to information loss if I sample at $f_s \ge 2f_{\text{max}}$
 - Quantization loses information, but the higher the number of bits used the lower the noise created
- Data rate of a signal is obtained by multiplying sampling rate by number of bits per sample (i.e., quantization bits).
- Difference between propagation speed and data rate of a signal
 - Propagation speed is fixed, data rate is proportional to the bandwidth of the signal

Modulation of Digital Signals

Why do we use digital signals today, if quantization implies information loss?


- 100 PERCENT ACCURACY IS NOT CRUCIAL.
- BECAUSE ONLY A SMALL PERCENTAGE OF THE INFORMATION IS LOST.
- BECAUSE THEY ARE EASIER TO WORK WITH
- COMPRESSION COMPUTERS CANNOT ANALYSE ANALOG
- COMPUTERS CANNOT PROCESS CONTINUOUS DATA SO IT NEEDS TO BE SPLIT UP
- DIGITAL SIGNALS ARE EASIER TO PRODUCE AND ANALYSE
- EASIER TO MODIFY AND STORE OUTWEIGHS THE INFORMATION LOSS. OR THE INFORMATION LOSS
 IS USUALLY NOT NOTICEABLE.
- EASIER TO PROCESS AND TRANSMIT THROUGH THE INTERNET. SOFTWARE IS ALWAYS GOING TO WORK THE SAME WAY IN DIFFERENT COMPUTERS UNLIKE USING HARDWARE COMPONENTS.
- EASIER, CHEAPER, FASTER
- IT IS WORTH THE INFO LOSS
- NOISE CAN BE INTRODUCED TO ANALOG SIGNALS WHEREAS QUANTISATION INTRODUCES FAR LESS NOISE
- SO THAT INFORMATION CAN BE PROCESSED THROUGH COMPUTERS OR OTHER MACHINES
- TO UTILIZE COMPUTERS FOR PROCESSING
- WE CAN NOWADAYS VERY EASILY ACHEIVE HIGH ENOUGH QUALITY OF QUANTIZATION FOR NEARLY ALL PURPOSES.

Transmission of digital signals

- We have shown how we can digitize a phone signal in the previous lecture.
- Once digitalized, the signal will be a sequence of bits (here are grouped by 8-bit-quantised sample):

 $...10011101 \, | \, 00111010 \, | \, 10011100 \, | \, 10110011...$


 If I want to visualize a series of bits in time, I can do it by giving two different amplitude values to the 1 and 0:

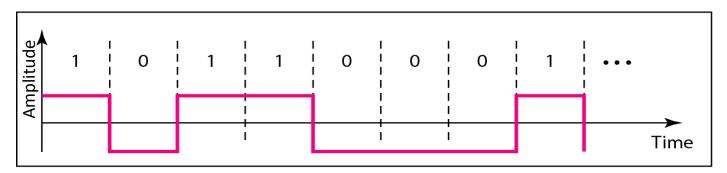


I select a suitable time slot and transmit a bit on each time slot. For example positive amplitude value for a 1 and a negative value for a 0

Transmission of digital signals

This is what is called the baseband signal

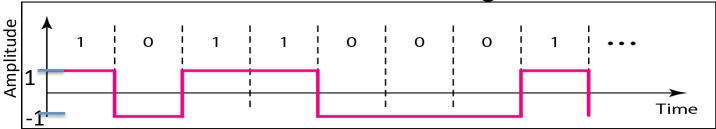

- One option we have is to transmit is as it is, one bit at a time
- In practice, using real components, the signal will look smoother
 - Remember that a perfectly square signal has infinite frequency components from the Fourier series. In order to reduce its bandwidth we can use a smaller number of components, but the signal will have smoother edges

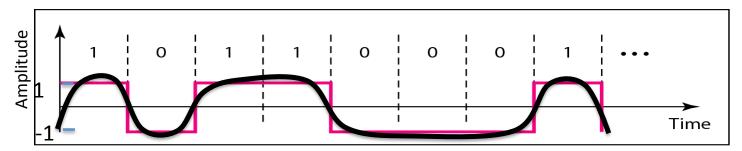

Multi level transmission


- Another option is to parallelize the signal and use a multi-level transmission format
- Suppose I have the sequence 1001101100
- Instead of seeing it as individual bits, I could see it as a group of bits, for example groups of two bits: {10, 01, 10, 11, 00}, then transmit them as 5 groups of two.
- The problem is that for each group I have 4
 possibilities (or levels): 00, 01, 10, 11, so I need to
 reflect this in my signal

Multi level transmission

- A multi-level transmission uses more than two values in the amplitude axis.
- If I allow 4 amplitude levels for my signal, we have




My signal 10 01 10 11 00 01, can be encoded as follows

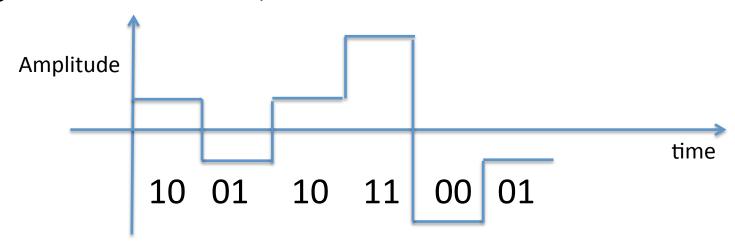

Bit/s vs Baud

 Consider this signal. It has 6 time slots within 1 second of transmission time, but it transmits 12 bits in that time.

Amplitude



- Do I consider the number of slots (i.e. 6) or the number of bits (i.e. 12)?
- The bit rate (R) is 12 bit/s
- The **signal rate (S)** is 6 baud, this is the number of slots per second.
- Their relation is S=R/n, where n is the number of bits per slot

If I organize my signal 100110010011 in groups of three: 100 110 010 011, how many levels do I need to encode it?

- A. 4 levels
- B. 8 levels
- C. 12 levels
- D. 16 levels

Answer to the multi-level transmission question

- With group of three bits I have the following possibilities: 000, 001, 010, 011, 100, 101, 110, 111
- So I will need 8 levels...
- In general the number of levels <u>L=2ⁿ</u> where n is the size of the group

Quantization vs. multi-level transmission

- Don't confuse quantization and multi-level transmission!
- They both use the same formula L=2ⁿ, n=log₂L, however
 - Quantization is used when we want to transform an analogue signal into a digital one. But it does not imply the transmission of the signal
 - Multi-level transmission concerns ways to transmit a signal which is already digital


- You need to encode an analogue signal with phone quality and then transmit it using a 3-bit baseband modulation. Find the bit rate and baud rate of the signal.
- First remember that a phone signal is encoded at 8KHz, quantized at 8 bits

 First sample Second sample
 - → R=8*8=64Kb/s
 - What we do is to group 8 bits for each sample: 10011010 | 00110010 | ...
- Although we logically group them in groups of 8 when we want to transmit them, we consider them as individual bits:
 - 1001101000110010...
- A 3-level modulation will group them again in groups of 3 bits in order to transmit them:
 - -100|110|100|011|001|0...
 - → S=64/3 =21.3Kbaud

The bandwidth of a digital signal is proportional to its bit rate


 However, it also depends on other factors, such as type of encoding (we skip this part), number of levels of the encoding,...


 If we look at a square wave, we can see that we can encode two bits for each period.

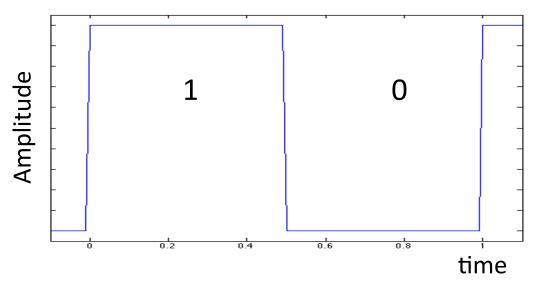


- So a square wave of frequency 1 Hz can encode 2 bits
- In general a square wave of frequency f can encode 2f bits

 However, if we consider that the baseband signal is a square wave, then we would need a very large bandwidth to transmit information, because the frequency components (harmonics) are many (infinite in the ideal case)

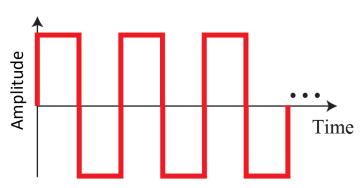

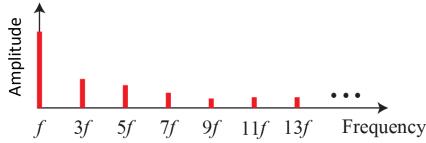


 If we approximate the square wave with just the first harmonic:

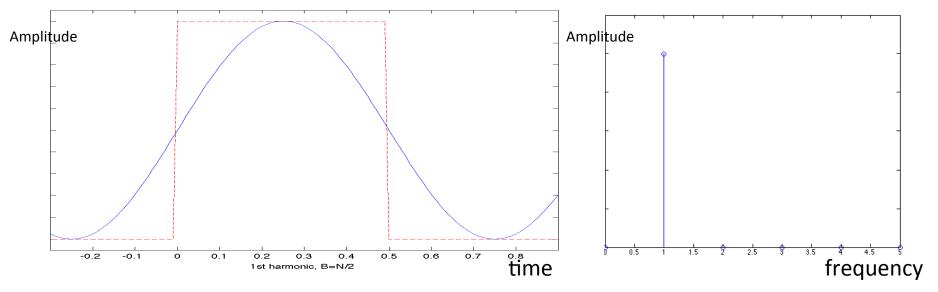

- The bandwidth will be 1 Hz
- So with a bandwidth of 1Hz, I can transmit 2 bits per second
- In general with a bandwidth of B Hz, I can transmit 2B bits per second

Bandwidth of a Multi-level signal

- If we use a multilevel coding system (or modulation), we could increase the bit rate of our transmission.
- Since the bandwidth depends mostly on the baud rate, if we pack more bits into the same period we can increase the data rate, using the same bandwidth

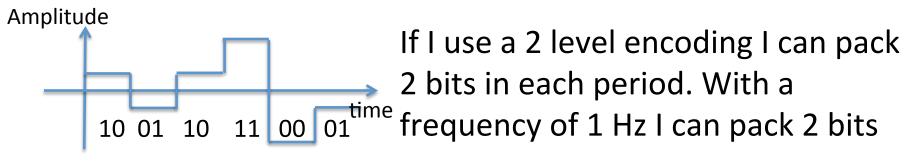

For a Multi-level signal the <u>maximum theoretical</u> bitrate I can achieve is: R=2 x B x log₂L (Nyquist bit rate)

 Given an analogue signal, what bandwidth do I need to transmit it over a digital system?

Additional info required:

- Bandwidth of analogue signal I need to have this information
- Sampling frequency \rightarrow determined by $2f_{max}$. I know f_{max} once I know the signal spectrum.
- Quantization bits \rightarrow I need to have this information, let's say 8 bits
- Transmission levels → I need to have this, let's say 16-level transmission.

What is the required bandwidth if we need to send 2 Mbps using 2-level (i.e., 1 bit) baseband transmission?

- A. 500 KHz
- B. 1 MHz
- C. 2 MHz
- D. 4 MHz

What is the required bandwidth if we need to send 2 Mbps using 16-level (i.e., 4 bits) baseband transmission?

- A. 250 KHz
- B. 500 KHz
- C. 2 MHz
- D. 8 MHz

Transmission of digital signals through modulation


- So far, we have discussed baseband transmission. However, similar to analogue signals, modulation brings many advantages:
 - Higher capacity, enables wireless transmission, smaller antennas, ability to multiplex signals
 - For example, to transmit the signal over an 800 MHz
 GSM channel,...
- Digital signals are modulated using digital modulation formats

Modulation of digital signals

- Remember what is the meaning of modulation:
 - Take a carrier wave at a certain frequency (the carrier is the same, a sine wave)
 - Use your information to change some parameter of the carrier wave
 - The carrier wave will transport the information while it propagates
- In digital transmission, we usually change the amplitude, the frequency, or the phase of the carrier
- Differently from the analog case however, now the changes in amplitude, frequency or phase are DISCRETE, i.e. we can only use a certain number of different amplitudes, frequencies or phase shifts!


Amplitude Shift Keying - ASK

- The simplest ASK modulation is with only 2 levels, where I use a certain amplitude value A for a 1 bit and a <u>null amplitude</u> for a 0 bit
- This is also referred to as On-Off keying (OOK)

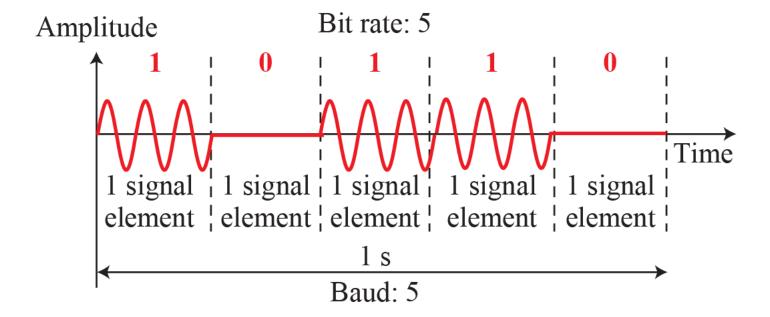


M-ASK

- ASK can also be modulated by a multi-level signal, again the implementation is easy, just a multiplication between carrier and base-band
- Remember that M is the number of levels, not the number of bits!

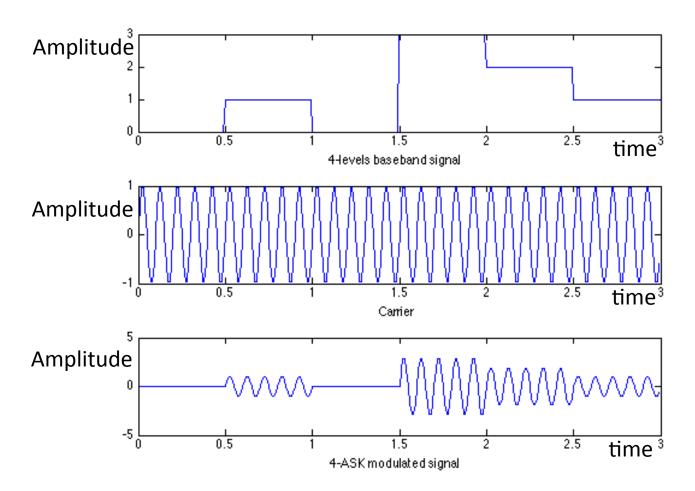

M-ASK bandwidth occupation

- We have seen that for analog modulation the bandwidth of a modulated signal is twice the bandwidth of the baseband signal, $B_{mod}=2B_b$.
- We have also seen that the rate of a digital signal is related to its baud rate (S) and is $B_b=S/2$.
- Ideally for an ASK modulation, I would have a $B_{mod} = 2S/2 = S$. So the bandwidth of the modulated signal is in theory equal to the baud rate.

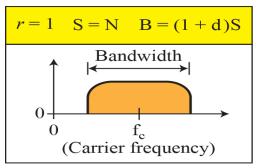

 More in general, because of non-ideal effects: the bandwidth of an ASK is B_{mod} = (1+d) x S, where d is between 0 and 1.

We have an available bandwidth of 100 kHz which spans from 200 kHz to 300 kHz. What are the carrier frequency and the bit rate if we modulated our data by using 8-ASK with d = 0?

Solution

The middle of the bandwidth is located at 250 kHz. This means that our carrier frequency can be at fc = 250 kHz. We can use the formula for bandwidth to find the bit rate (with d = 0).


$$B_{mod} = (1+d) \times S = (0+1) \times S = S = 100KHz$$

$$\rightarrow$$
 S=B_{mod} = 100KHz = 100 Kbaud

→
$$S=R/3$$
 → $R=S*3 = 300$ Kb/s


Frequency Shift Keying - FSK

 FSK modifies the frequency of the carrier to encode the different bits. In a 2-FSK we use a frequency f₁ to represent a 1 bit, and another frequency f₂ to represent a 0 bit.

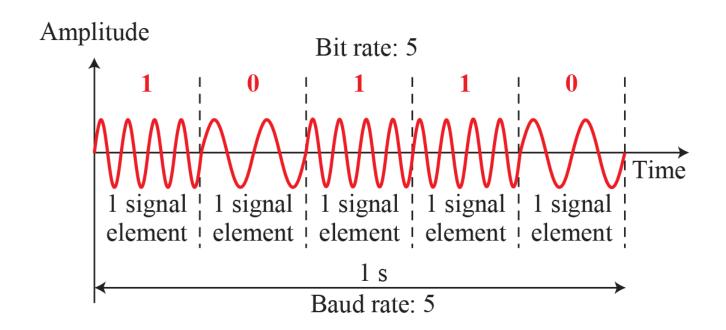


M-FSK

FSK can also be modulated by a multi-level signal.

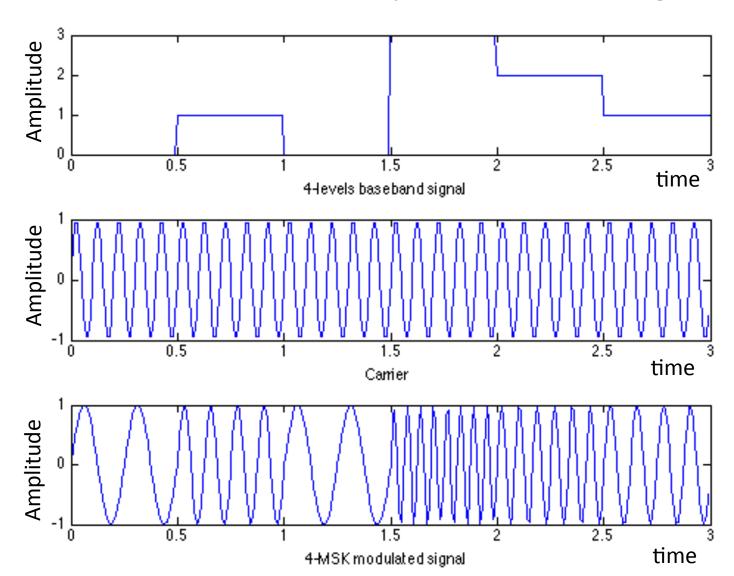

M-FSK bandwidth occupancy

- If we think of 2-FSK as two OOK signals, one at frequency f_1 and the other at frequency f_2 , we get $\mathbf{B}_{mod} = (1+d) \times S + 2\Delta f$, where $2\Delta f = |f_1 f_2|$
- 2Δf needs to be at least equal to S to be demodulated

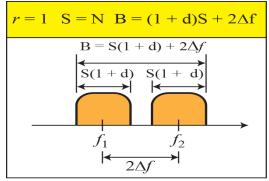

- For an M-FSK signal, I need one OOK modulated signal for each level:
 - \rightarrow B_{mod}=(1+d) x S + (L-1)x2 Δ f
- Since however the difference $2\Delta f$ needs to be at least equal to S, this becomes $B_{mod}=(1+d) \times S + (L-1)\times S = S+Sd+SL-S$
 - \rightarrow B_{mod}= S x (L+d), with d between 0 and 1
- In the ideal case, with d=0, B_{mod}=S x L

We have an available bandwidth of 100 kHz which spans from 200 KHz to 300 kHz. What should be the carrier frequency and the bit rate if we modulated our data by using 2-FSK with d = 1?

Solution

This problem is similar to the one for ASK, but we are modulating by using FSK. The midpoint of the band is at 250 kHz.

$$B_{mod} = (L+d) \times S = (1+2) \times S = 100KHz$$

 $\Rightarrow 3S=100KHz \Rightarrow S=33.3Kbaud \Rightarrow R=s*1 = 33.3Kb/s$


We need to send data 3 bits at a time at a bit rate of 3 Mbps, using M-FSK. The carrier frequency is 10 MHz. Calculate the number of levels (different frequencies), the baud rate, and the bandwidth, if d=0.

Solution

We can have $L = 2^3 = 8$.


The baud rate is S = 3 Mb/s / 3 = 1 Mbaud.

$$B_{mod}$$
=(L+d) x S=L x S = 8 x 1 = 8MHz

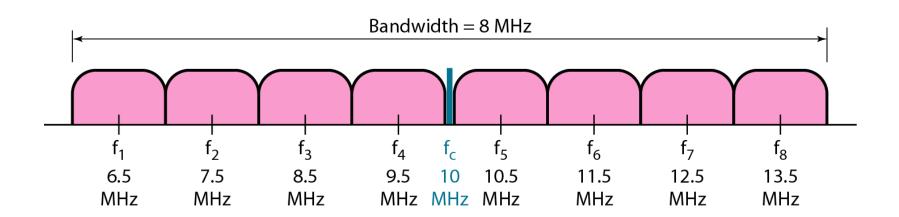


Phase Shift Keying - PSK

 PSK modifies the phase of the carrier to encode the different bits. In a 2-PSK we use a phase p₁ to represent a 1 bit, and another frequency p₂ to represent a 0 bit.

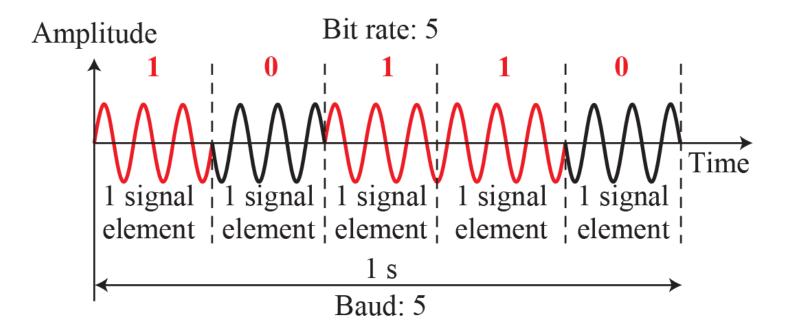

M-PSK bandwidth occupancy

- The bandwidth occupancy of PSK is the same as that of ASK, as we only use one carrier frequency.
- So for a PSK we have B_{mod} = (1+d) x S, where d is between 0 and 1.

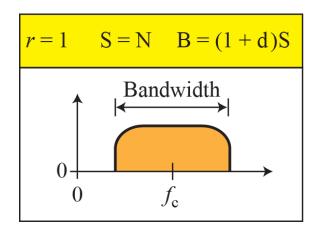

Find the bandwidth of a signal transmitting at 12 Mbps for QPSK (4-PSK). The value of d = 0.

Solution

For QPSK, 2 bits are carried by one signal element. So the signal rate (baud rate) is:

$$B_{mod} = (1+d) \times S$$

R= 12 Mbps, but we transmit 2 bits per slot, so S=R/2= 6 Mbaud.


With a value of d = 0, we have B = S = 6 MHz.

M-PSK good and bad

- PSK is good as it does not change the amplitude and is less susceptible to non linearity and noise that affect the signal amplitude
- However, the higher the M level, the less the phase difference between the M levels. So it becomes difficult to distinguish them
- There is a fourth modulation type called Quadrature Amplitude Modulation (QAM) which merges the benefits of ASK and PSK


Concept of a constellation diagram


- Constellation are used to give a graphical representation of digitally modulated signals
- They are used to represent ASK, PSK, and a mix of the two, called QAM
- The distance of the point from the origin is the amplitude, and the angle is the phase
- For amplitude modulation, the phase is always null, so we only show the x axis

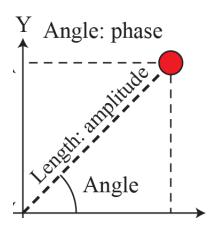



Notice that both axes are now amplitudes

 Show the constellation diagrams for ASK (OOK), BPSK, and QPSK signals.

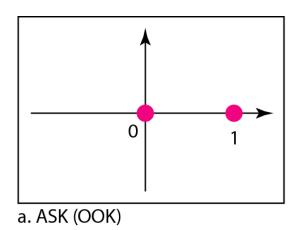

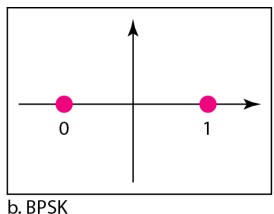

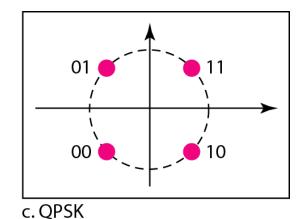

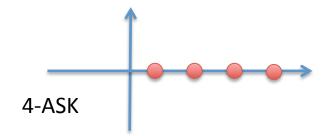

Quadrature Amplitude Modulation - QAM

• The idea behind QAM is to use two carriers, one in-phase and the other in quadrature (i.e. 90 degrees, or $\pi/2$ apart), with different amplitude levels for each carrier.


 QAM is one of the most used modulation both in wireless and electrical wired transmission (e.g., old modems, DSL).

M-ASK, M-PSK constellation diagrams

For M-ASK I need to fit all levels into one axis




 For PSK I can use 2 axis because I can use phase difference, but since I only use the phase (i.e., amplitude is always 1), I need to fit into a circle

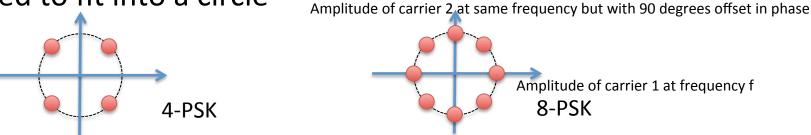

• The more levels I use, the more my points become squeezed, the more likely it will be to have a transmission error. For example, PSK is only used up to 8 levels, i.e. 8-PSK, after which we use QAM.

QAM constellation diagram

Amplitude of carrier 2 at same frequency but with 90 degrees offset in phase

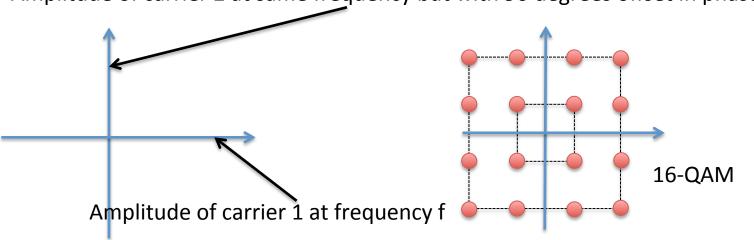

- QAM uses the two axis, but since it allows different amplitudes it can use the entire 2-dimensional space, instead of constraining levels to be all in one axis (e.g., for M-ASK) or within a circle (e.g., for PSK)
- Each point is determined by two values, one for each axis: one value for the carrier 1 and another for the carrier 2
- QAM is used commercially up to 1024 levels (i.e., each symbol encodes a group of 10 bits)

Bandwidth occupancy of QAM

- The bandwidth occupancy for QAM is
 B_{mod} = (1+d) x S, with d between 0 and 1.
- Remember that S is the baud rate (or symbol rate), not the bit rate.
- So the higher the level of modulation I use, the higher the data rate I can fit into a given bandwidth!


- What is the Bandwidth occupancy of a 1Mbps signal modulated with QAM?
 - An M-QAM carries log₂M bits per symbol.
 - The bit rate $R = S \times log_2 M$ and $B_{mod} = (1+d) \times S = (1+d) \times R / log_2 M$
 - \rightarrow for d=1, B_{mod} = 2 x R / log₂M
- If I use 16-QAM for example $B_{mod} = 2 \times 1 \text{Mbps} / 4$ =500kHz
- If I use 256-QAM, $B_{mod} = 2 \times 1 \text{Mbps} / 8 = 250 \text{KHz}$
- If I use 1024-QAM, $B_{mod} = 2 \times 1 \text{Mbps} / 10 = 200 \text{KHz}$

- The other way around, what is the bit rate I can achieve if I have to fit a modulated QAM signal within 1 MHz of bandwidth?
 - An M-QAM carries log₂M bits per symbol.
 - The bit rate $R = S \times log_2 M$ and $B_{mod} = (1+d) \times S = (1+d) \times R / log_2 M$
 - \rightarrow for d=1, R = B_{mod} x log₂M /2
- If I use 16-QAM for example R= 1MHz x 4 / 2 = 2Mb/s
- If I use 256-QAM, R= 1MHz x 8 / 2 = 4Mb/s
- If I use 1024-QAM, R= 1MHz x 10 / 2 = 5Mb/s


If by using higher levels of QAM we get higher data rate for the same bandwidth, why don't we always use very large number of levels?

- A. Because noise would affect the symbols too much
- B. Because it would require too much power
- C. It is not a problem and we can use a very high number of levels
- D. It can only be done in optical communications systems

Answer 1

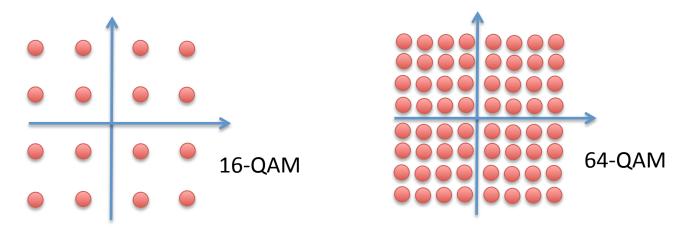

- You can see that putting more levels squeezes
 the symbols → errors due to noise are more likely
- → You can use higher levels when your transmission channel has less noise

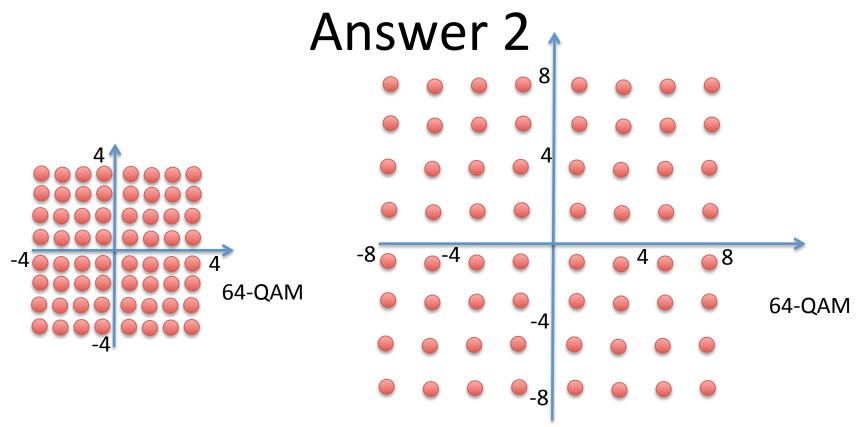

- If you want to space them more you can increase the higher limits for the maximum amplitude
- However, this requires higher transmission power!
- There is a limit to the maximum power you can transmit at:
 - Technological,:
 - Integration level of components will limit maximum available power
 - Higher power creates problems with nonlinearities in physical devices causing signal distortion
 - Legislative, i.e., maximum transmission power is limited to reduce interference and for health reasons