Error Detection and Correction

1) see lecture slides

2) Parity Check

a) 0110101**0** 1101010**0** 1010111**1** 1100110**0** 1000100**0** 0111001**0** 1110011**1**

b)
0110101**0**
1101010**0**
1010111**1**
1100110**0**
1000100**0**
0111001**0**
1110011**1**
11000000

c) Parity checks are simple to compute but can only detect single-bit errors.

3) Cyclic Redundancy Check (CRC)

a) Sender Side

Divisor in polynomial form:
x^8+x^2+x+1

Divisor in binary form:
100000111

Data:
1011001001001011

Sender calculates:
1011001001001011**00000000** (Data extended by m zeros where m is the power of the polynomial form) divided by 100000111

CRC:
10010011

Sender sends:
101100100100101110010011

Receiver calculates:
101100100100101110010011 divided by 100000111

Remainder of this calculation after error-free transmission should be 0.

b) Receiver Side

If the left-most bit of the data is inverted the calculation will return a result other than 0. This will indicate to the receiver that the data have been corrupted.

```
Sender Calculation:          Receiver Calculation

10110010010010110 0000000    10110010010010111 0010011
100000111                    100000111
---------                    ---------
 011000111                    011000111
 000000000                    000000000
 ---------                    ---------
  110001110                    110001110
  100000111                    100000111
  ---------                    ---------
   100010010                    100010010
   100000111                    100000111
   ---------                    ---------
    000101011                    000101011
    000000000                    000000000
    ---------                    ---------
     001010110                    001010110
     000000000                    000000000
     ---------                    ---------
      010101101                    010101101
      000000000                    000000000
      ---------                    ---------
       101011011                    101011011
       100000111                    100000111
       ---------                    ---------
        010111000                    010111001
        000000000                    000000000
        ---------                    ---------
         101110000                    101110010
         100000111                    100000111
         ---------                    ---------
          011101110                    011101010
          000000000                    000000000
          ---------                    ---------
           111011100                    111010101
           100000111                    100000111
           ---------                    ---------
            110110110                    110100100
            100000111                    100000111
            ---------                    ---------
             101100010                    101000110
             100000111                    100000111
             ---------                    ---------
              011001010                    010000011
              000000000                    000000000
              ---------                    ---------
               110010100                    100000111
               100000111                    100000111
               ---------                    ---------
                10010011                    00000000
```

3

4) Checksum – Sender Side

```
        1001 0011 0110 1100
        1100 1001 1010 1101
        1001 1000 0011 1101
                          1
                        1
                     1 0
                   1 0
              1
              1
           1
         1
       1
        -------------------
        1111 0101 0101 0110
                          1
        -------------------
Sum     1111 0101 0101 0111
        0000 1010 1010 1000
```

For verification, the calculation on the receiver side:

```
        1001 0011 0110 1100
        1100 1001 1010 1101
        1001 1000 0011 1101
        0000 1010 1010 1000
                          1
                        1
                     1 0
                   1 0
                 1
               1
             1
              1
         1
       1
       1
        -------------------
        1111 1111 1111 1110
                          1
        -------------------
Sum     1111 1111 1111 1111
        0000 0000 0000 0000
```

5) Checksum – Receiver Side

1	0	0	1	0	0	1	1	0	1	1	0	1	1	0	0	
1	1	0	0	1	1	0	0	1	0	0	0	1	1	0	1	
1	0	0	1	1	0	0	0	0	0	1	1	1	1	0	1	
0	0	0	0	1	0	1	0	1	0	1	0	1	0	0	0	Checksum
														1		
													1			
											1	0				
									1	0						
							1									
						1										
					1											
				1												
1																
1	1	1	1	1	0	0	0	1	1	0	1	1	1	1	0	
															1	Carry-Over
1	1	1	1	1	0	0	0	1	1	0	1	1	1	1	1	
0	0	0	0	0	1	1	1	0	0	1	0	0	0	0	0	Inverted sum

6) Hamming Code – Sender Side

```
1001011 1101100 1001001

100?101?1?? 110?110?0?? 100?100?1??

10011010110 11001100000 10011001111
```

7) Hamming Code – Receiver side

```
Bit 1, parity bit for 1,3,5,7,9,11
11101010000  0 (even number of 1s)
Bit 2, parity bit for 2,3,6,7,10,11
11101010000  1 (odd number of 1s)
Bit 4, parity bit for 4,5,6,7
11101010000  0 (even number of 1s)
Bit 8, parity bit for 8,9,10,11
11101010000  1 (odd number of 1s)

1010 = 10 => Single-bit error in bit 10
```

8)

a) The general layout of a HDLC frame includes a flag byte, an address, a control byte, the payload of the frame, a CRC and a flag byte. The flag byte marks the beginning and end of a frame. The address is either indicates the destination if the frame is being send by a master node or the sender if it being send by a slave node. The control byte defines the type of the frame and may include a sequence of the frame and/or a sequence number for an acknowledgement. The CRC provides a mechanism for error detection.

b)

Flow control mechanisms are implemented through the I-frames and S-frames in HDLC. The control byte of the I-frame contains a sequence number for the sender and a sequence number for acknowledgements that indicates which frame is expected next. The control byte of the S-frame have a field for a code that indicates the type of S-frame and a field for a sequence number that can be used to indicate the sequence number of the next expected frame e.g. for ready-receive (RR) frames that represent acknowledgements or the sequence number of a frame that was not received.
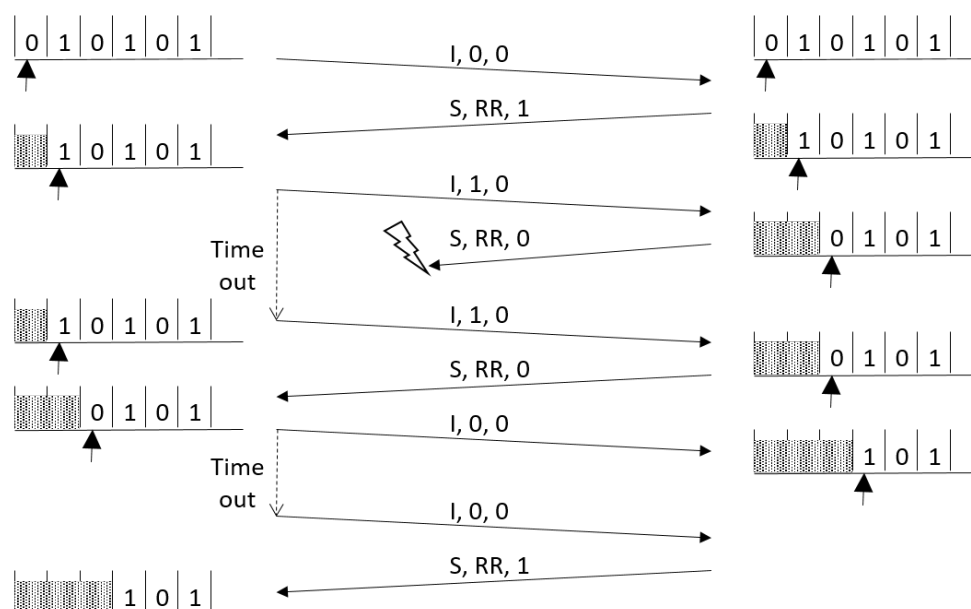
Figure 1: Stop & Wait – The diagram shows the progression of the sender – the arrow indicates the active frame – whenever it receives an acknowledgement and the progression of the receiver when it receives a frame with an expected sequence number. Whenever a timeout occurs, the sender will retransmit the current frame. **Important:** The receiver is passive and only acts when a frame has been received.
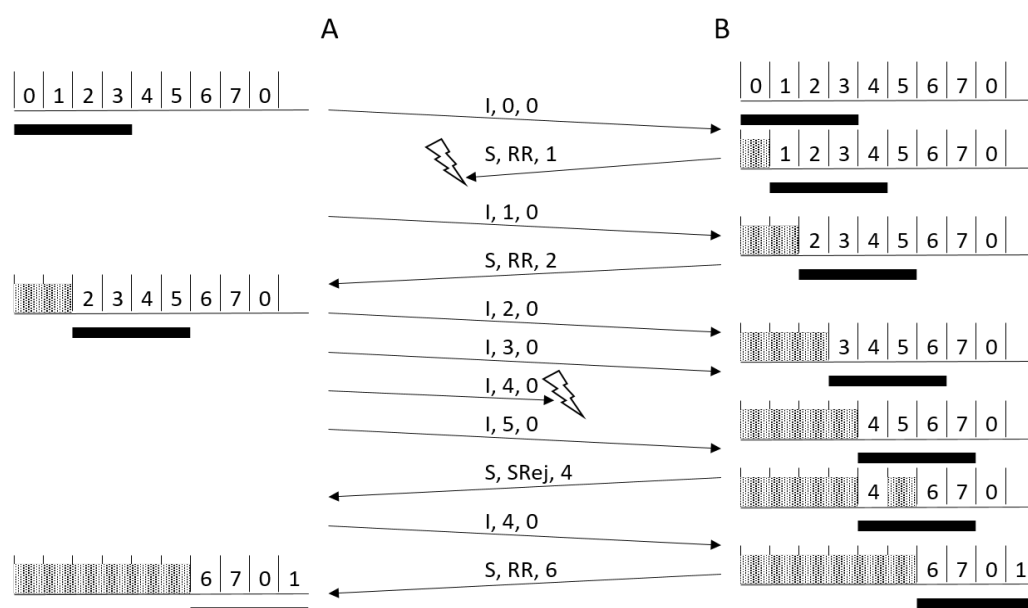

Figure 2: Selective-Repeat: The diagram shows the progression of the windows at the sender and the receiver – indicated by the bar underneath the list of frames. The window at the sender progresses whenever an acknowledgement is being received. An acknowledgement carries the sequence number that the

receiver expects next; this indicates that the receiver has received all frames
with sequence numbers up to the one indicated in the acknowledgement. The
window at the receiver progresses when the first frame in the window has been
received. When station B receives a frame without having received a
predecessor, it will transmit a selective-repeat request for the frame that
is missing.

(The above is also a good example for how to answer exam questions: Give an
introduction, state any assumptions that you making, then – if the question asks for
diagrams – draw diagrams and then include a description of the diagrams. A number of
books and publications only provide very short captions e.g. "Stop & Wait", leaving it
to the reader to interpret the figure – which is error-prone. If you provide a figure,
provide an explanation to assure that the reader understands the figure.)

9)
The frame should look like the following – starting with a flag byte, then the address,
followed by a control byte with assuming that the sequence number for both sender and
receiver are 1, followed by the payload, a checksum and finally another flag byte:

```
01111110 00001100 00010001   <200 bytes> 011001110 01111110
Flag     Address  Control byte  Payload Checksum  Flag
```