Bottom edge of this sheet = the bottom end of the tube. The left and right edges meet at the middle of a strip. Heights are marked from the tube bottom.

V5 insert concept: BT80 drilling and cutting template 1:1 (OD 66.04). Wrap the long edge round the tube, tape, mark through the centres.

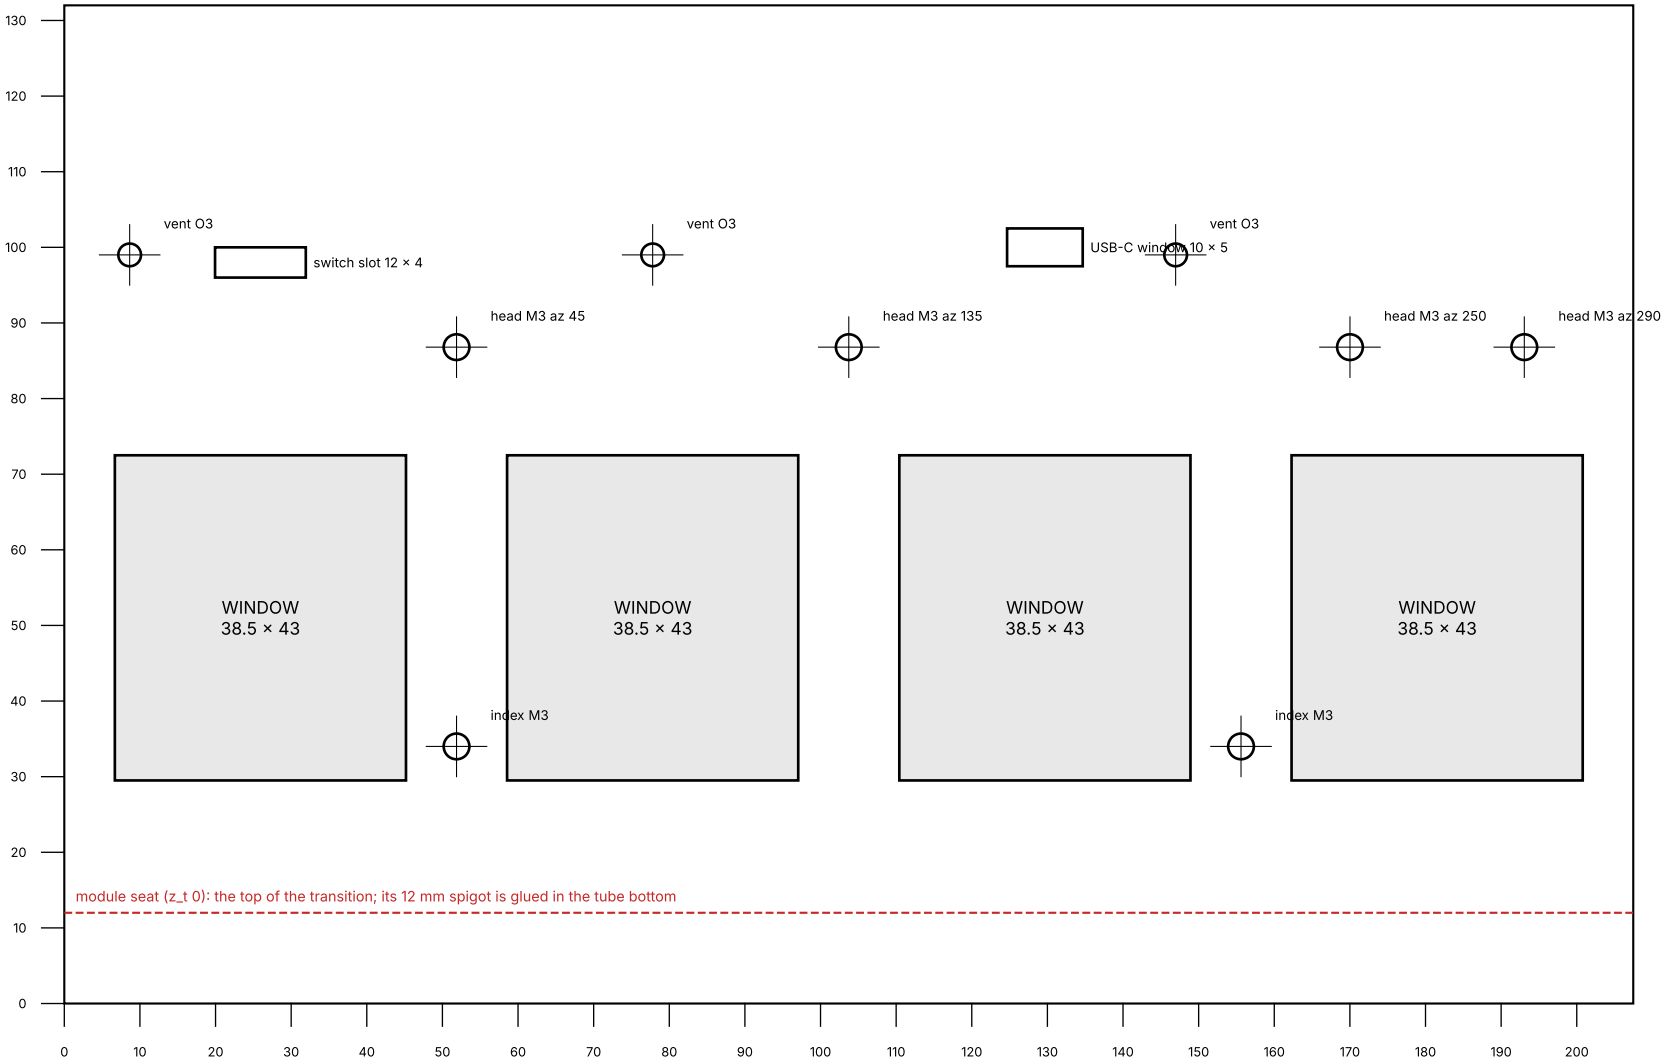

100 mm check bar: print at 100 %, measure it before you cut

Concept hole positions (head screws at 45/135/250/290 deg, index screws, vents, switch, USB-C) come from the V5 drawings, not from tested CAD: move them with the real parts in hand.