The left and right short edges meet at the middle of a strip (seam): join them on the tube before marking.

V5 module skin, cutting template 1:1 (BT80, outside diameter 66.04 mm): wrap the long edge round the tube, tape, mark through the corners

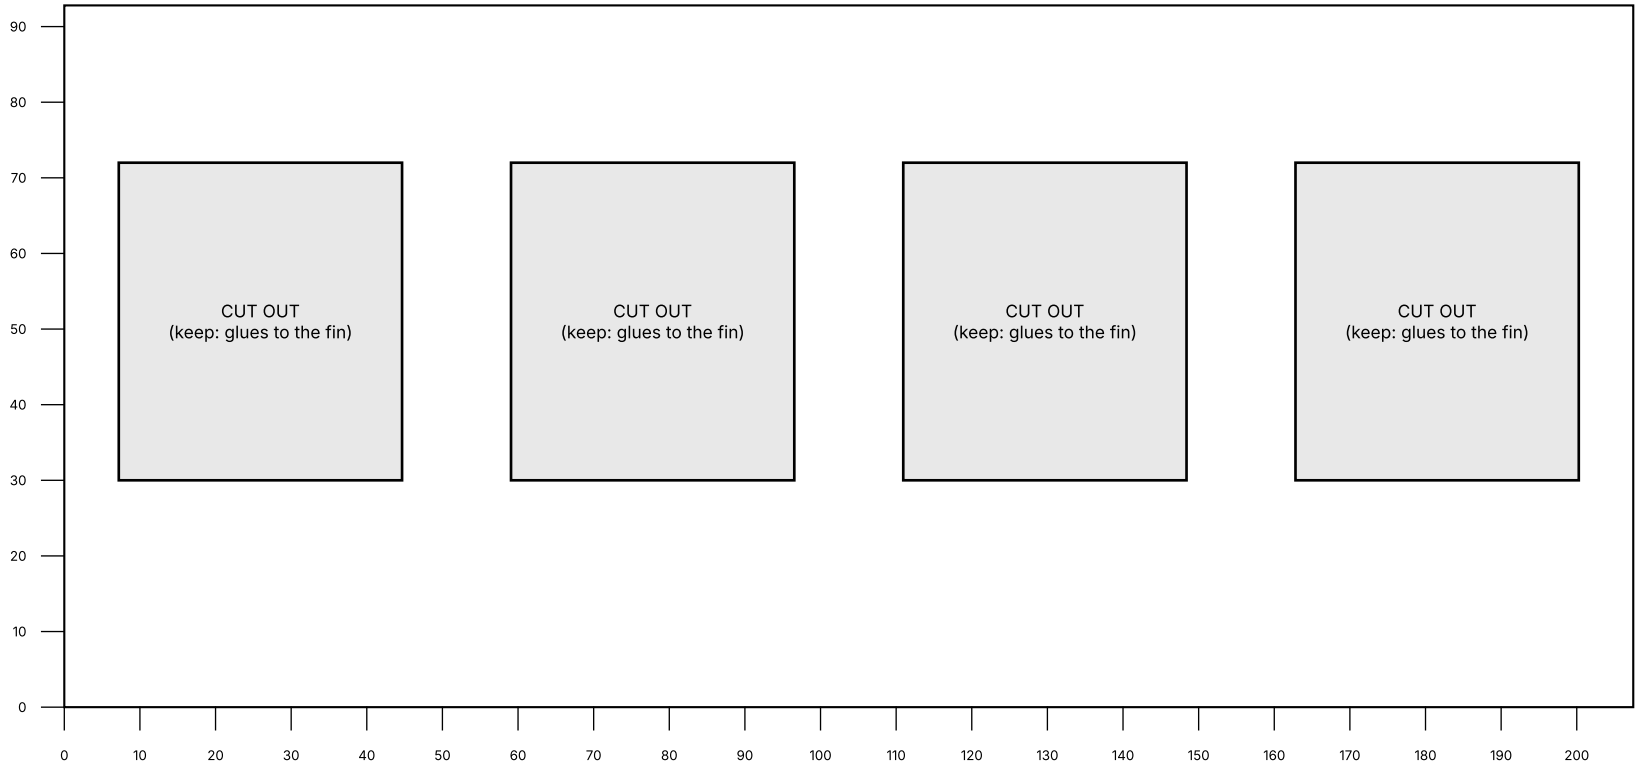

100 mm check bar: print at 100 %, measure it before you cut

Derived from the V4 model (windows 65 deg wide centred on 0/90/180/270, z 8..50 in the housing frame; skin bottom 22 mm below that frame, length 92.8; sheet starts at az -45). Check against your own tube before cutting.