

2016.0 RANGE ROVER (LG), 501-26


BODY REPAIRS - VEHICLE SPECIFIC INFORMATION AND TOLERANCE CHECKS

FENDER ALIGNMENT (G2032395)

GENERAL PROCEDURES

CHECK

1.

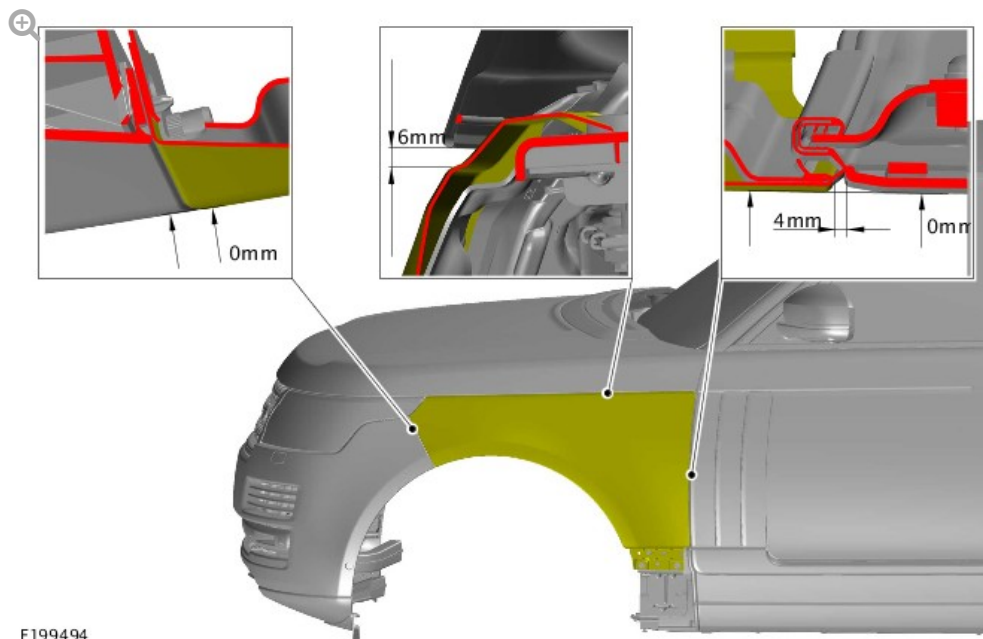

Check the gap and profiles of the fender are correct.

ADJUSTMENT

2.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3.

NOTE:

This step only required if the front right fender need to be removed.

Remove the windshield washer reservoir.

Refer to: [Auxiliary Windshield Washer Reservoir](#) (501-16 Wipers and Washers, Removal and Installation).

4. Remove the fender lower finisher.


Refer to: [Front Fender Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

5. Remove the front wheel arch liner.

Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).

6. Open the hood.

7.

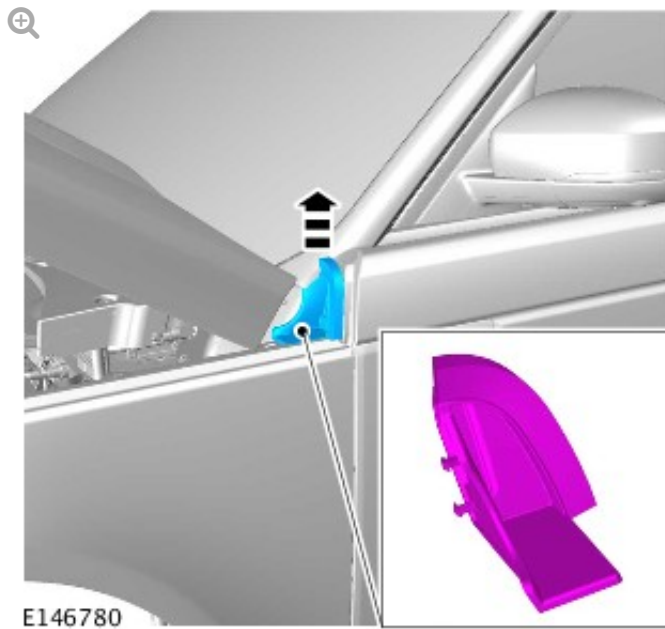


Remove the baffle plate.

8.

NOTE:

Loosen the bolt, but do not remove.

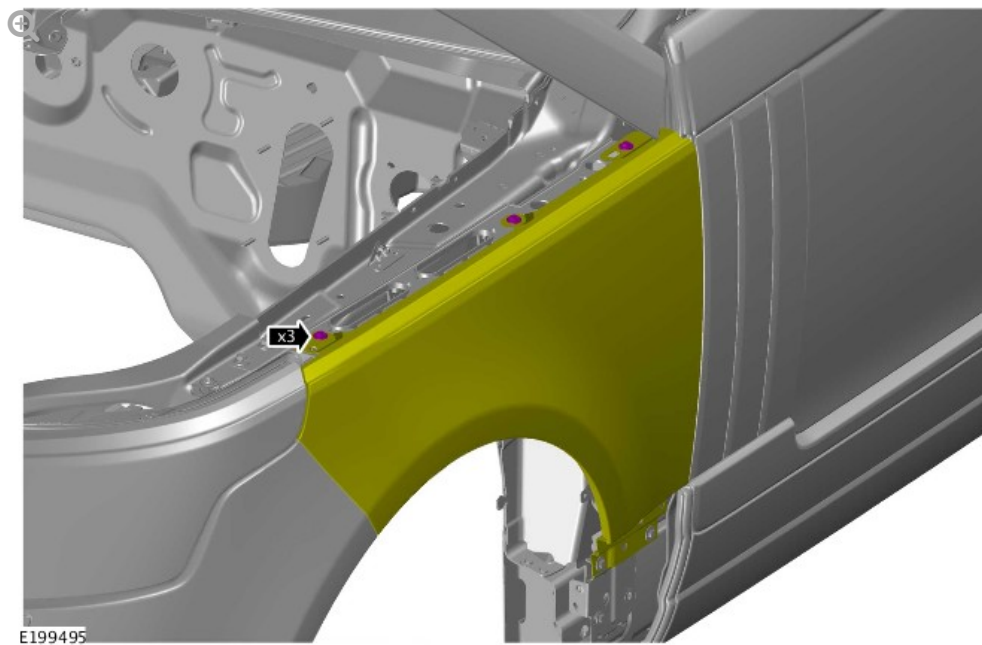


Loosen the 3 bolts.

9.

NOTE:

Loosen the bolt, but do not remove.

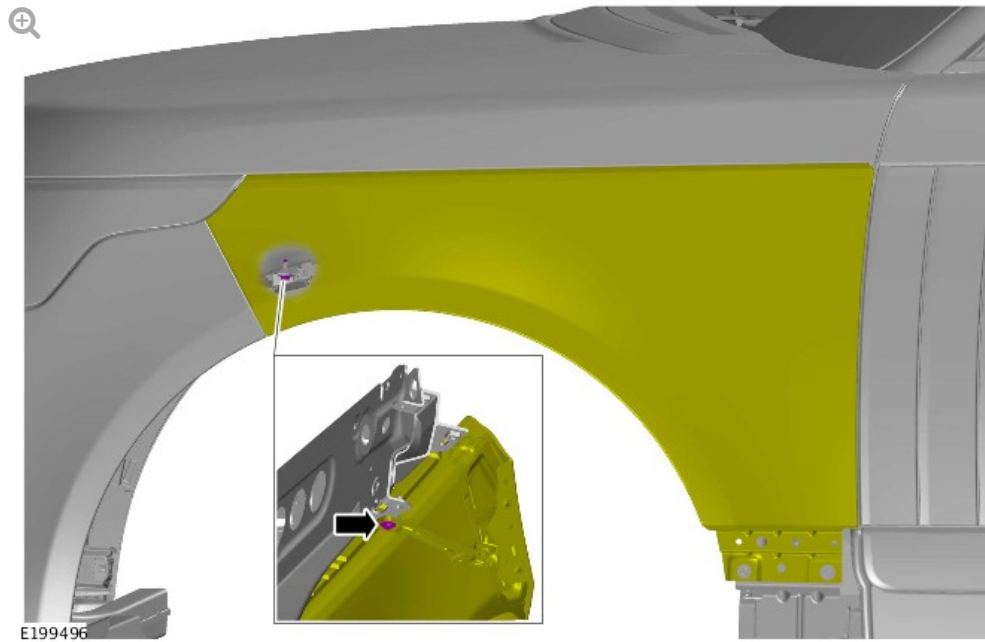


Loosen the bolt.

10.

NOTE:

Loosen but do not fully remove .

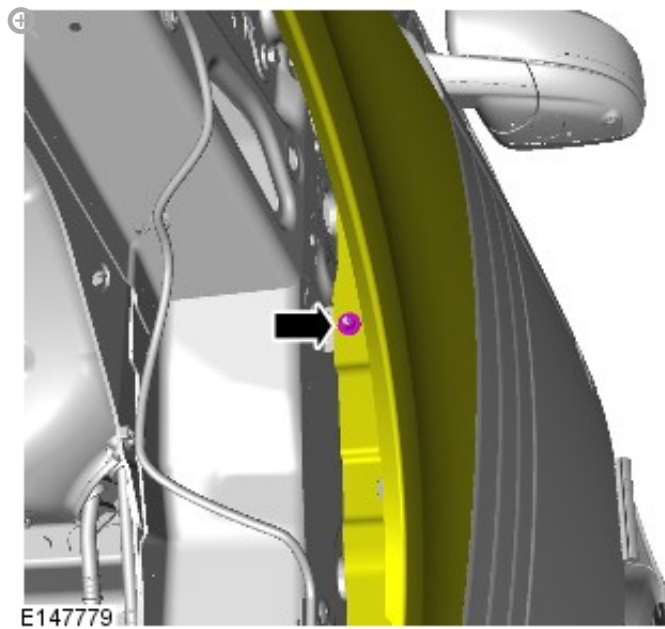


Loosen the nut.

11.


NOTE:

Loosen the bolt, but do not remove.

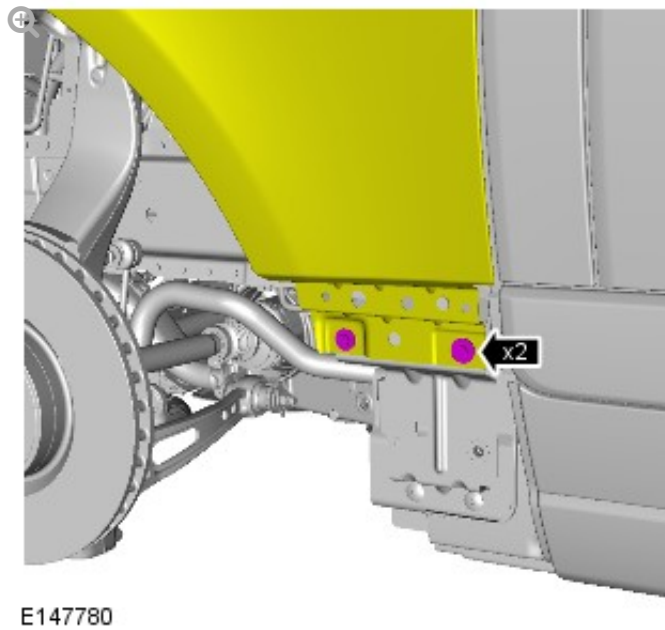

Loosen the 2 bolts.


12.

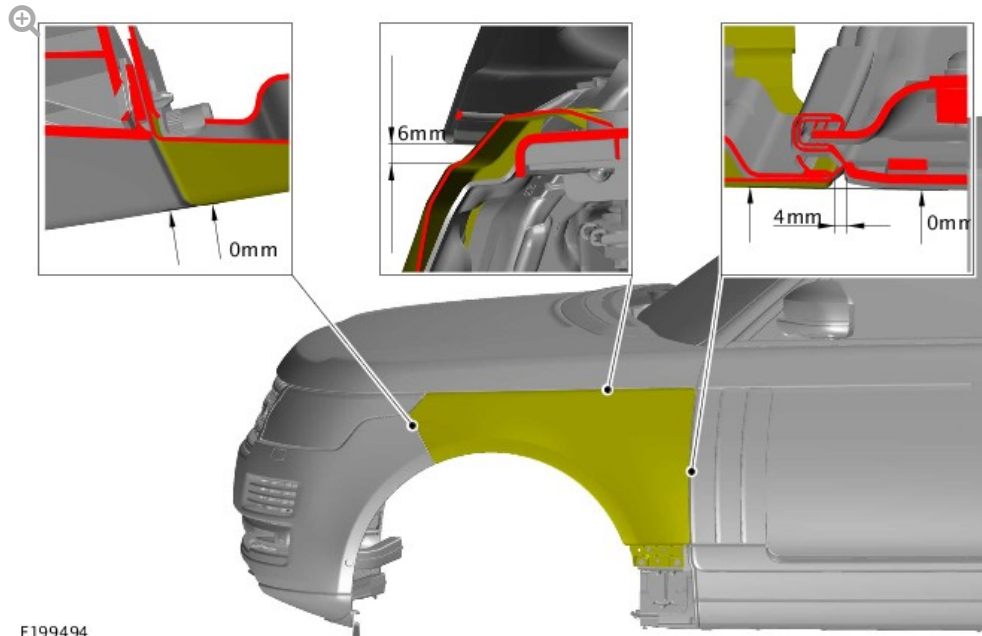

E199494

1. Align the fender gaps to the surrounding body panels as illustrated.
2. Set the fender profiles to the surrounding body panels as illustrated.


13.

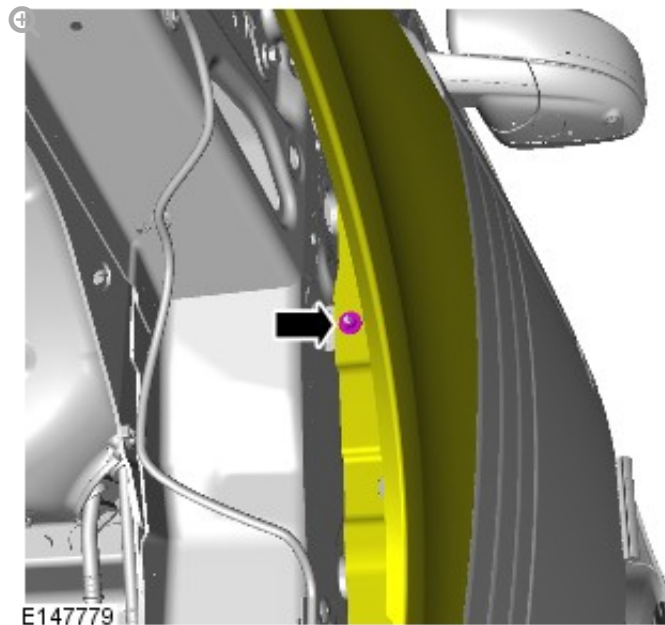

Tighten the nut.

Torque: 10 Nm

14.

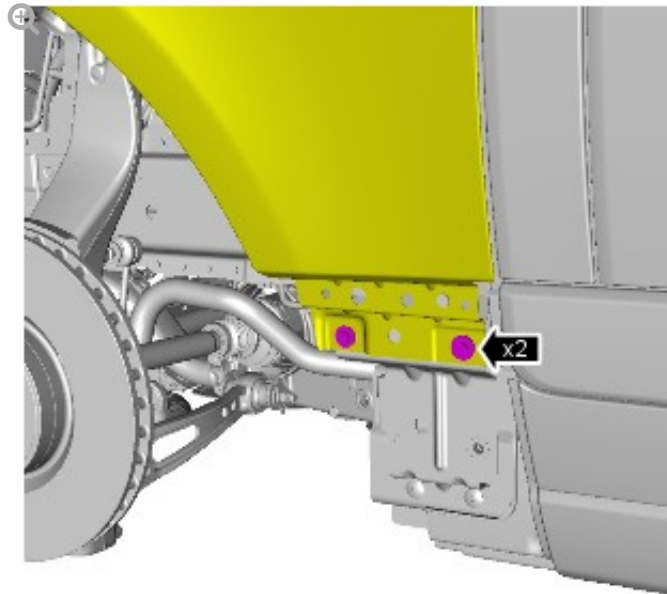


E147780

Tighten the bolts.

Torque: 10 Nm

15.

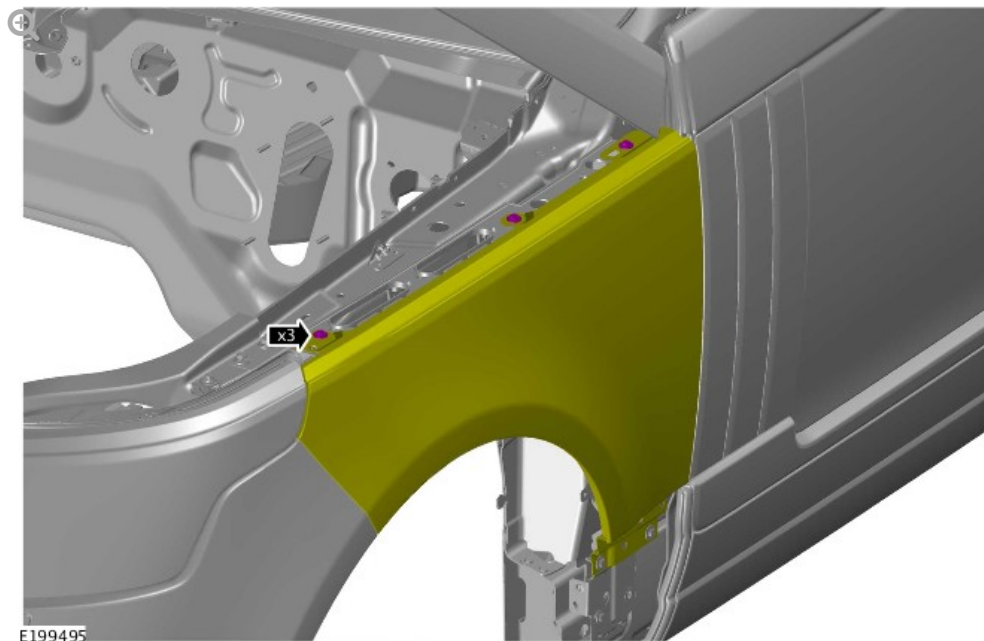


E199495

Tighten the bolts.

Torque: 10 Nm

16.

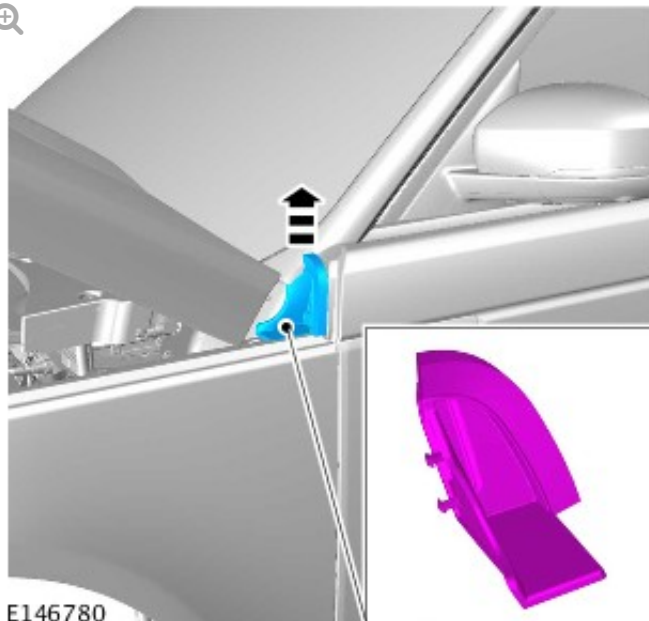


E146780

Install the baffle plate.

17. Close the hood.

18.

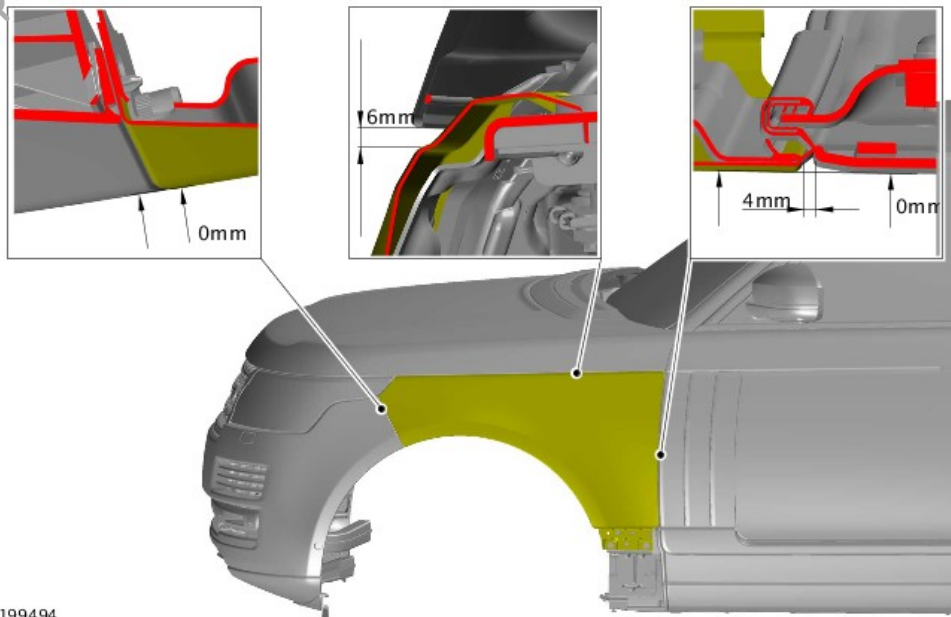

E199494

Check the gap and profiles of the fender are correct.

19.

NOTE:

This step only required if the front right fender need to be removed.

Install the windshield washer reservoir.

Refer to: [Auxiliary Windshield Washer Reservoir](#) (501-16 Wipers and Washers, Removal and Installation).

20. Install the front wheel arch liner.

Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).

21. Install the fender lower finisher.

Refer to: [Front Fender Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).