

2016.0 RANGE ROVER (LG), 501-27

FRONT END SHEET METAL REPAIRS

FENDER APRON PANEL CLOSING PANEL (G1454592)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

The fender apron panel closing panel is installed in conjunction with:

- Fender apron panel

1. 



E143219

The fender apron panel closing panel is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements. For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:


- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

-
4. For additional information, refer to: Fender Apron Panel (501-27 Front End Sheet Metal Repairs, Removal and Installation).

-
5. Release the wiring harness attached to the fender apron panel closing panel and position to one side.

-
6. Make sure that the position of the fender apron panel is marked in relation to the adjacent panels. This will aid the alignment of the fender apron closing panel on installation.
-

7.

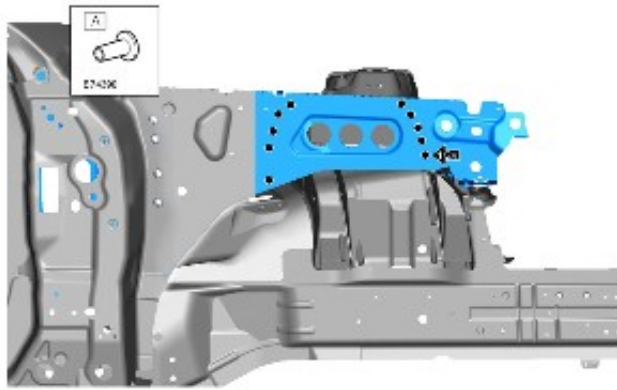


E143220

Remove the SPR's as indicated.

8.

CAUTION:


Care should be taken not to cut through into the inner panel.

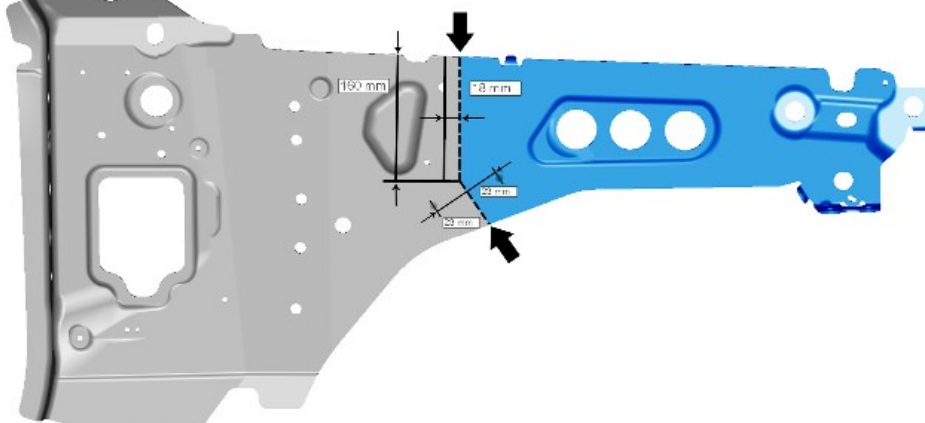

E143222

Mark out the position where the fender apron panel closing panel section MIG (metal inert gas) butt joint is to be made. Cut through the fender apron panel closing panel at this point as indicated.

9.

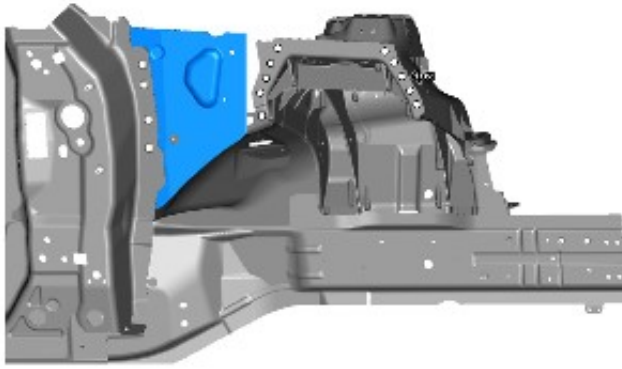

E143221

Remove the fender apron panel closing panel as indicated.

INSTALLATION

CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:


- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1. Remove rivet remnants.

2. Dress flanges where necessary.

-
3. Offer up the new panel and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
-

4.

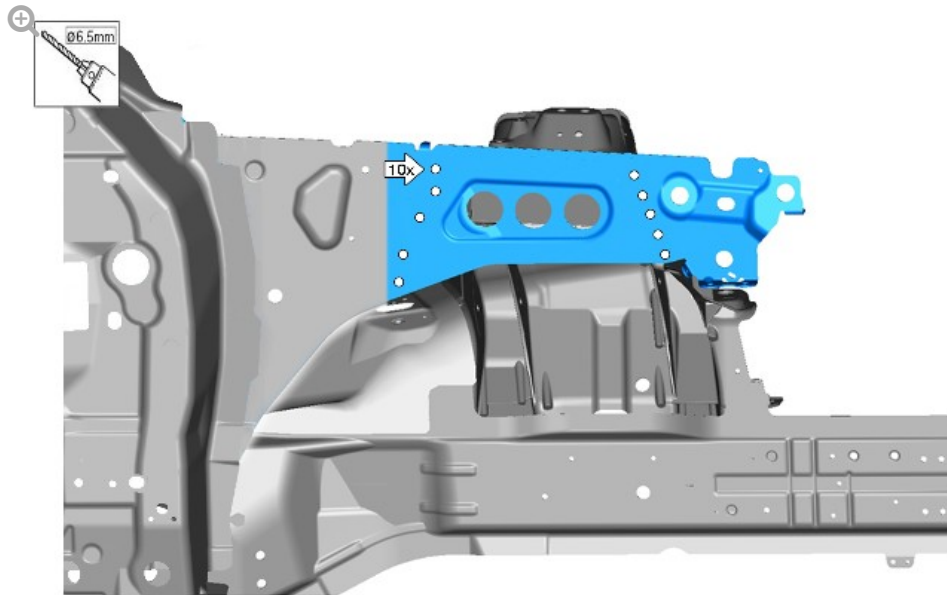

E143223


Drill holes where BSF's are to be installed as indicated.

-
5. Remove the new panel.
-
6. Deburr the drilled holes.
-
7. Using a fine bristle disc, clean and prepare the panel surfaces.
-
8. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.
-

9.

NOTES:

- Make sure the Land Rover recommended bonding material is 30mm away from the MIG welded butt joint.
- Make sure a continuous bead of adhesive surrounds fixing holes.

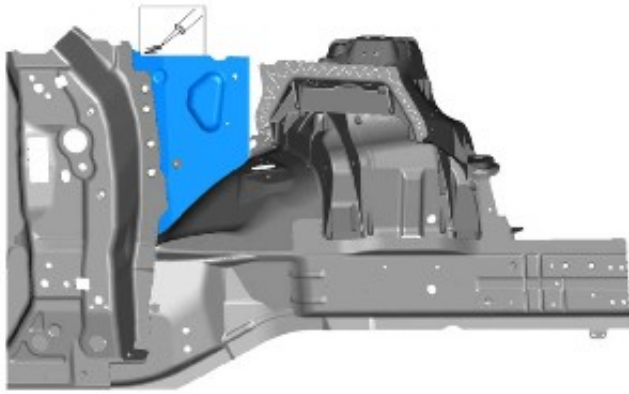


E143225

Apply a 5mm zig zag bead of the Land Rover recommended bonding material as indicated.

-
10. Offer up the new fender apron closing panel, clamp into position. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.
-


11.

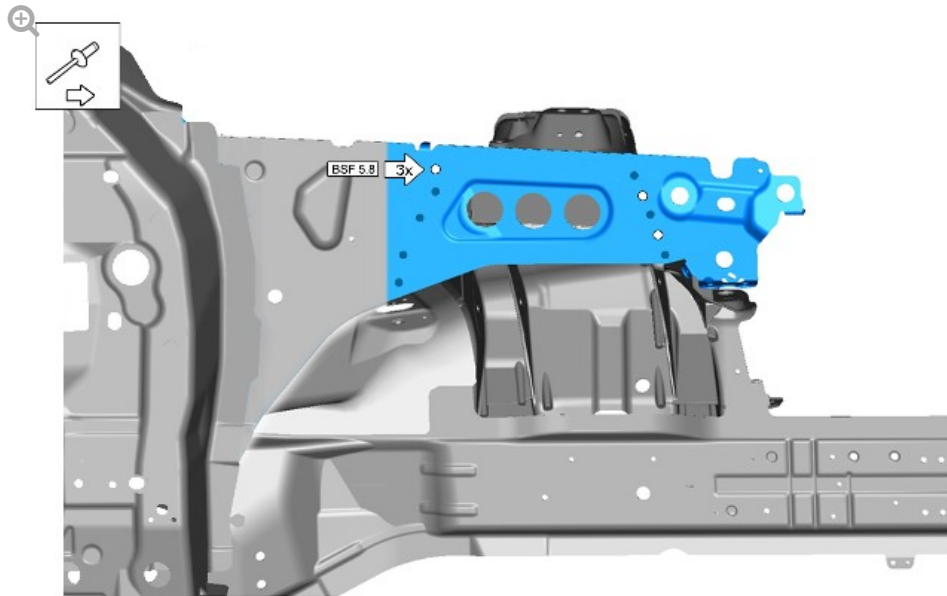

E143224

Install the BSF's as indicated.


12.

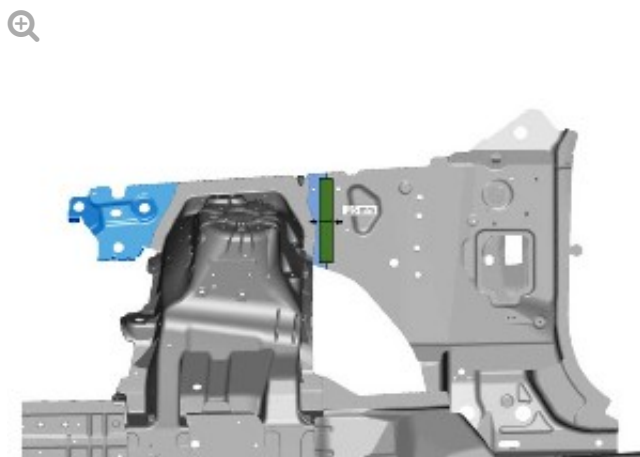

E143226

Fabricate a 25mm backing plate from the new fender apron panel closing panel remnant. Deburr the backing plate and offer up to the fender apron panel closing panel as indicated.



13.

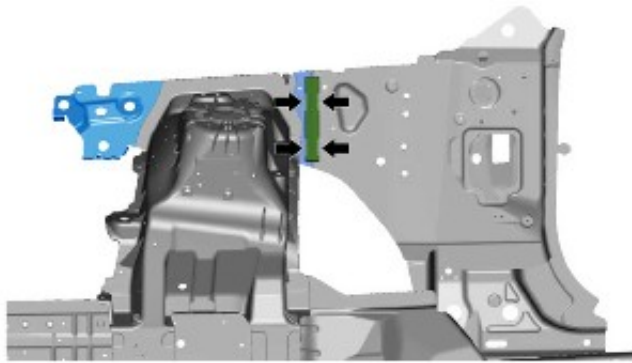

E143227

MIG weld the backing plate on to the fender apron panel closing panel using 20mm runs as indicated.


14.

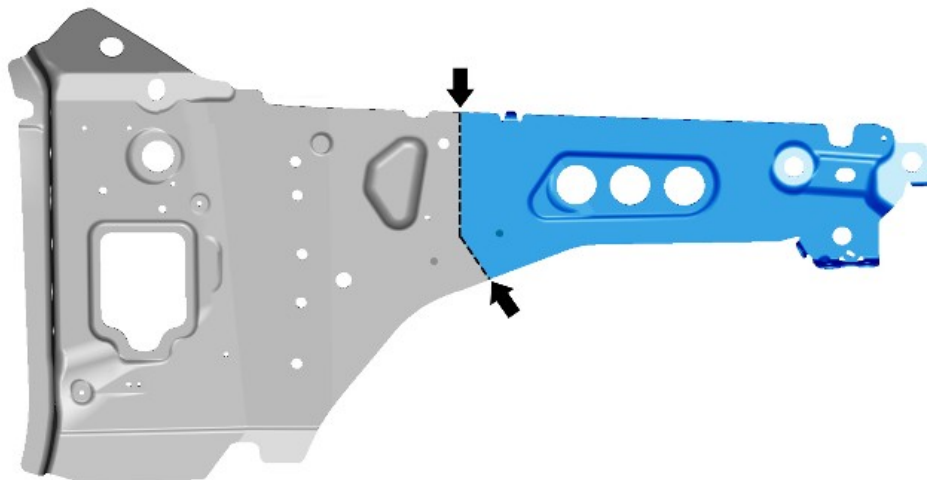

E143228

MIG weld the fender apron panel closing panel section butt joint as indicated.

15.

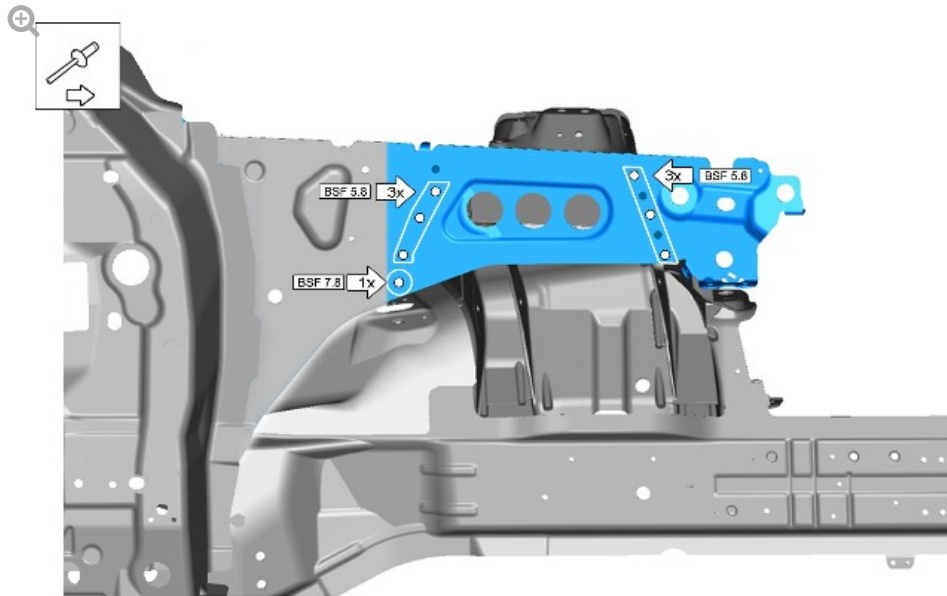

E143217

Install the BSF's as indicated.

16. Dress the MIG welded butt joints.

17. Remove any excess adhesive.

18. Make sure that any open or exposed panel joints are suitably sealed.

19. Make sure corrosion protection is applied to all areas affected by repair.

20. The installation of associated panels and components is the reversal of removal procedure.