

2016.0 RANGE ROVER (LG), 501-27

FRONT END SHEET METAL REPAIRS

FENDER APRON PANEL (G1454590)

REMOVAL AND INSTALLATION

REMOVAL

NOTES:

- The fender apron panel is installed in conjunction with:
 - Front fender
 - Fender splash shield
 - Fender mounting panel
 - Hood latch panel mounting bracket
 - Front door
 - Cowl panel grill
 - Hood
 - Windshield moulding
 - Right side indicated, left side similar.
-

1. 



E143209

The fender apron panel is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements. For additional information, refer to: Health and Safety Precautions (100-00 General Information, Description and Operation).
-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
 - Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
 - Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.
-

4. For additional information, refer to: Fender (501-02 Front End Body Panels, Removal and Installation).

5. For additional information, refer to: Fender Splash Shield (501-02 Front End Body Panels, Removal and Installation).

6. For additional information, refer to: Front Fender Mounting Panel (501-27 Front End Sheet Metal Repairs, Removal and Installation).

7. For additional information, refer to: Hood Latch Panel Mounting Bracket (501-27 Front End Sheet Metal Repairs, Removal and Installation).


8. For additional information, refer to: Front Door (501-03 Body Closures, Removal and Installation).

9. For additional information, refer to: Cowl Panel Grille (501-02 Front End Body Panels, Removal and Installation).

10. For additional information, refer to: Hood (501-02 Front End Body Panels, Removal and Installation).

11. For additional information, refer to: Windshield Moulding (501-11 Glass, Frames and Mechanisms, Removal and Installation).


12.

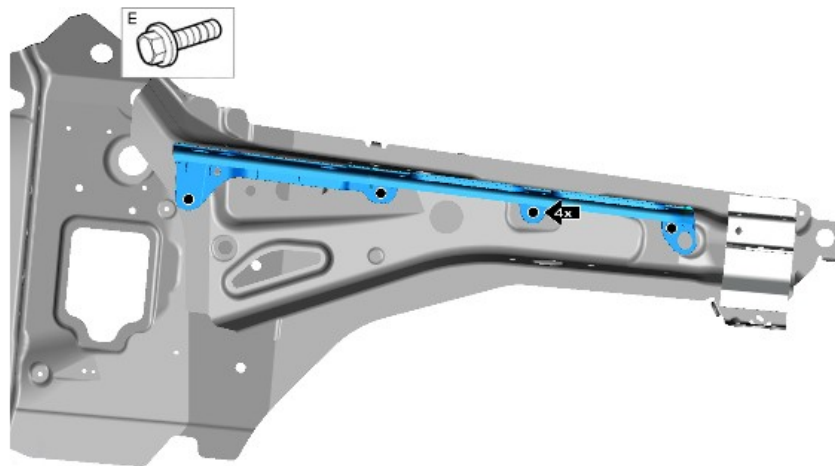

E143210

Remove the front fender mounting panel as indicated.


13.

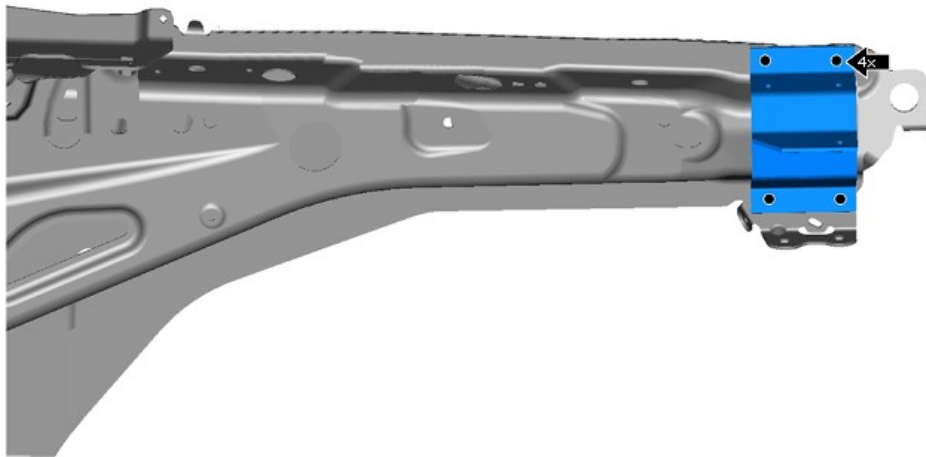

E143211

Remove the SPR's from the hood latch panel mounting bracket as indicated.

14.

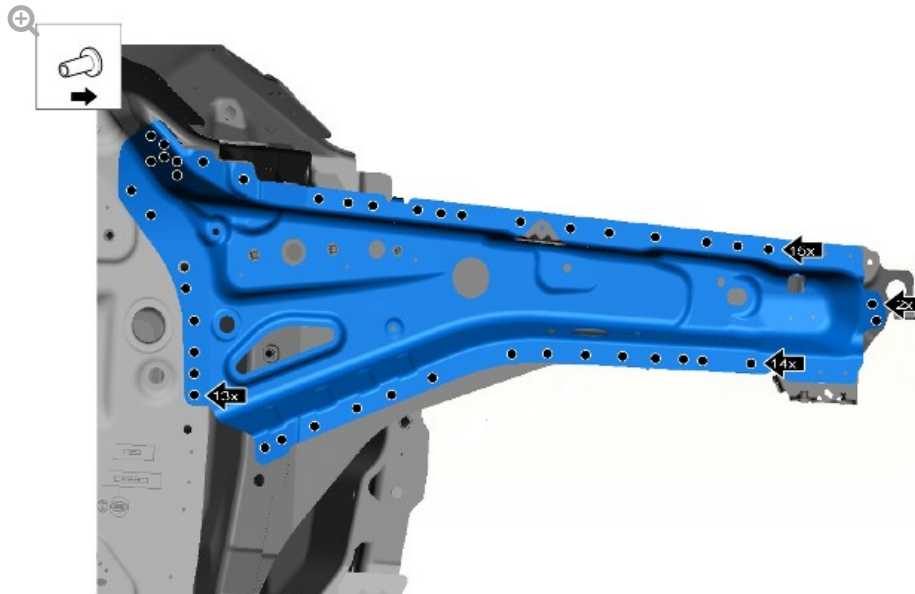

E143212

Remove the SPR's as indicated.

15. Separate the joints and remove the old panel.

INSTALLATION

CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1. Remove rivet remnants.

2. Dress flanges where necessary.
3. Offer up the new panel and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
4. Using a fine bristle disc, clean and prepare the panel surfaces.
5. Offer up the original hood strut mounting panel to the new fender apron panel, align and clamp into position.

6.

NOTE:

The hood strut mounting panel bracket is manufactured from mild steel. Make sure the mating surfaces are correctly sealed prior to installation to avoid galvanic corrosion.




E143218

Drill holes through the old hood latch panel mounting bracket into the new fender apron panel at the points where BSF's are to be installed as indicated.

7. Offer up the new fender apron panel, clamp into position. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.

8.

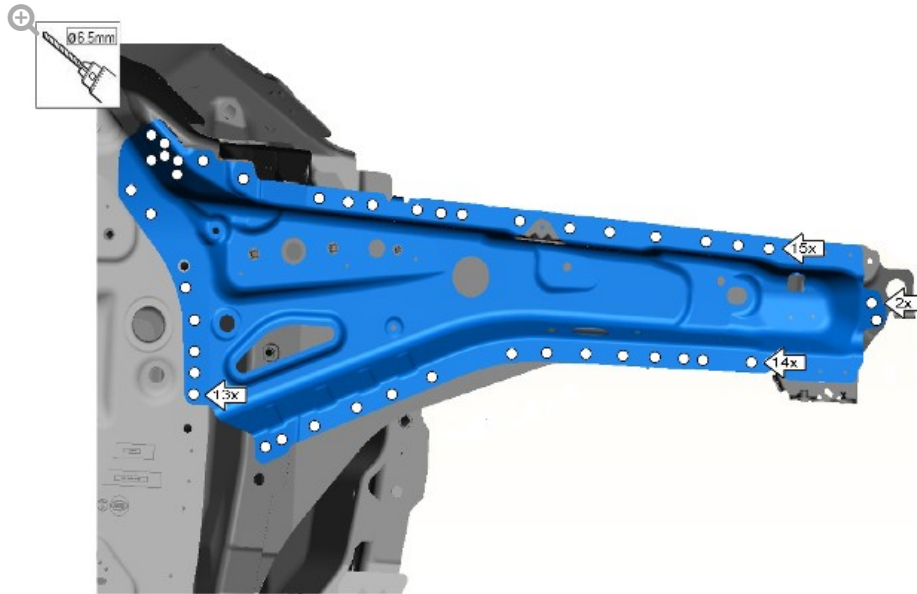

E143213

Drill holes through the old panel into the new panel, at the points where BSF's are to be installed as indicated.

9. Remove the new panel.

10. Using a fine bristle disc, clean and prepare the panel surfaces.

11. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

12.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.



E143214


Apply a 5mm zig zag bead of the Land Rover recommended bonding material to the fender apron panel as indicated.

-
13. Offer up the new fender apron panel, clamp into position. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.

14.

NOTE:

Make sure the BSF's are installed from the outside.

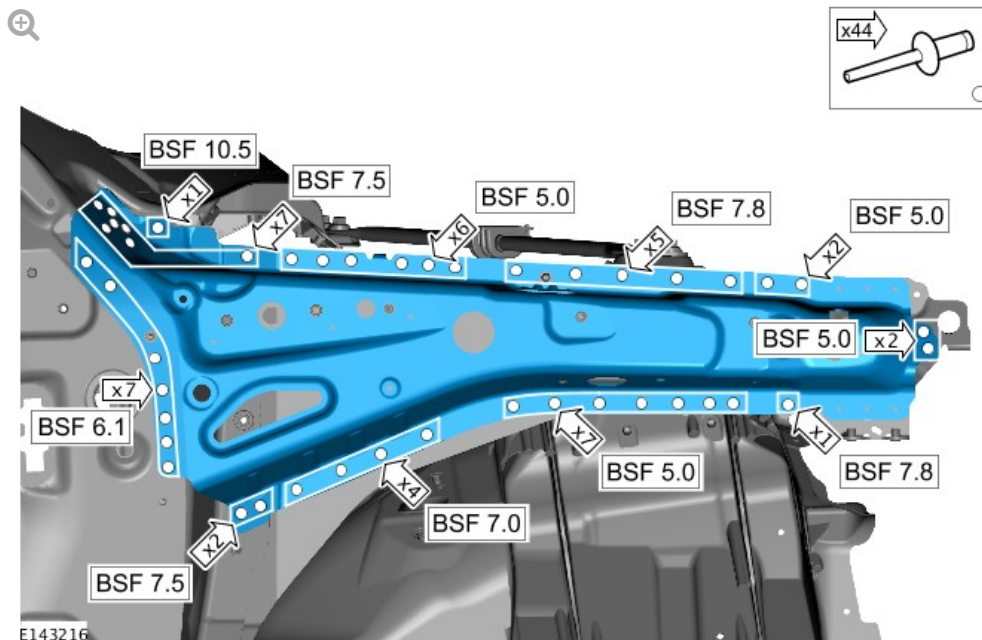

Install the BSF's as indicated.

15. Remove any excess adhesive.

16.

NOTES:

- The hood strut mounting panel bracket is manufactured from mild steel. Make sure the mating surfaces are correctly sealed prior to installation to avoid galvanic corrosion.
- Make sure the BSF's are installed from the outside.



E143215

Install the BSF's as indicated.

-
17. Make sure corrosion protection is applied to all areas affected by repair.
-
18. Make sure that any open or exposed panel joints are suitably sealed.
-
19. The installation of associated panels and components is the reversal of removal procedure.