

2016.0 RANGE ROVER (LG), 501-27

FRONT END SHEET METAL REPAIRS

FRONT FENDER LOWER MOUNTING BRACKET (G1532009)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

The front fender lower mounting bracket is installed in conjunction with:

- Front fender
 - Fender splash shield
-

1.



E145171

The front fender lower mounting bracket is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.

For additional information, refer to: Health and Safety Precautions (100-00, Description and Operation).

-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.


NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.
- Right hand indicated, left hand similar.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1. Remove rivet remnants.
2. Dress the flanges where necessary.
3. Using a fine bristle disc, clean and prepare the panel surfaces.
4. Offer up the new front fender lower mounting bracket and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
- 5.

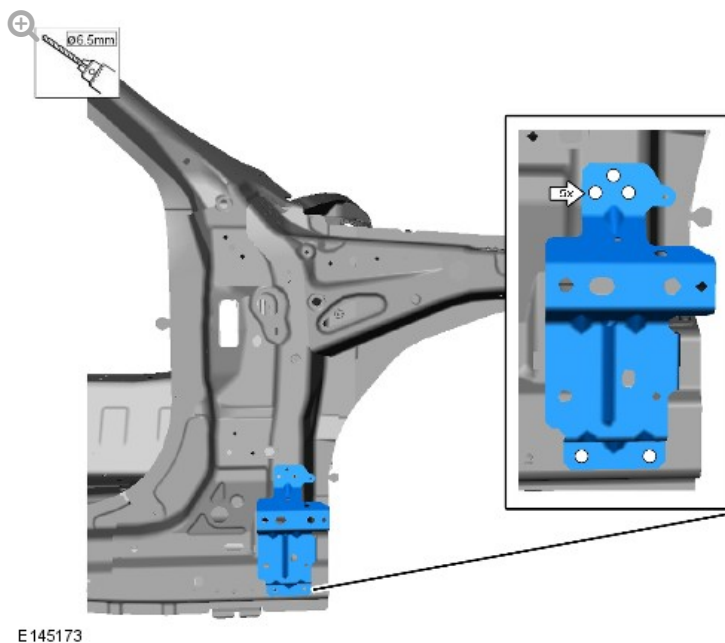

Using a combination of the old front fender mounting bracket and the new front fender lower mounting bracket, mark and drill holes for BSF's as indicated.

6. Remove the new front fender mounting bracket.


7. Deburr the drilled holes.

8. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

9.

NOTE:


Make sure a continuous bead of adhesive surrounds fixing holes.

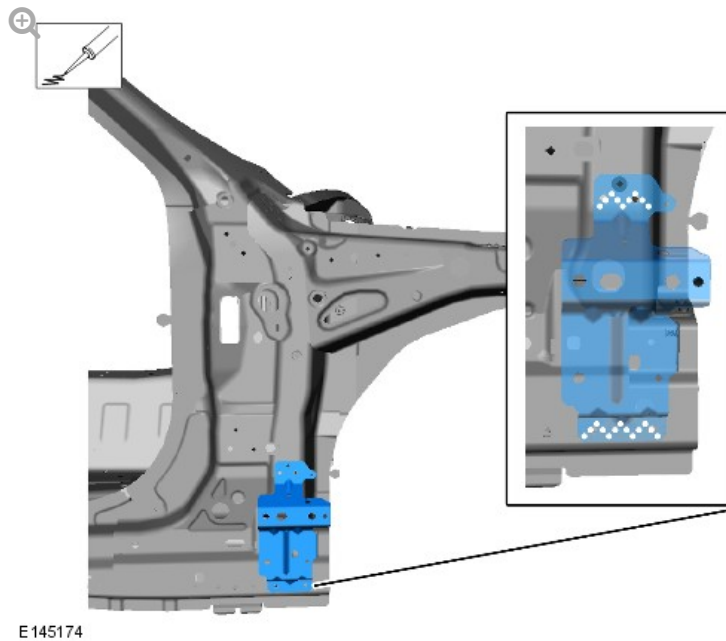

Apply a 5mm zig zag bead of the Land Rover approved bonding material as indicated.

10. Offer up the new panel and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

11.

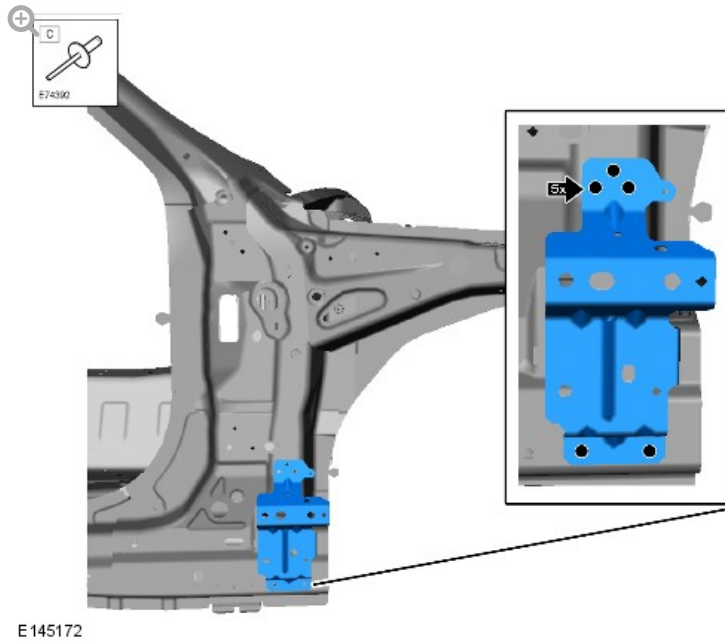

Install the BSF's as indicated.

12. Remove any excess adhesive.

13. Make sure that any open or exposed panel joints are suitably sealed.

14. Make sure corrosion protection is applied to all areas affected by repair.

15. The installation of associated panels and components is the reversal of removal procedure.