

2016.0 RANGE ROVER (LG), 501-27

FRONT END SHEET METAL REPAIRS

SUSPENSION TOP MOUNT

[G1454600]

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

The suspension top mount is installed in conjunction with:

- Fender apron panel
 - Fender apron closing panel
 - Shock absorber and spring assembly
 - Upper arm
 - Engine
-

1.

NOTE:

The right-hand suspension top mount contains the stamped Vehicle Identification Number (VIN). When a new right hand suspension top mount is requested it will be supplied stamped with the VIN number. This operation is carried out within the Land Rover parts supply process.



E143259

The suspension top mount is serviced as indicated.


-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements. For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Before carrying out this repair the vehicle must be correctly aligned using a Land Rover approved alignment jig.
- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

-
4. For additional information, refer to: [Fender Apron Panel](#) (501-27 Front End Sheet Metal Repairs, Removal and Installation).
-
5. For additional information, refer to: [Fender Apron Panel Closing Panel](#) (501-27 Front End Sheet Metal Repairs, Removal and Installation).
-
6. For additional information, refer to: [Shock Absorber and Spring Assembly](#) (204-01 Front Suspension, Removal and Installation).
-
7. For additional information, refer to: [Left Upper Arm](#) (204-01 Front Suspension, Removal and Installation) / [Right Upper Arm](#) (204-01 Front Suspension, Removal and Installation).
-
8. For additional information, refer to: [Engine](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal).
-
9. Remove the front side member heat shield.
-

10.

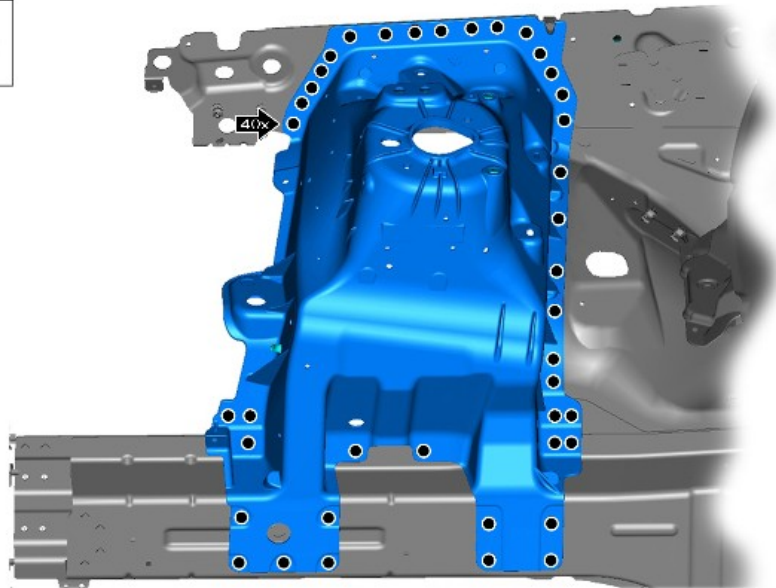

E143260

Remove the SPR's as indicated.


11.

NOTE:

Retain the old panel to use as a template during the install process.

Separate the joints and remove the suspension top mount.

12.

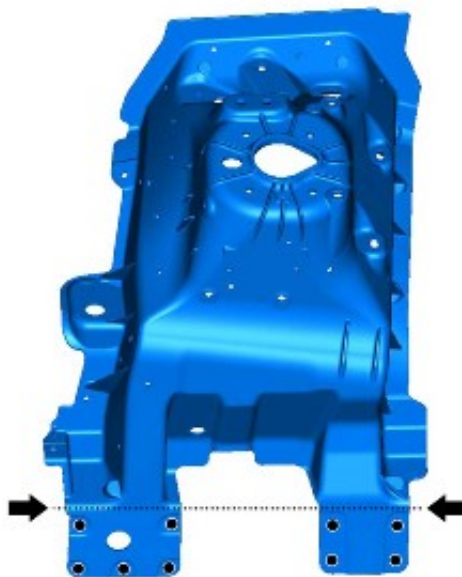

E143261

Cut two sections from the old suspension top mount as indicated. These are to be used as a template to mark the BSF locations on the new suspension top mount..

INSTALLATION

CAUTION:


Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Jaguar approved SPR tool.

-
1. Remove rivet remnants.
-
2. Dress flanges where necessary.
-
3. Offer up the new suspension top mount and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
-
4. Remove the new panel.
-

5.

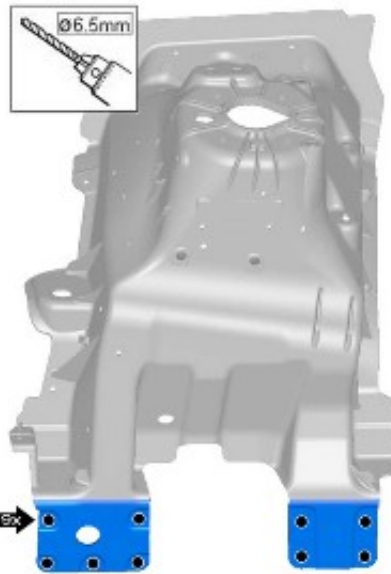

E143262

Drill holes through the template into the new panel for the installation of the BSF's as indicated.

-
6. Deburr the drilled holes.
 7. Offer up the new suspension top mount, clamp into position. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.
 8. Drill holes at the points where BSF's are to be installed.
 9. Remove the new panel.
 10. Deburr the drilled holes.
 11. Using a fine bristle disc, clean and prepare the panel surfaces.
 12. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.
-

13.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.




E143264

Apply a 5mm zig zag bead of Land Rover recommended bonding material to the suspension top mount as indicated.

-
14. Offer up the new suspension top mount, clamp into position. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.
-

15.

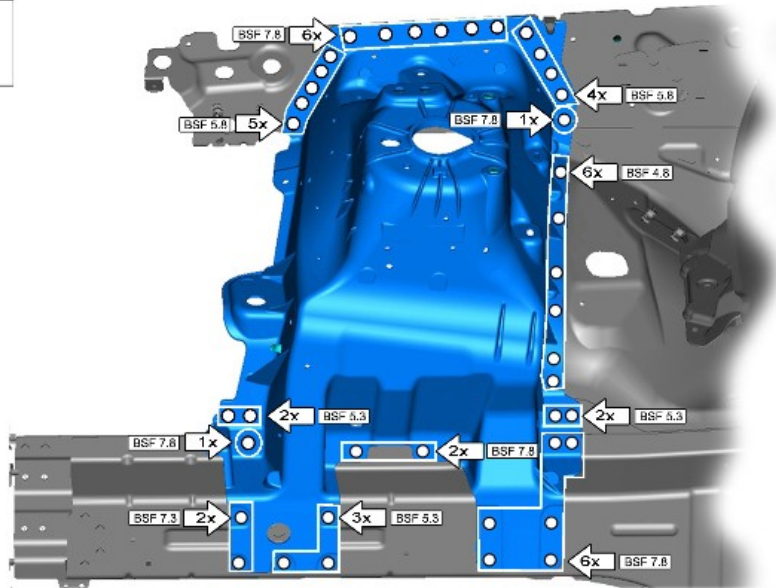

E143263

Install the BSF's as indicated.

16. Remove any excess adhesive.

17. Make sure that any open or exposed panel joints are suitably sealed.

18. Make sure corrosion protection is applied to all areas affected by repair.

19. The installation of associated panels and components is the reversal of removal procedure.