

PUBLISHED: 03-SEP-2013  
2014.0 RANGE ROVER (LG), 502-02

FULL FRAME AND BODY MOUNTING

**TRANSMISSION SUPPORT  
CROSSMEMBER - V6 S/C 3.0L PETROL  
/V8 N/A 5.0L PETROL/V8 S/C 5.0L  
PETROL** (G1509268)

## REMOVAL AND INSTALLATION

|          |                                                   |                   |     |                 |  |
|----------|---------------------------------------------------|-------------------|-----|-----------------|--|
| 76.10.92 | CROSSMEMBER<br>- CHASSIS -<br>REMOVE AND<br>REFIT | 5000 CC,<br>AJ V8 | 0.7 | USED<br>WITHINS |  |
|----------|---------------------------------------------------|-------------------|-----|-----------------|--|

## REMOVAL

### NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1.



### WARNING:


Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2.

Using a transmission jack, support the transmission.


3.

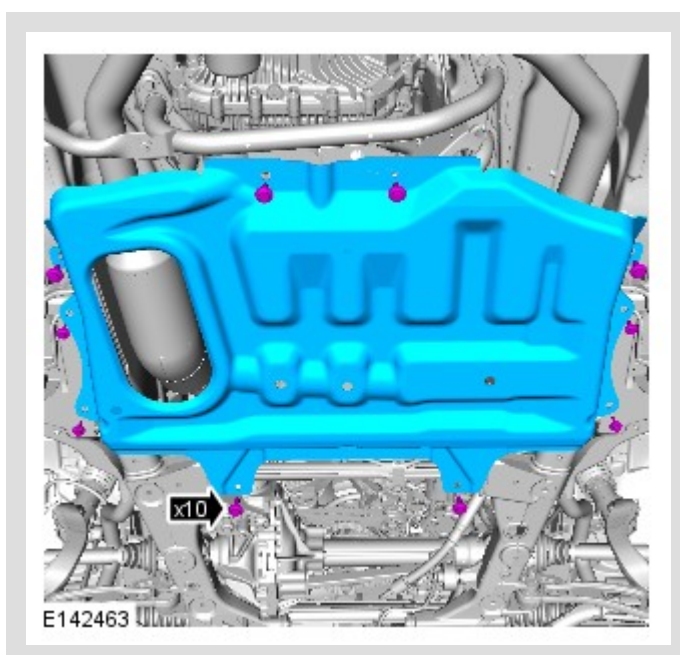

*Torque:*

M6 10 Nm

M10 60 Nm

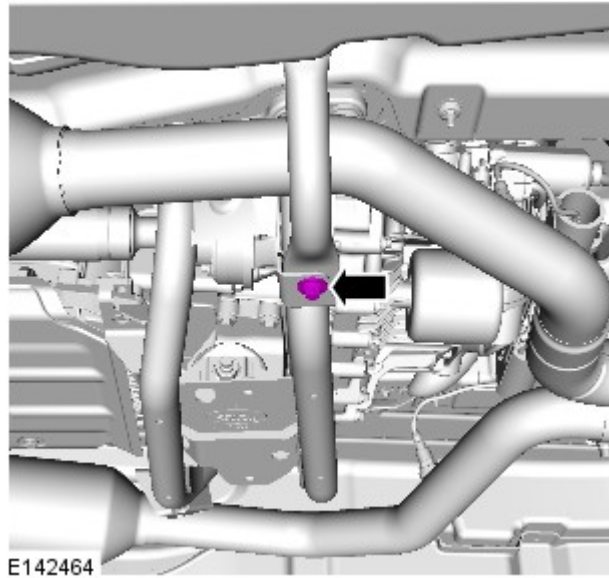



*Torque: 24 Nm*

5.


 **NOTE:**


Note the orientation of the component prior to removal.

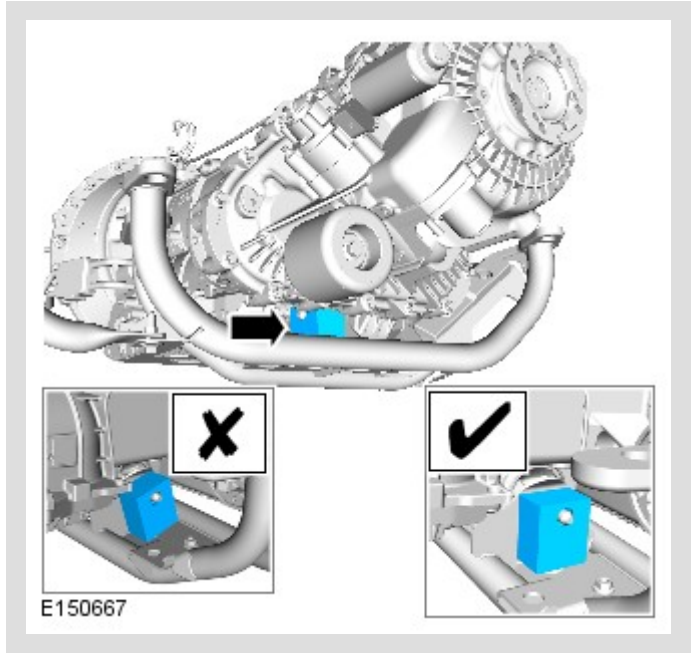

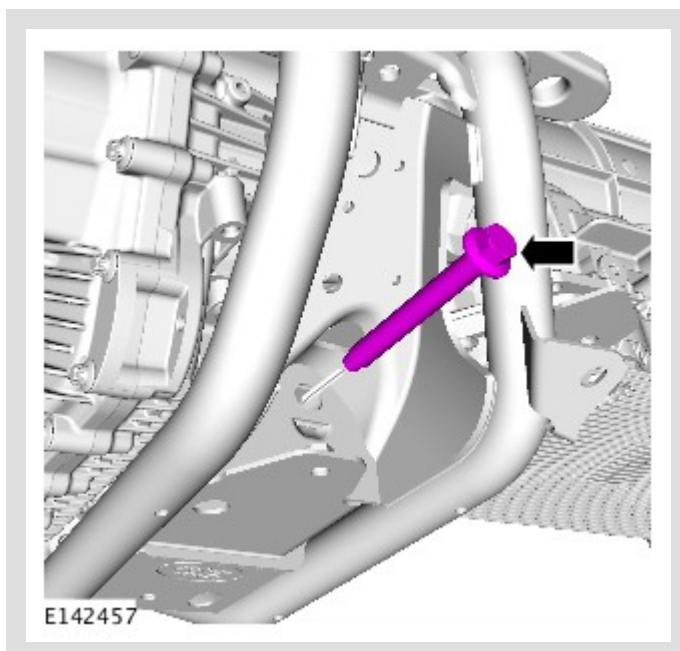

*Torque: 175 Nm*

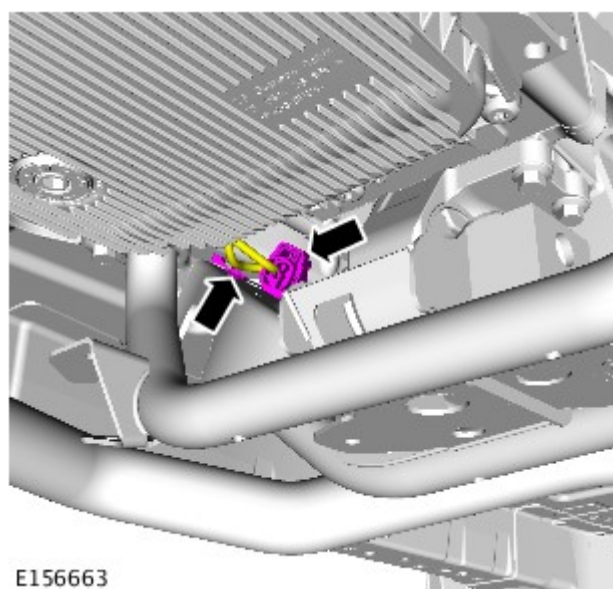

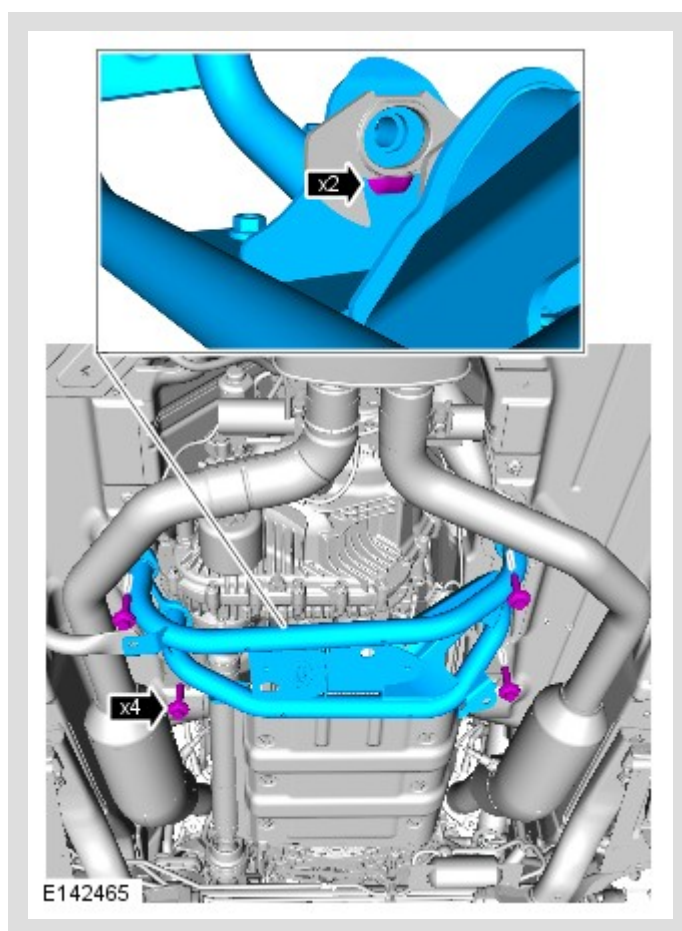

*Torque: 110 Nm*

## INSTALLATION

1. To install reverse the removal procedure.



