

2016.0 RANGE ROVER (LG), 501-12

INSTRUMENT PANEL AND CONSOLE - LONG WHEEL BASE

INSTRUMENT PANEL UPPER SECTION (G1775270)

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- Do not probe supplemental restraint system (SRS) electrical connectors.
- To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any air bag supplementary restraints system (SRS) components. To deplete the backup power supply energy, disconnect the battery ground cable and wait for one minute. Failure to follow this instruction may result in personal injury.

NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.
- Using a suitable trim tool.




Vehicles without business seats



1.

NOTE:

Repeat the procedure for the other side.

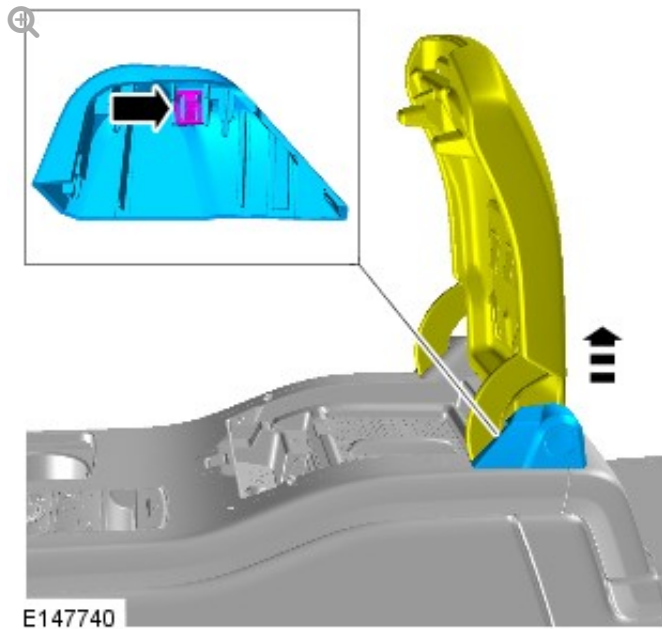

2.

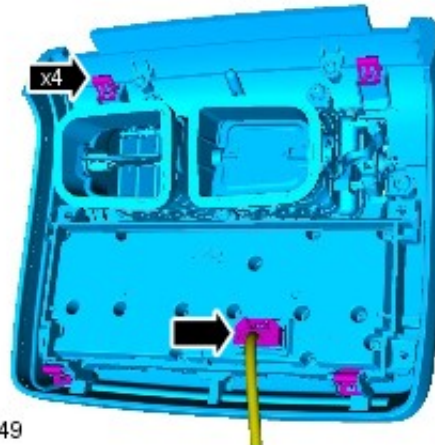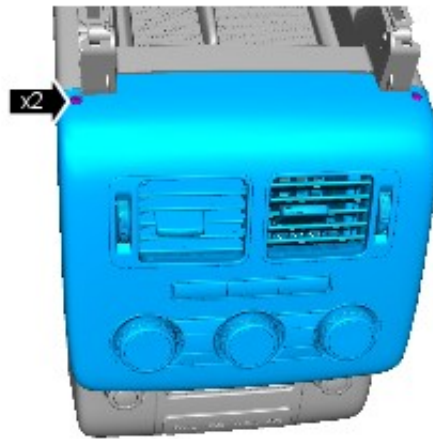

E147749




Vehicles with business seats

3.

NOTE:

Repeat the procedure for the other side.

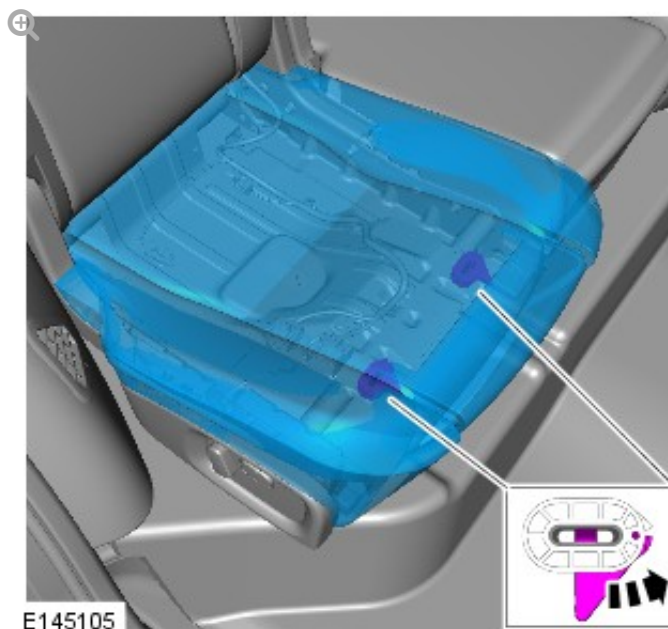

4.

NOTE:


Repeat the procedure for the other side.



5.

NOTE:

Repeat the procedure for the other side.

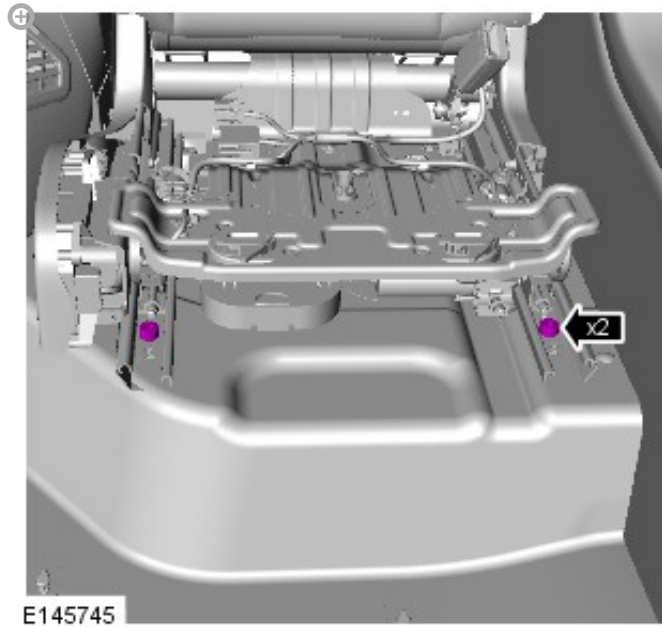


Torque: 50 Nm

6.

NOTE:

Repeat the procedure for the other side.

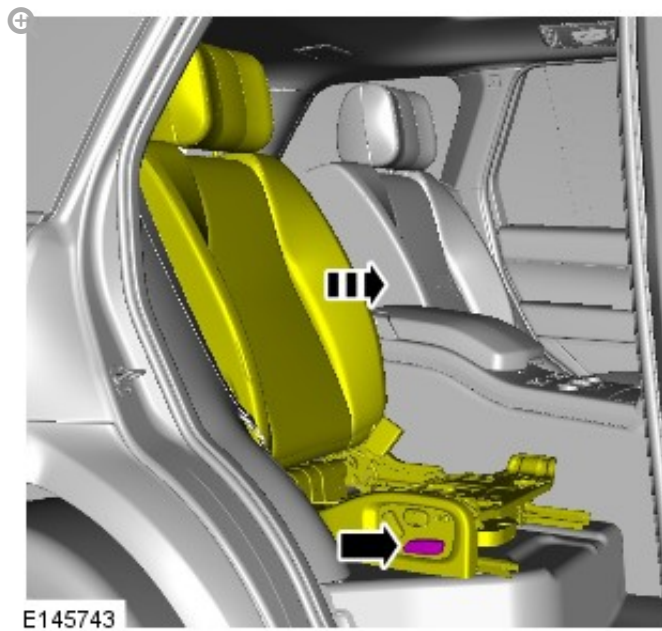

7.

NOTE:

Repeat the procedure for the other side.




Torque: 50 Nm


8.

NOTE:

Repeat the procedure for the other side.

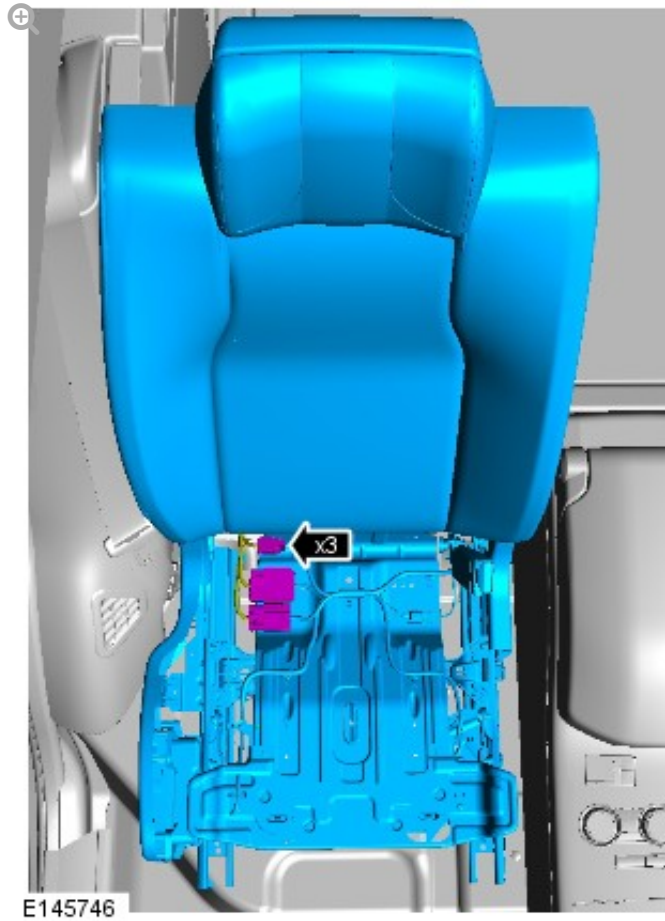


9.

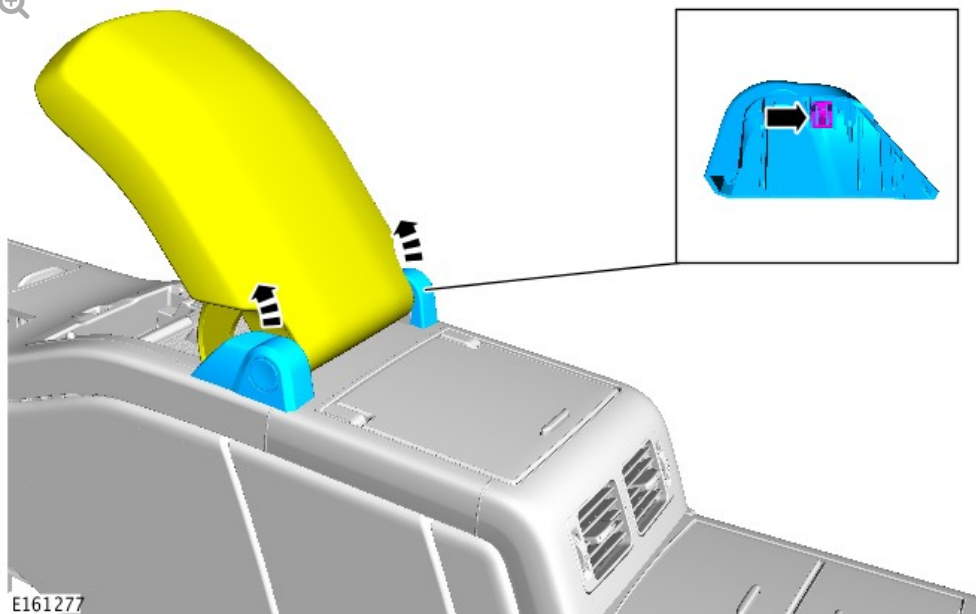


E161277

10.

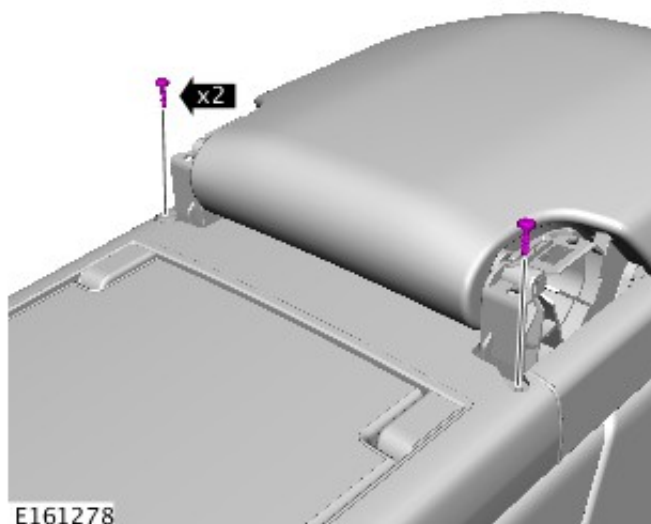

E161278


11.

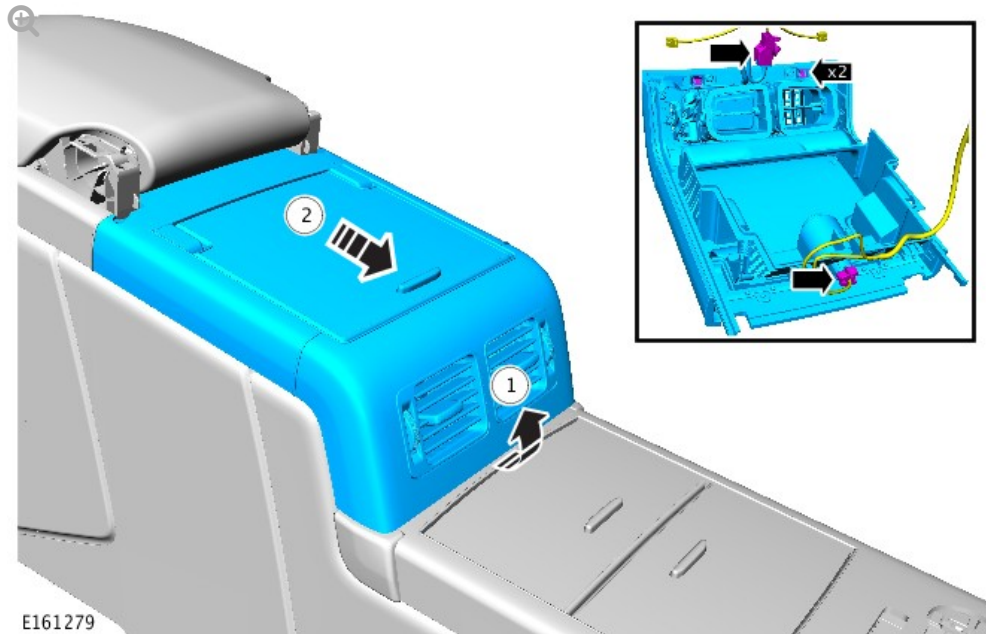

12.

NOTE:


Repeat the procedure for the other side.

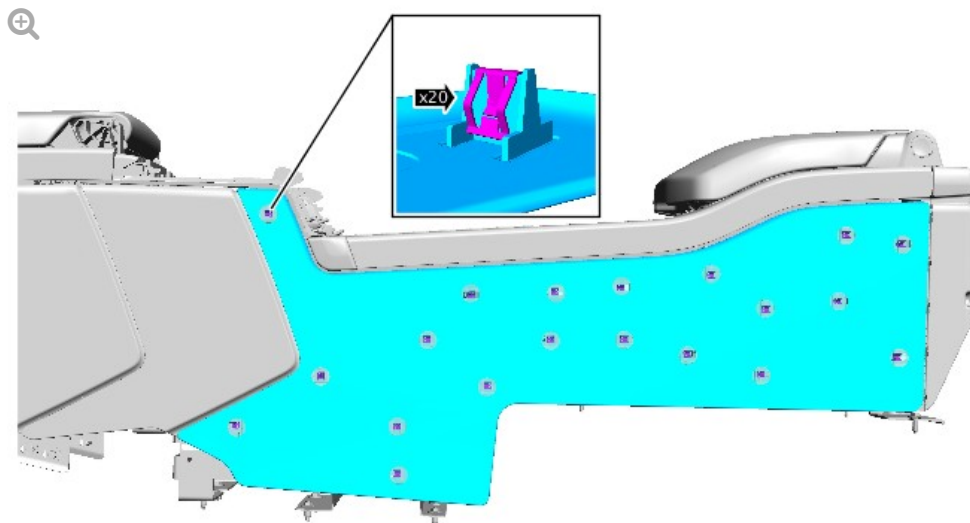

13.

NOTE:

Repeat the procedure for the other side.

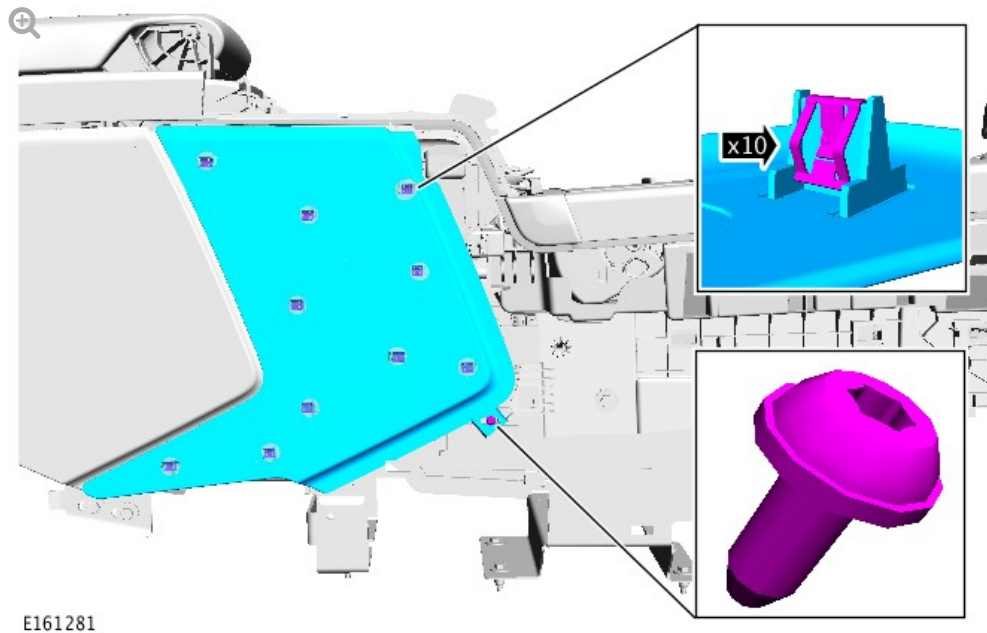

All vehicles


14. Disconnect the battery ground cable.
Refer to: Specifications (414-00, Specifications).
15. Refer to: Upper Glove Compartment (501-12, Removal and Installation).
16. Refer to: Lower Glove Compartment (501-12, Removal and Installation).
17. Refer to: Information and Entertainment Display (415-01, Removal and Installation).
18. Refer to: Audio Unit (415-01, Removal and Installation).

19. Refer to: Floor Console (501-12, Removal and Installation).

20.

NOTE:


Repeat the procedure for the other side.

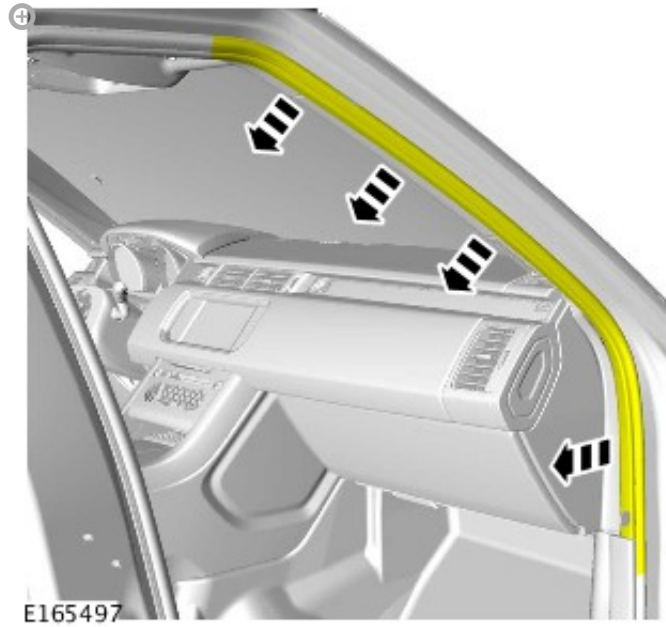

21.

NOTE:

Repeat the procedure for the other side.

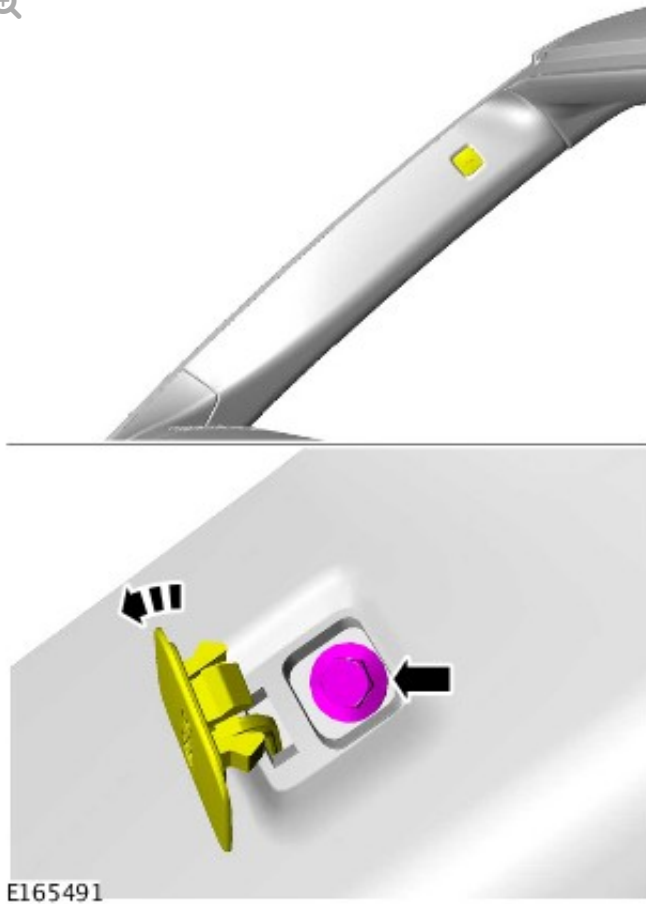



E165491

Torque: 6 Nm


22.

NOTE:

Repeat the procedure for the other side.

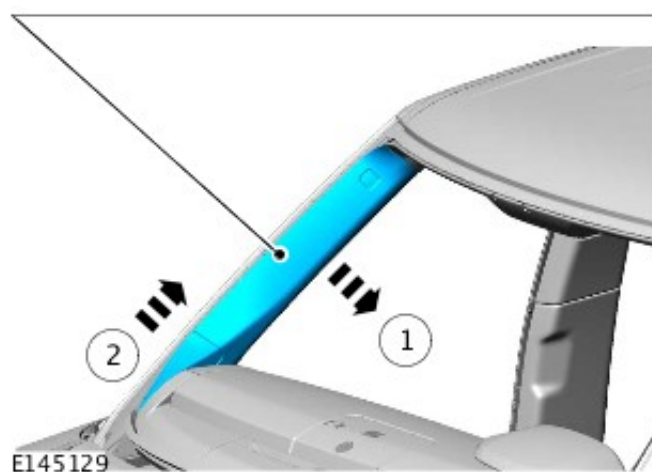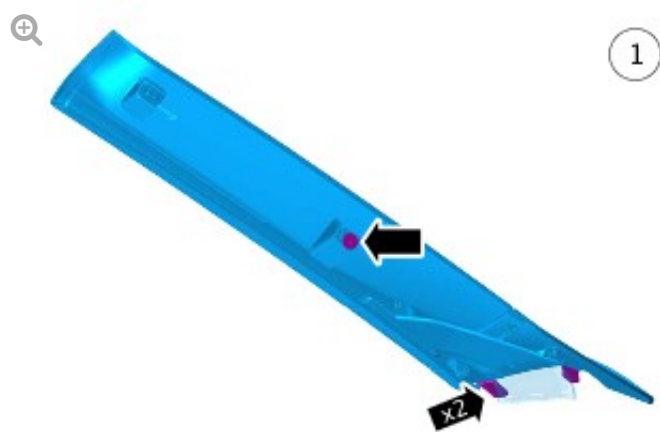


23.

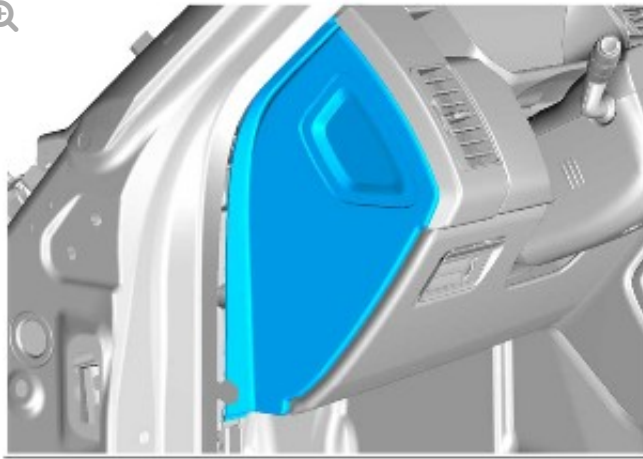



E166312

24.

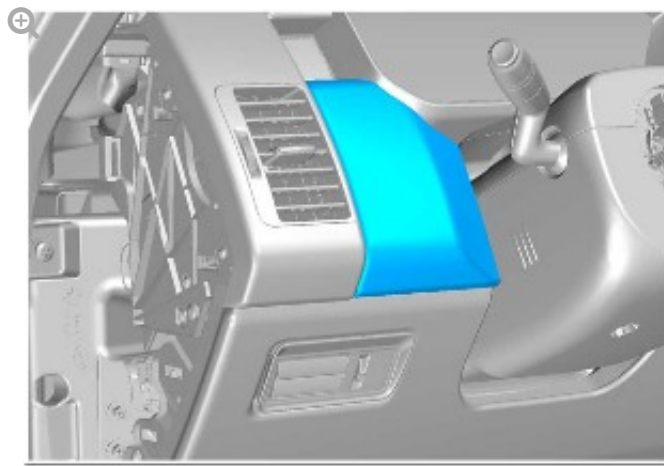

E166310


25.

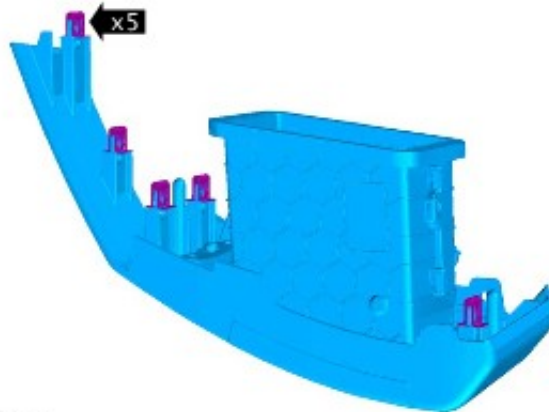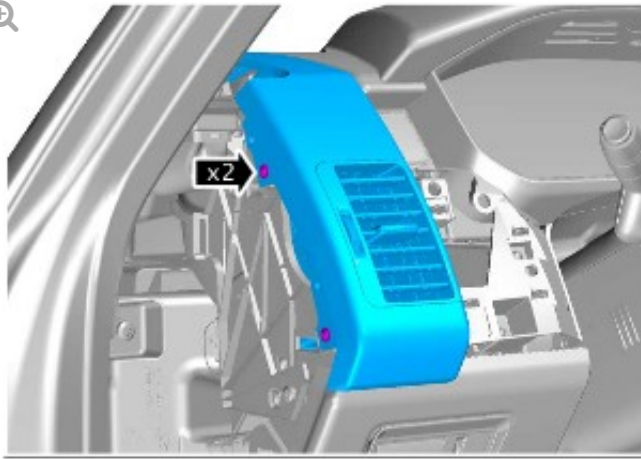

E166311


Torque: 1.7 Nm

26.

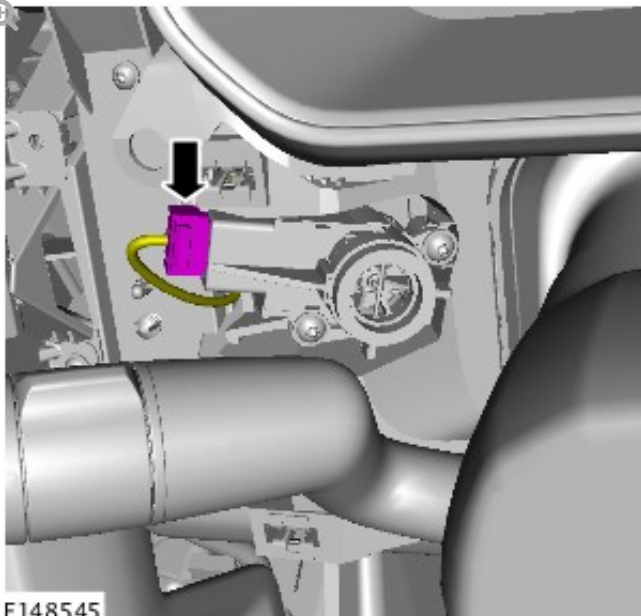


E148545

27.

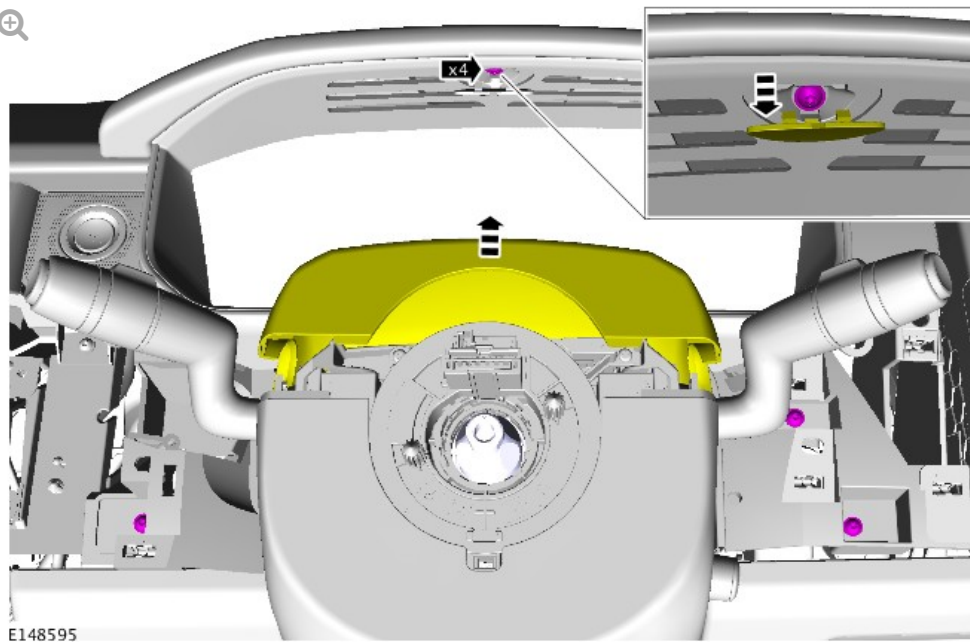


Torque: 1.7 Nm

28.

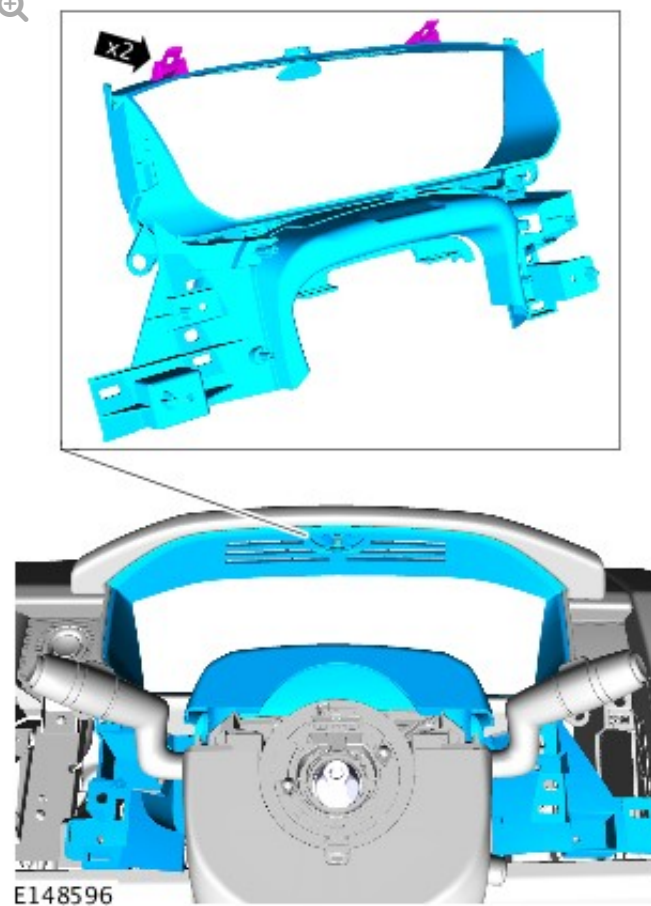


29.

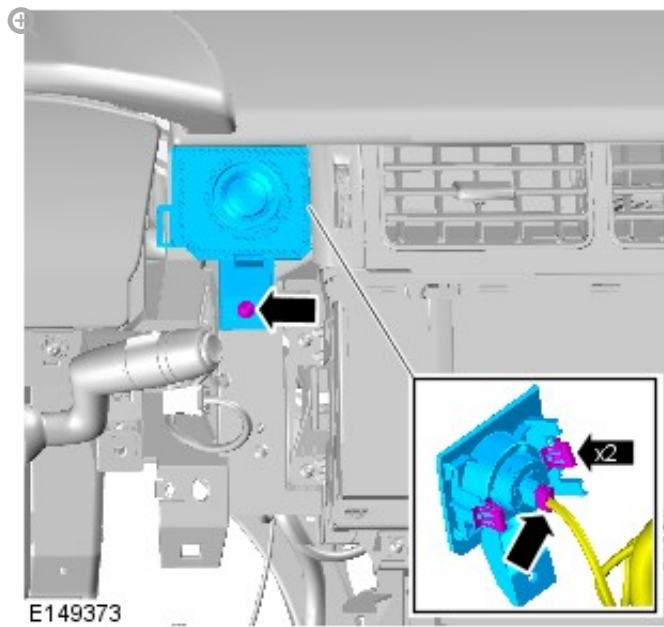


Torque: 1.7 Nm

30.

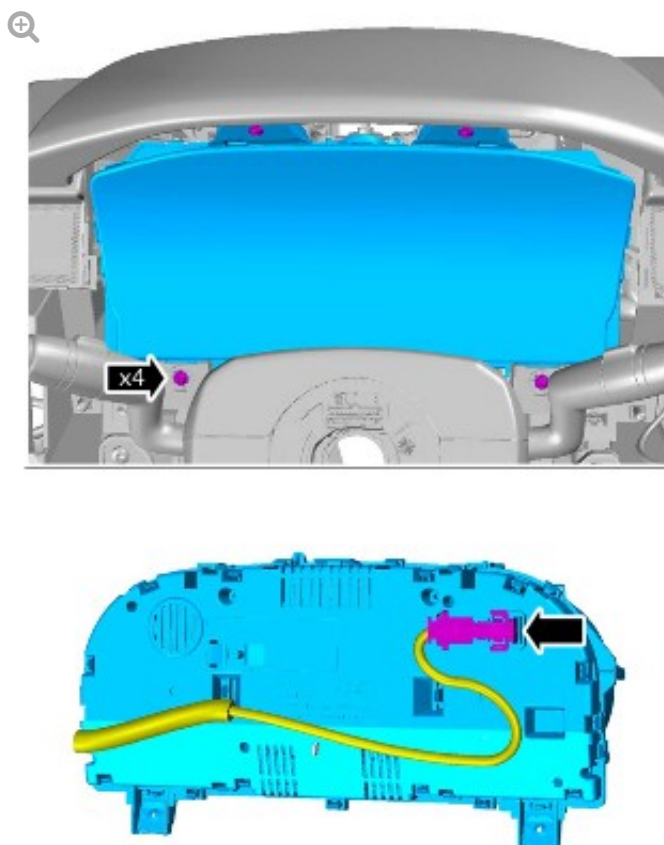



Torque: 1.7 Nm

31.

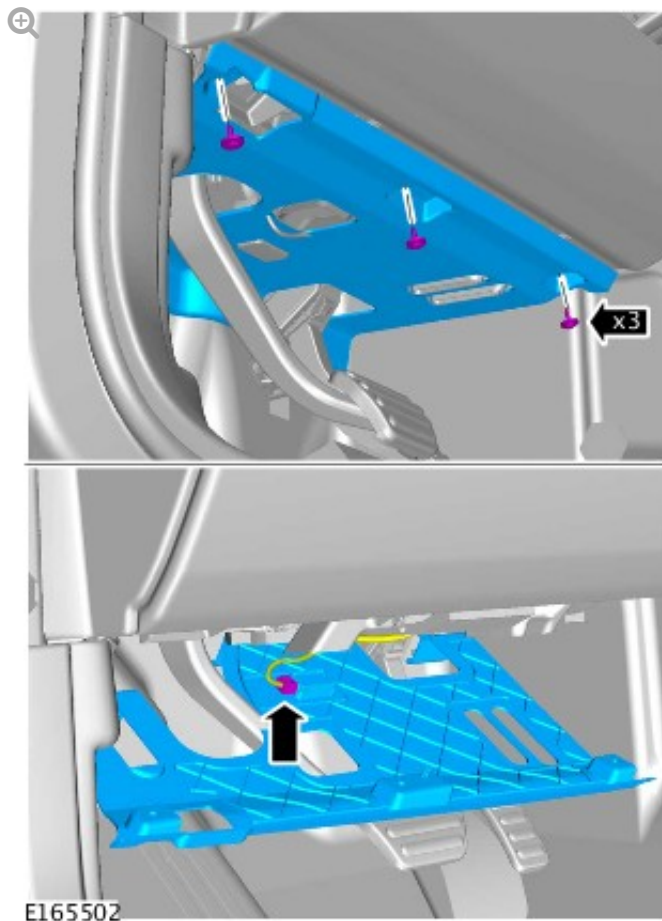

Torque: 1.7 Nm

32.

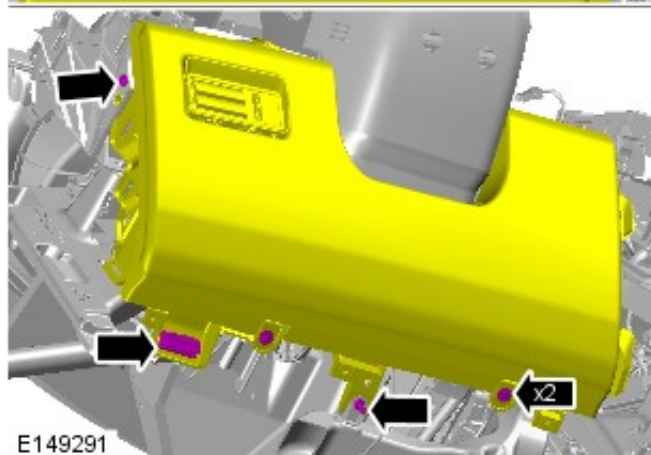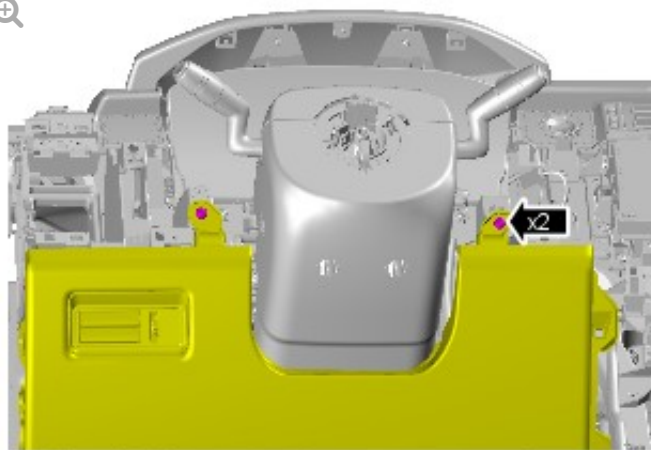


E149291

Torque:

Upper bolts M6 9 Nm



Lower bolts M6 2.5 Nm

33.

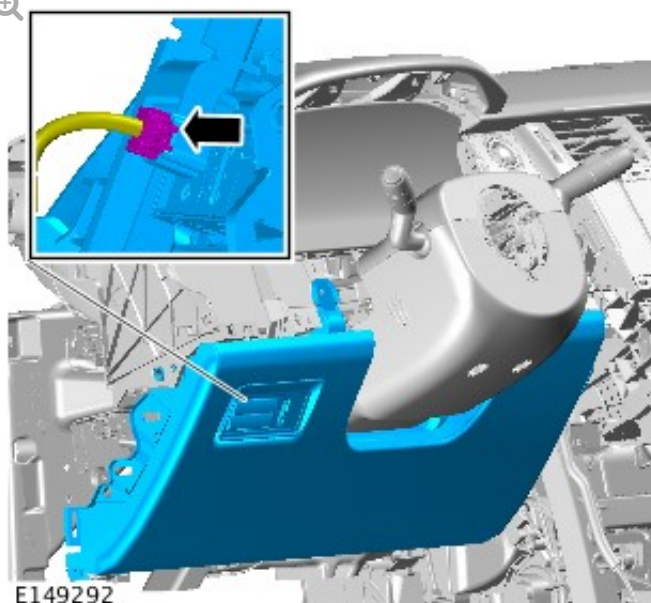


E149292

34.

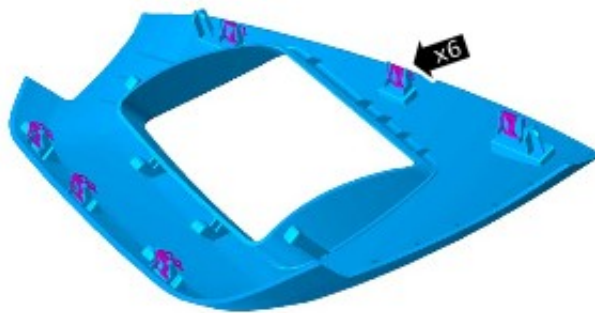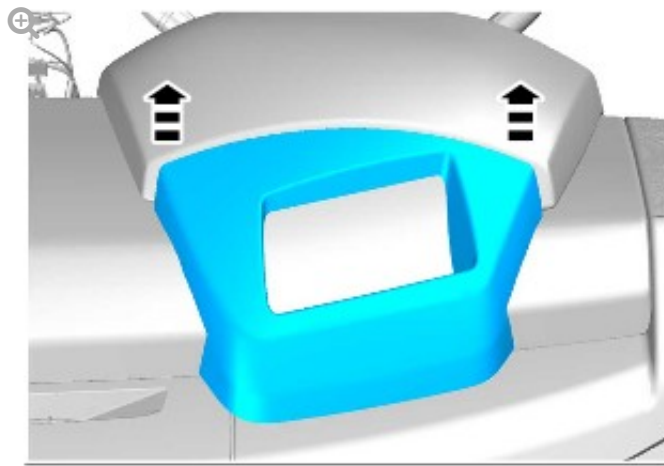


E165501

35.

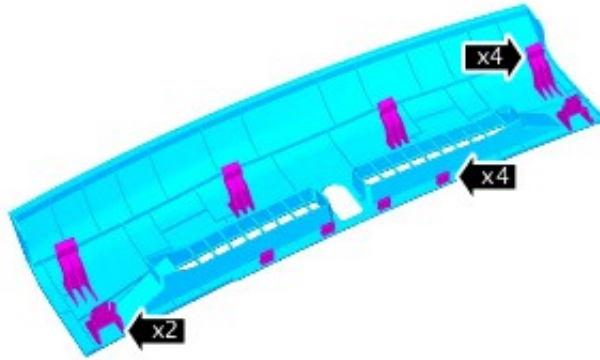

E165495


36.

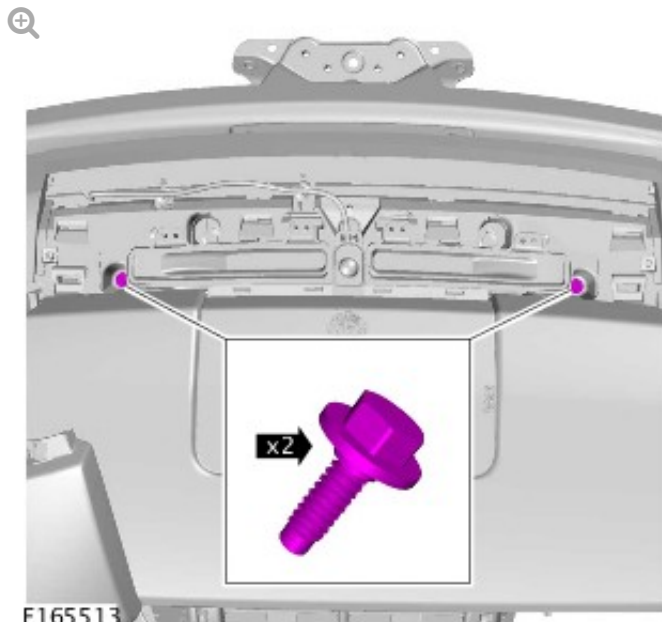

E165513


Torque: 9 Nm

37.

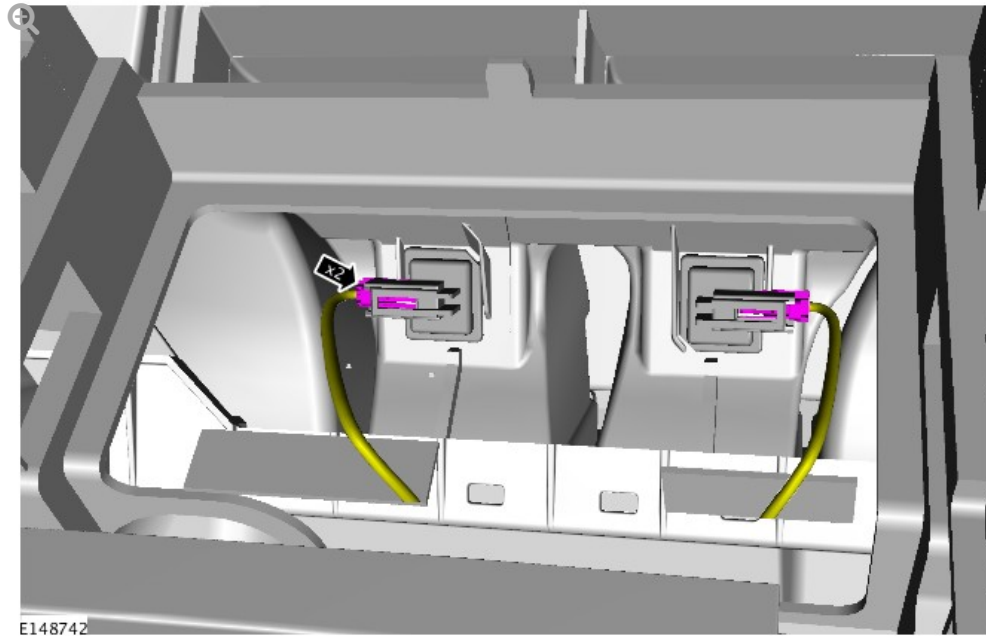

E148742


38.

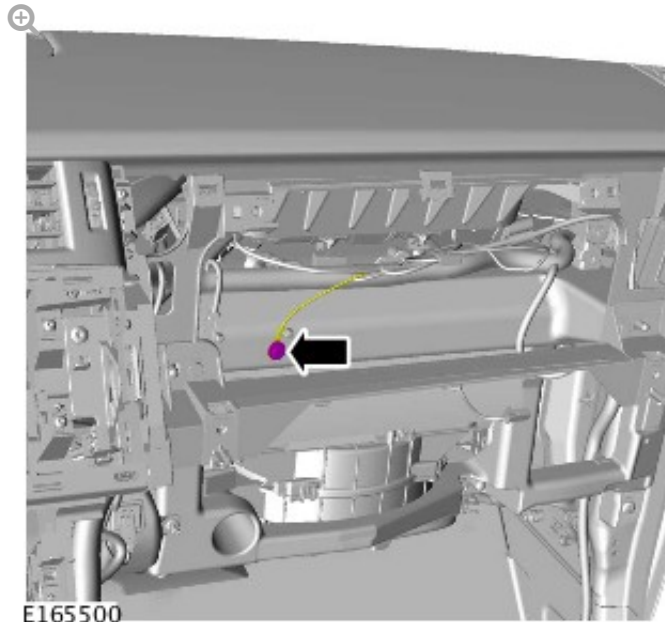


E165500

Torque: 9 Nm

39.

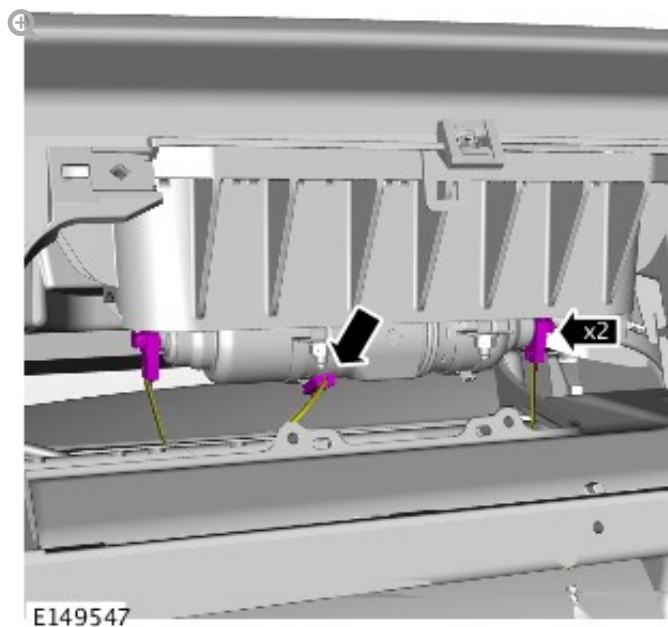


40.

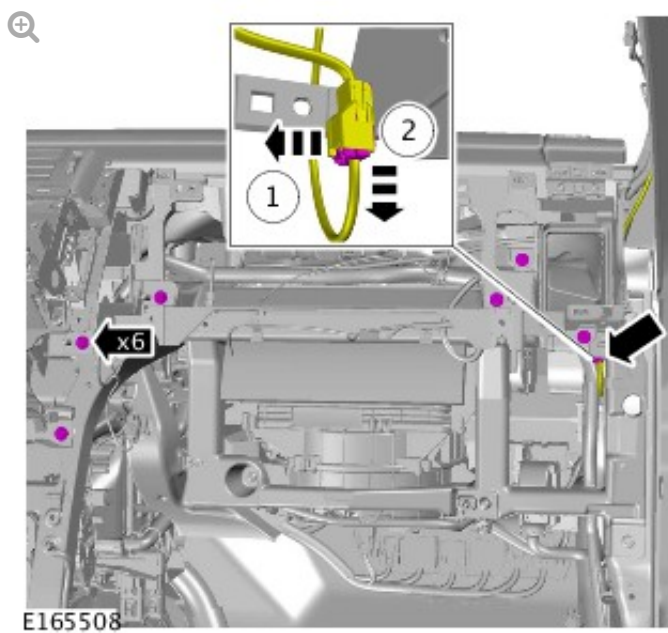


Torque: 9 Nm

41.

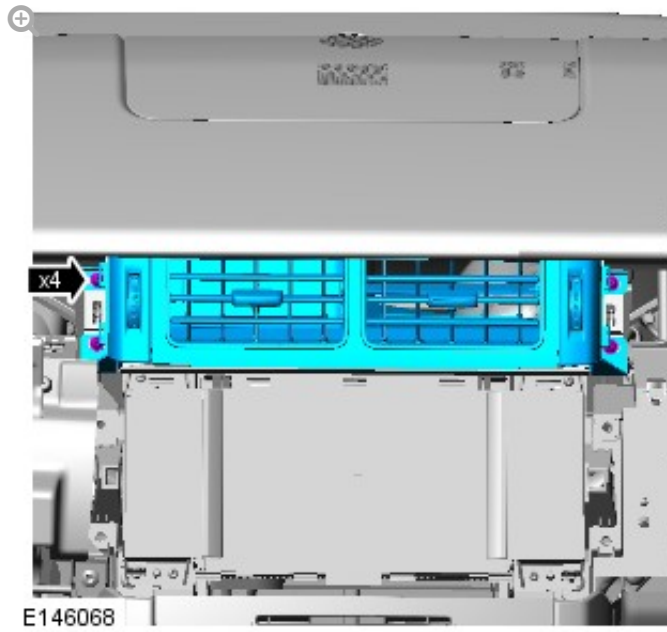


Torque: 1.7 Nm

42.

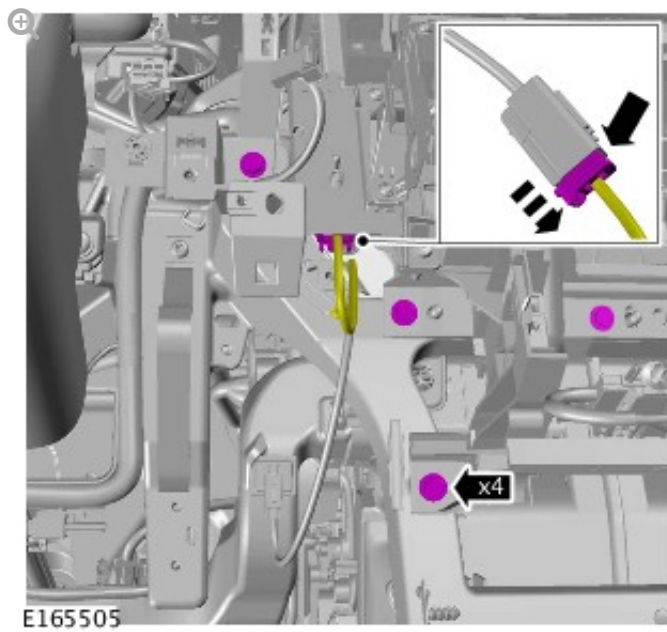

Torque: 9 Nm

43.

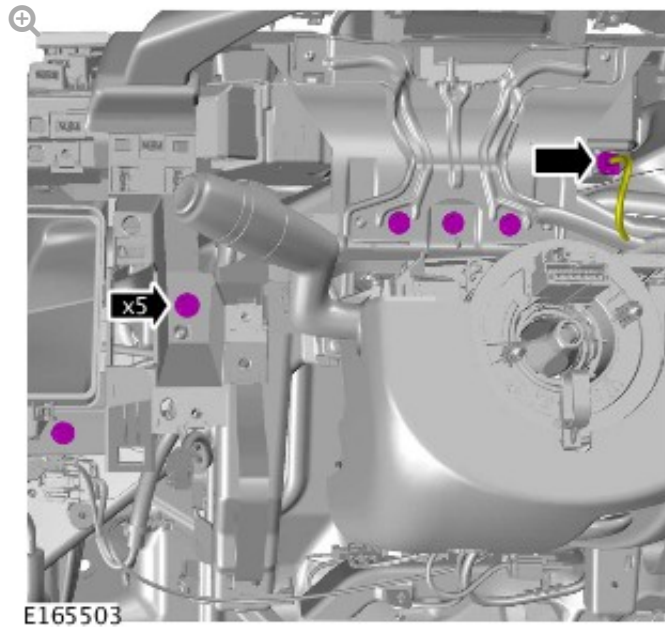


Torque: 9 Nm

44.

NOTE:


Discard the retaining clips.

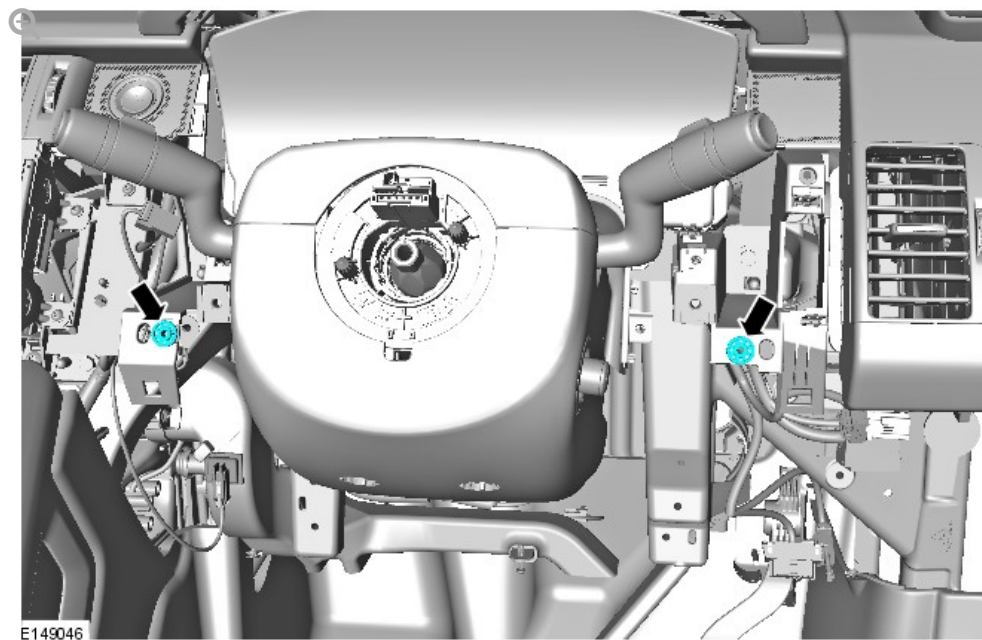

45.

WARNING:



This step requires the aid of another technician.

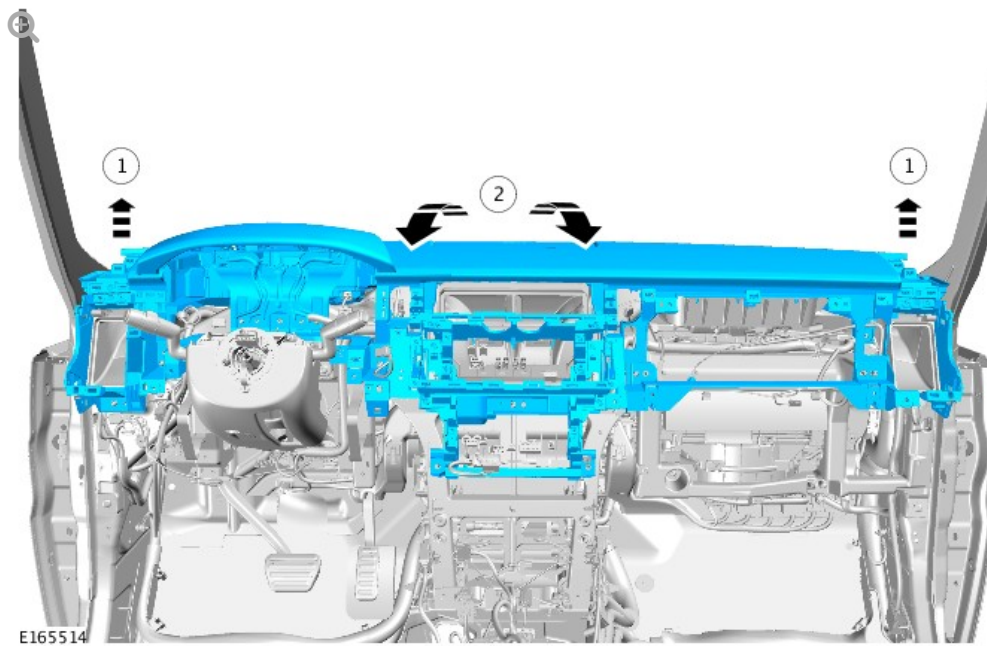

46.


NOTE:

Do not disassemble further if the component is removed for access only.

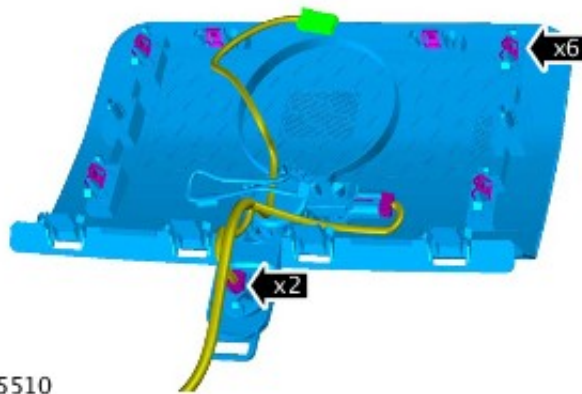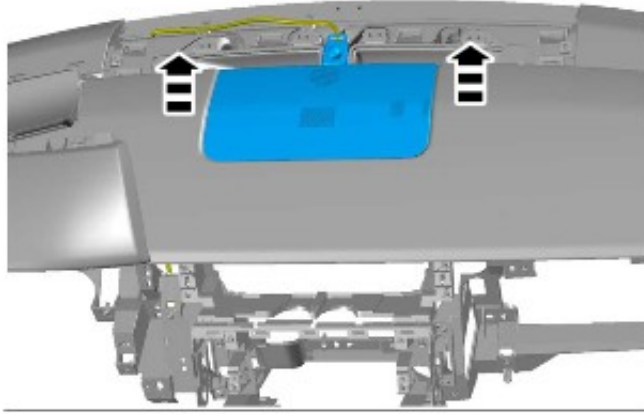

E165510


47.

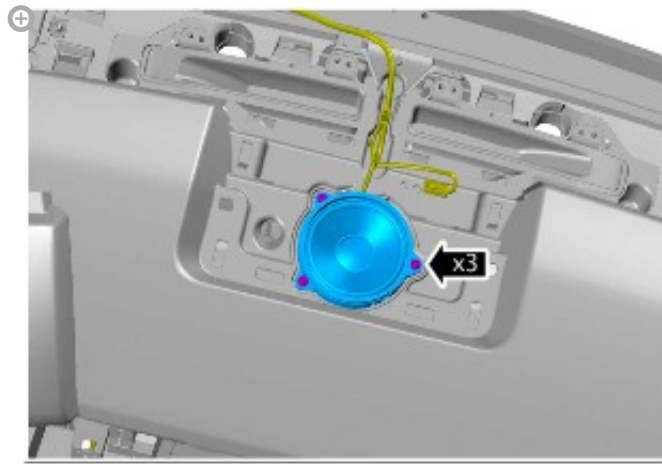

E165512


Torque: 1.7 Nm

48.

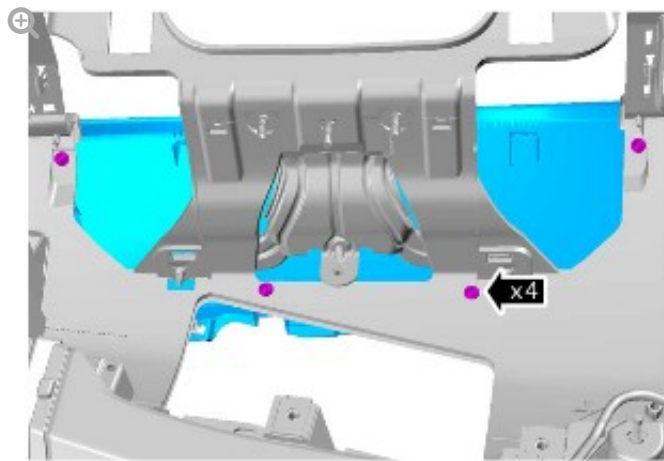



Torque: 1.7 Nm

49.

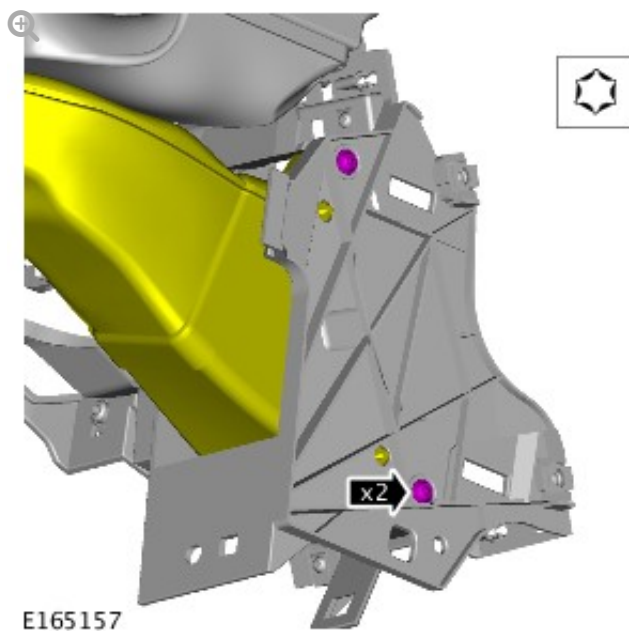


Torque: 1.7 Nm

50.

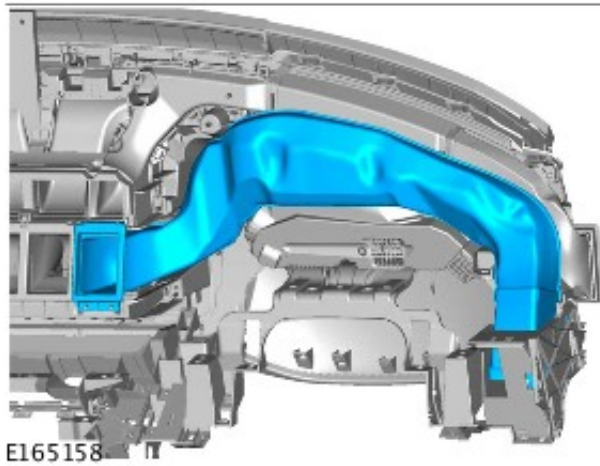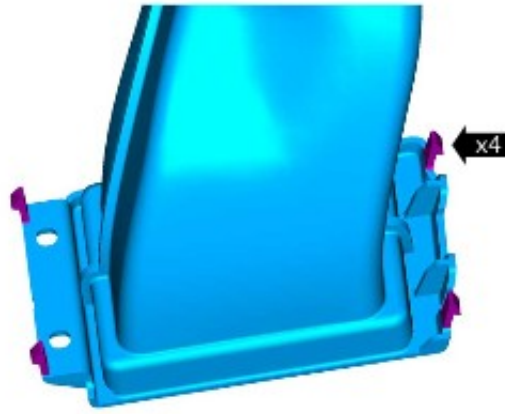


51.

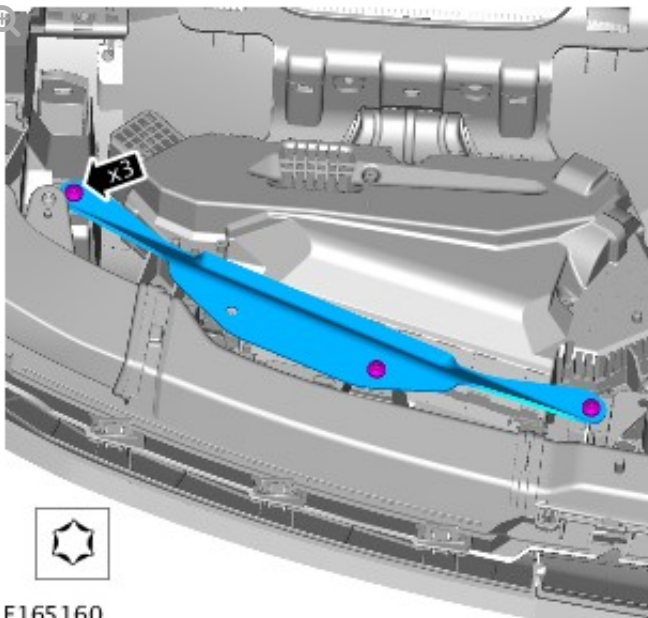


Torque: 1.7 Nm

52.

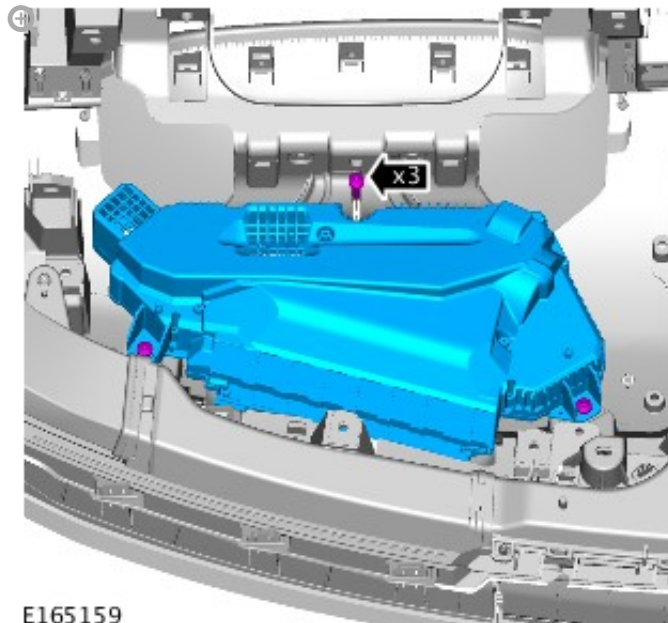



Torque: 5 Nm

53.

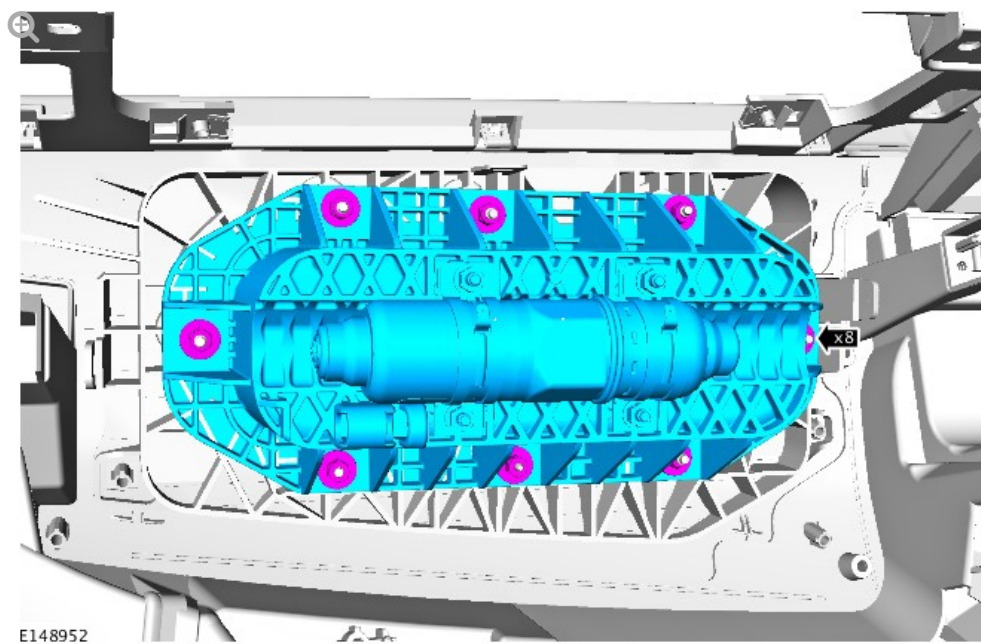


Torque: 4.5 Nm

54.

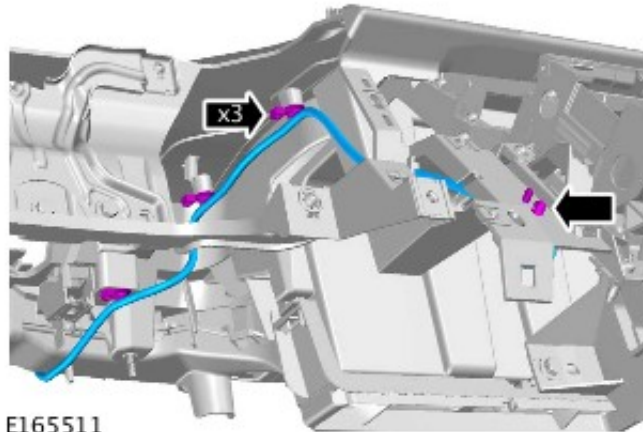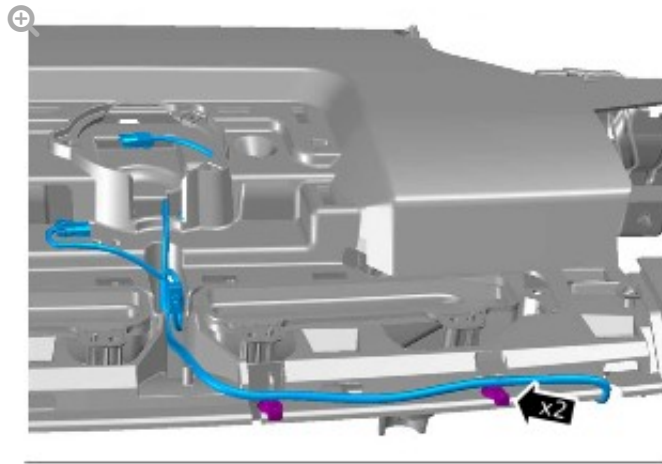


E165511

55.

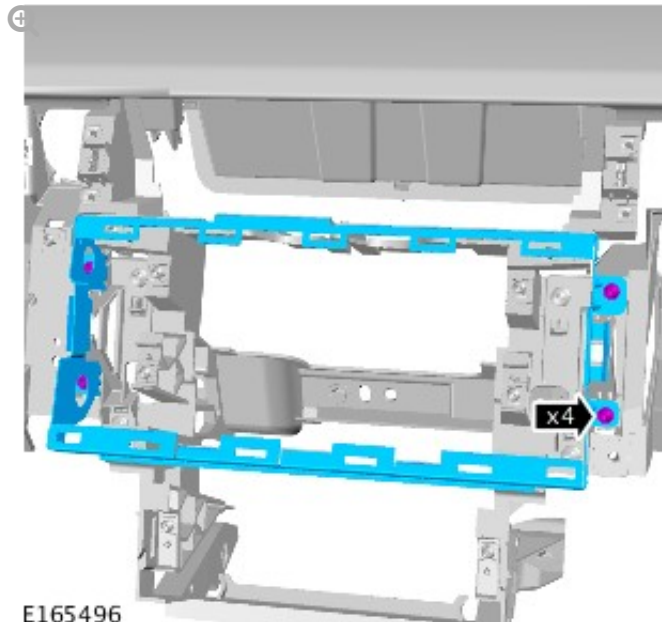

E165496

Torque: 1.7 Nm

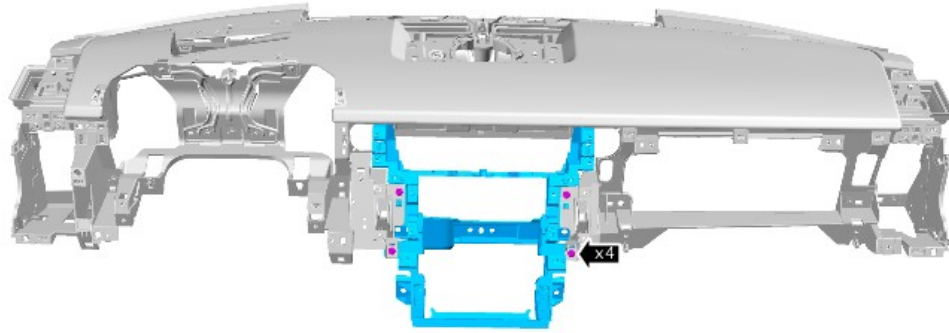

E165506

Torque: 9 Nm

INSTALLATION

1.

NOTE:

Install the trim retaining clips in the moulding prior to installing the components.



E149095

2. To install, reverse the removal procedure.