

PUBLISHED: 29-SEP-2014
2014.0 RANGE ROVER (LG), 501-12

INSTRUMENT PANEL AND CONSOLE - SHORT WHEELBASE

REAR FLOOR CONSOLE - AUTOBIOGRAPHY BLACK (G1716296)

REMOVAL

NOTES:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.
- Low strength loctite must be used during the installation steps.

1. Refer to: Rear Floor Console Table (501-12A, Removal and Installation).


2. Refer to: Rear Floor Console Upper Trim (501-12B, Removal and Installation).

3. Refer to: Rear Floor Console Table Motor Assembly (501-12A, Removal and Installation).


4.

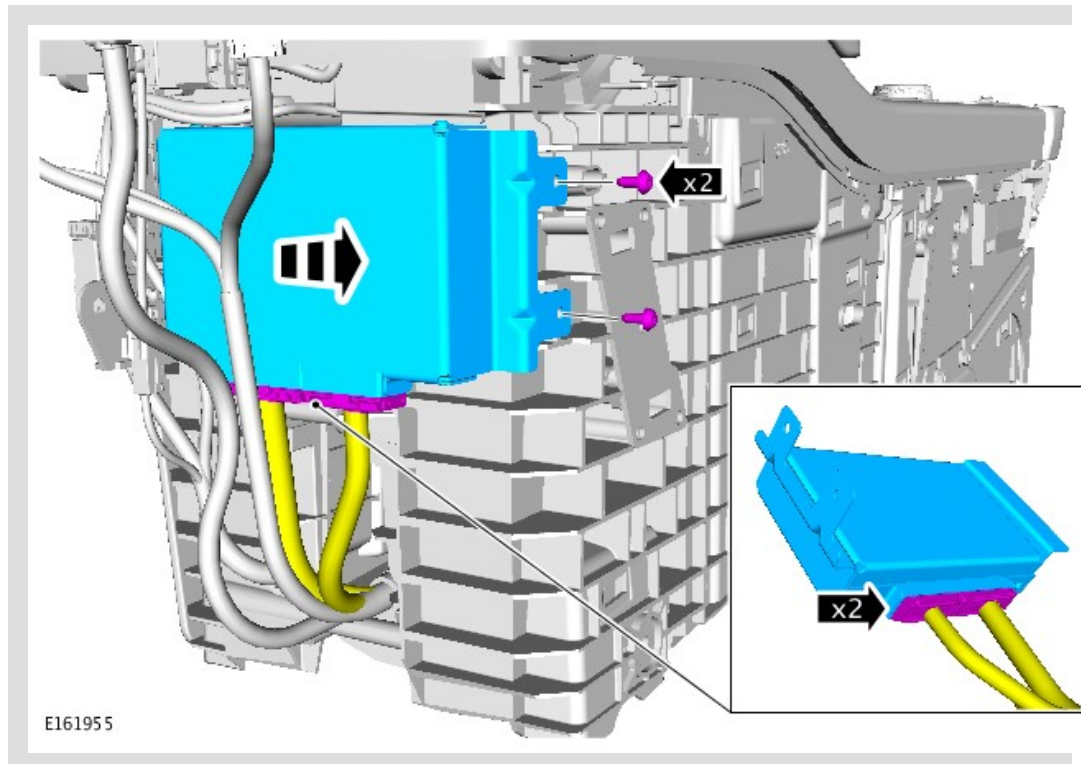


Torque: 2.2 Nm

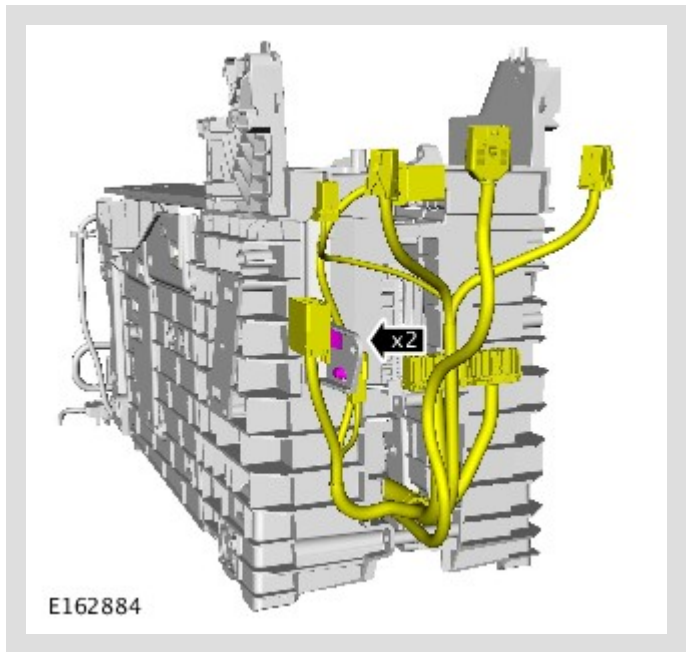

6.

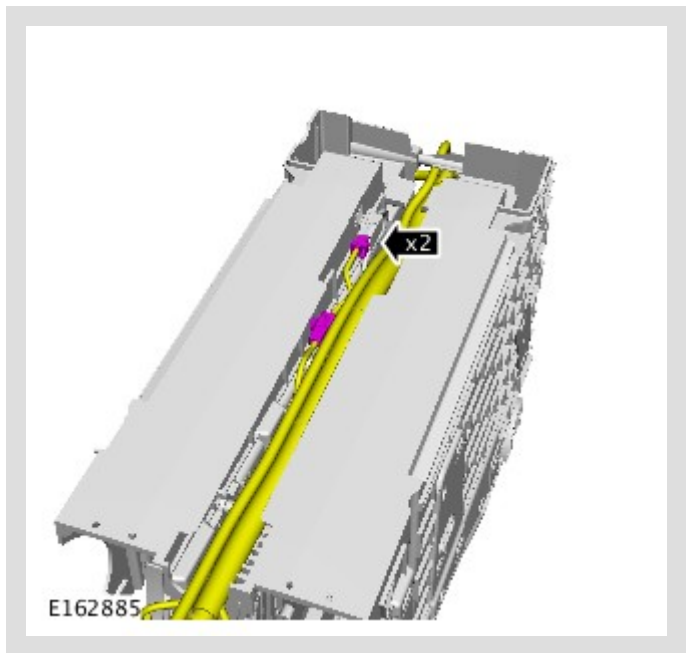

7.

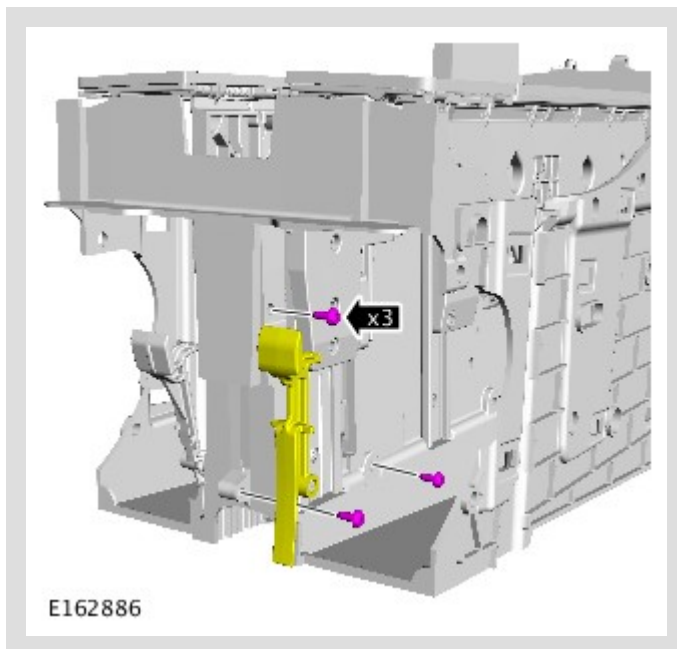


Torque: 2.2 Nm

8.




Torque: 2.2 Nm

9.

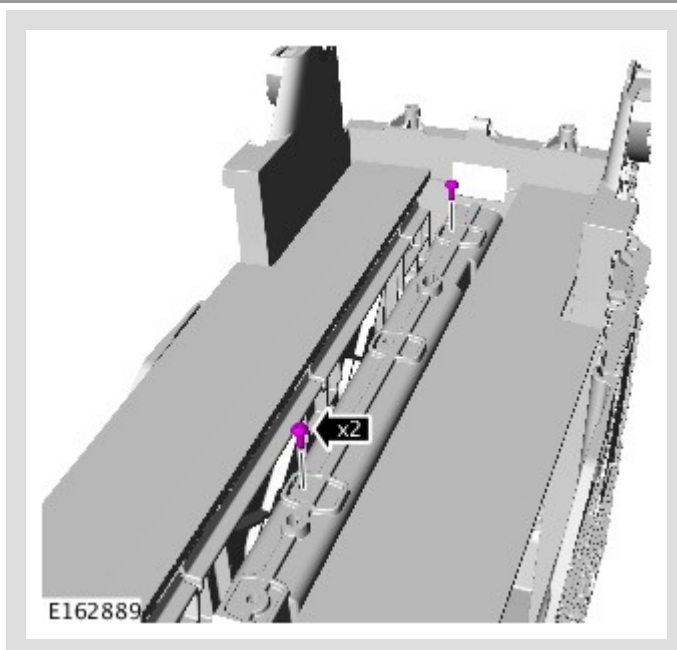

Torque: 2.2 Nm

10.

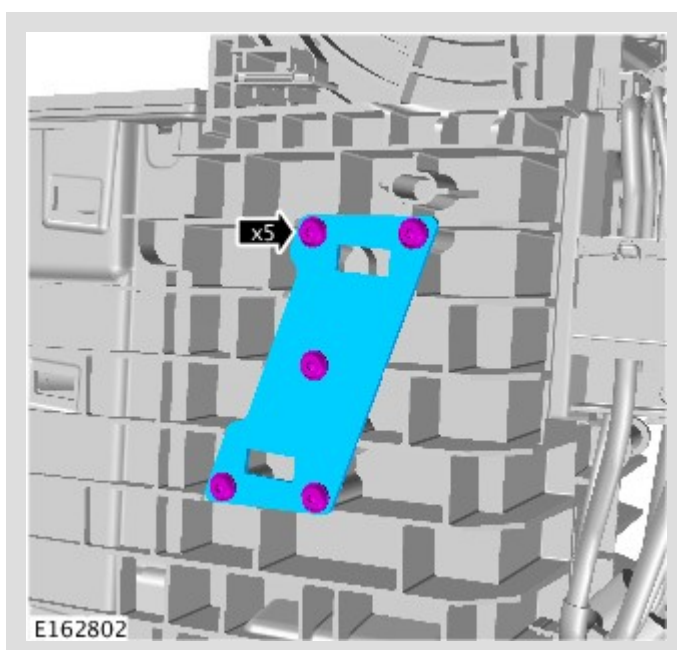

Repeat procedure for the other side.

Torque: 2.2 Nm

11.




Torque: 2 Nm


12.

 NOTES:


- Right hand shown, left hand similar.
- Do not disassemble further if the component is removed for access only.

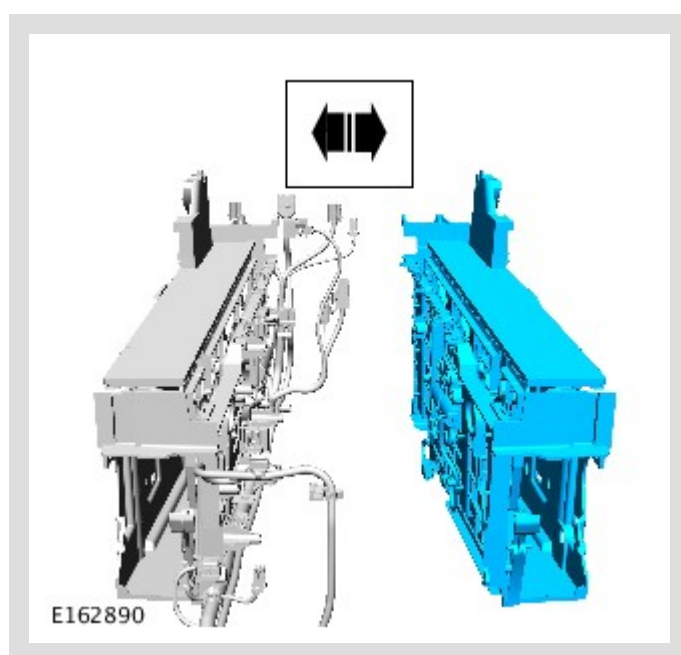

13.

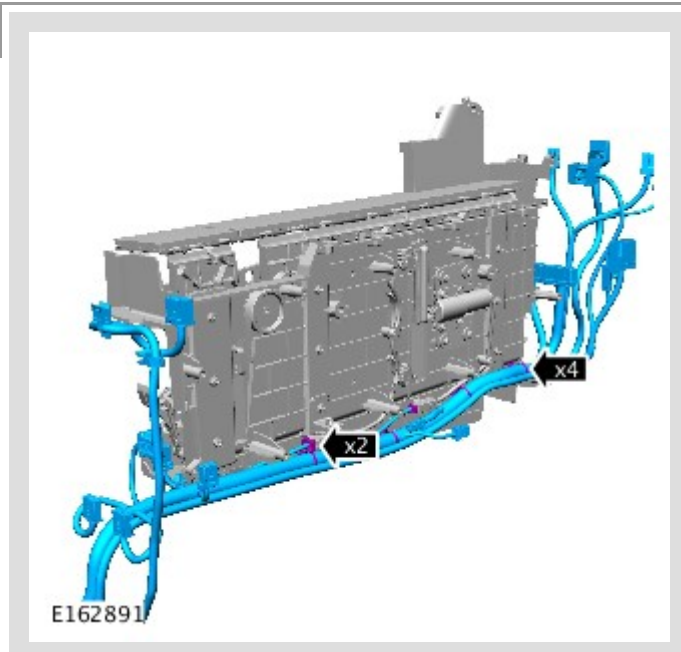


14.

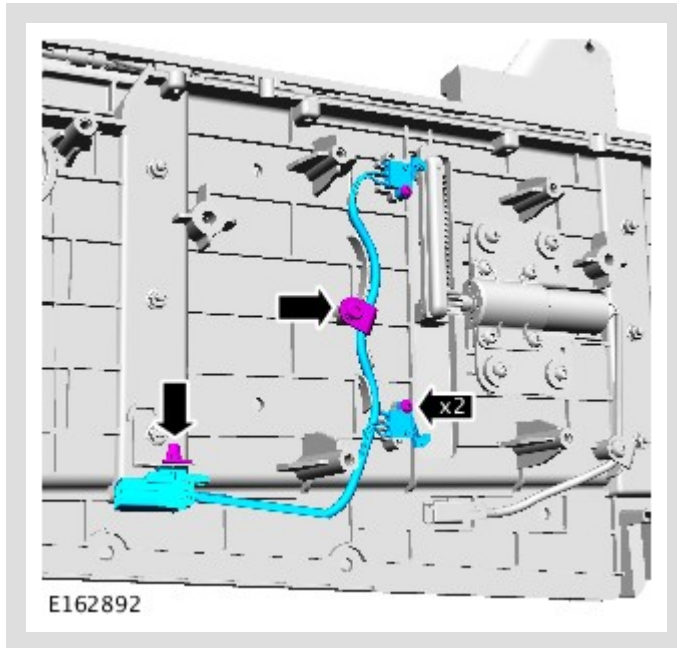


Torque: 1 Nm


15.

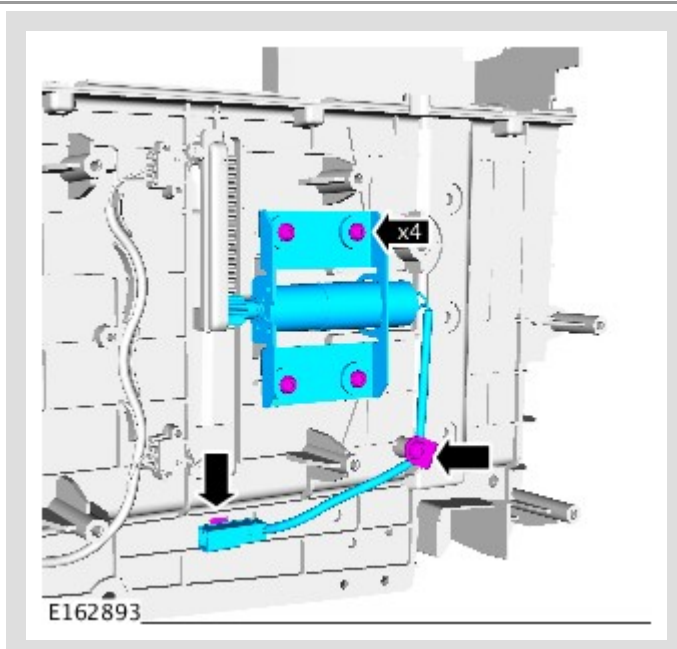


Torque: 1 Nm

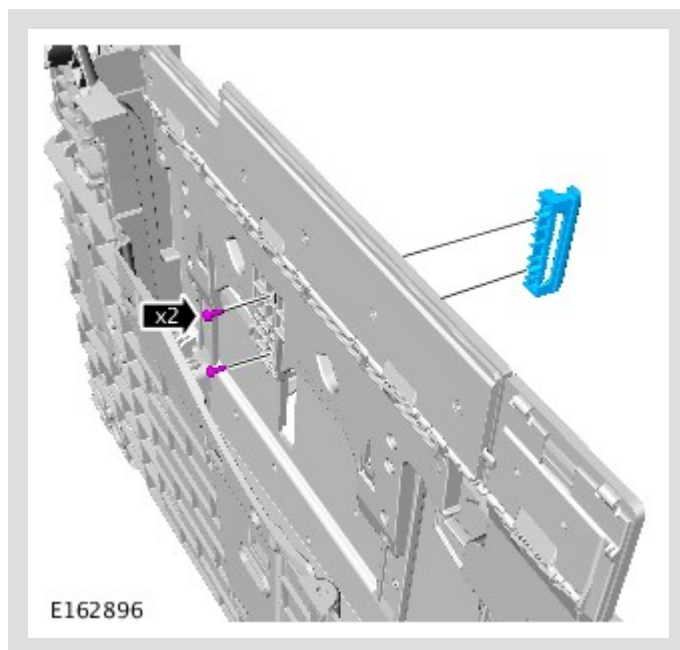


Torque: 1 Nm

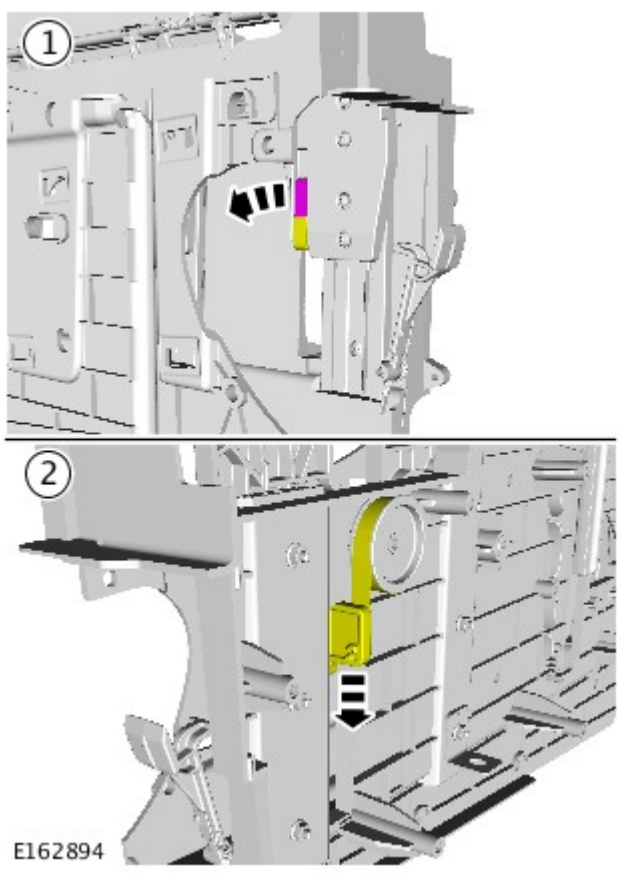

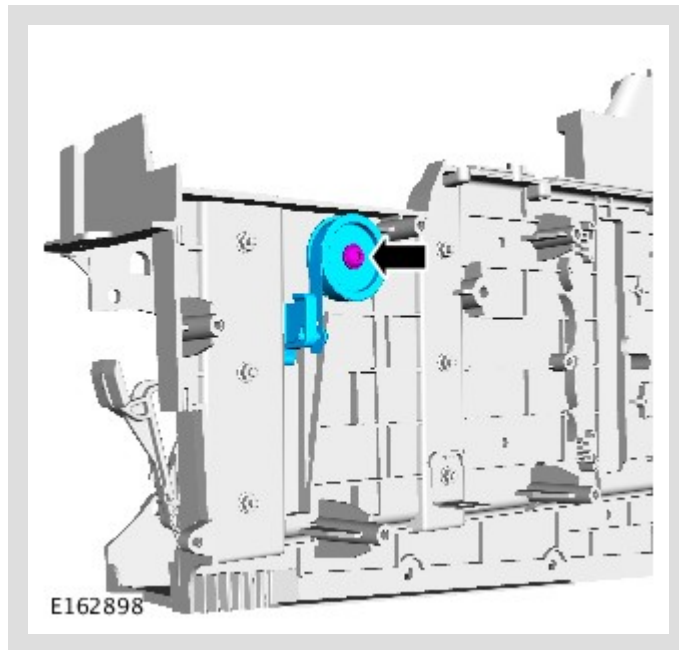


Torque: 2.2 Nm


19.

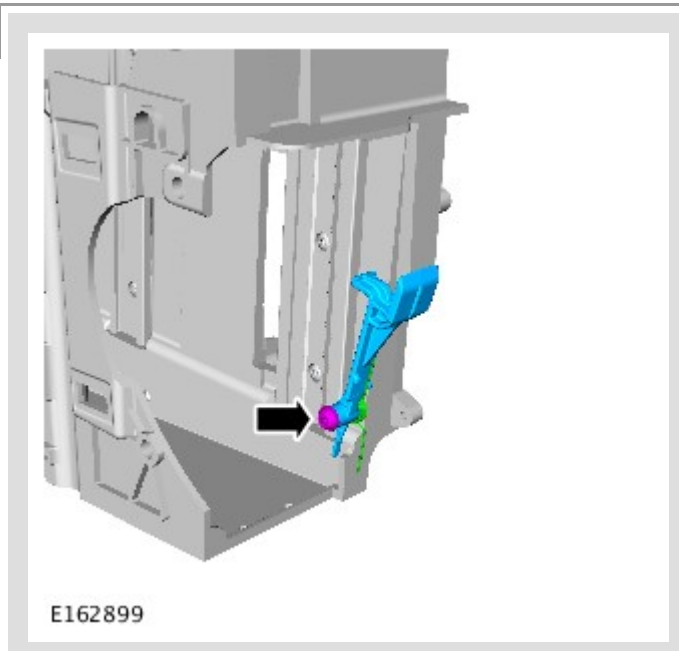

Torque: 2.2 Nm

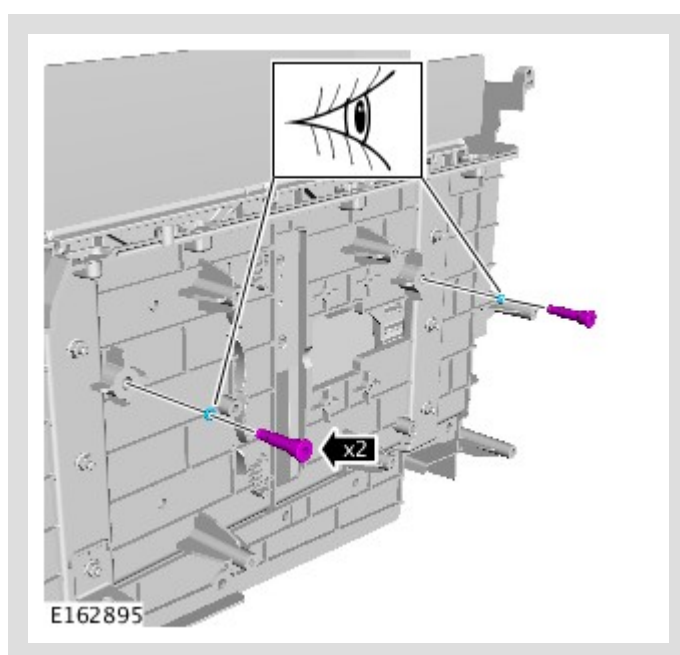


Torque: 2.2 Nm

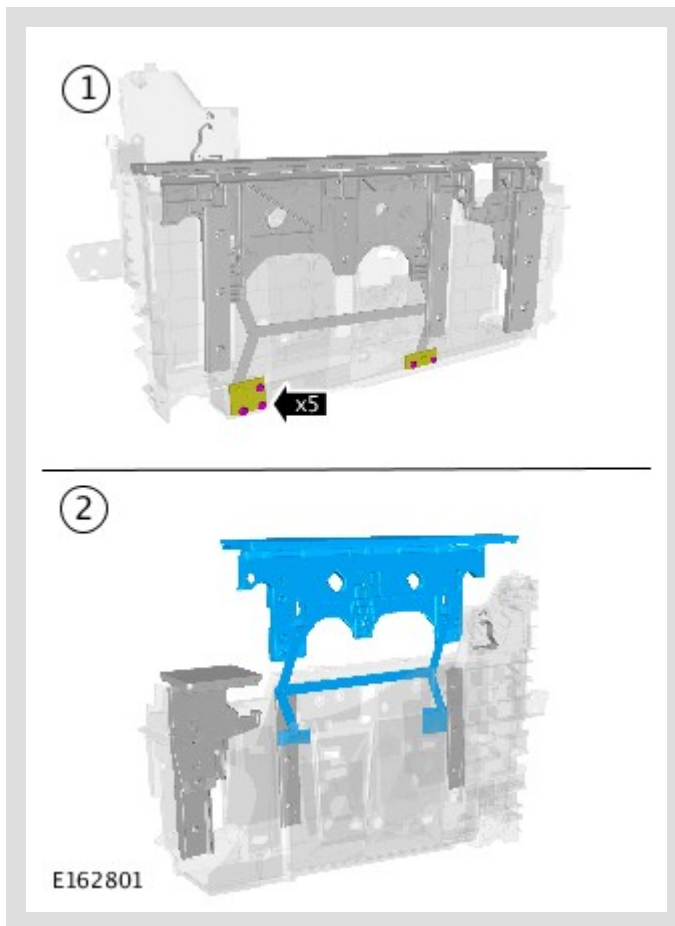

Repeat procedure for the other side.

Torque: 1 Nm

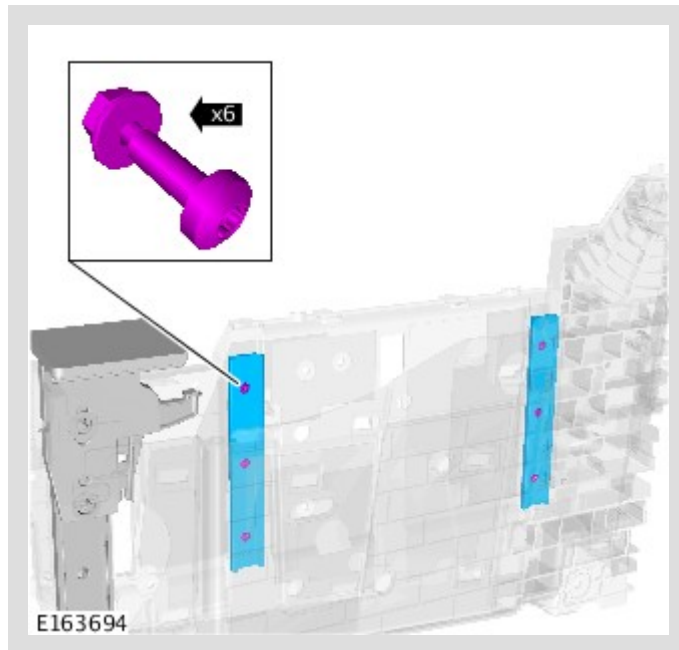

Repeat procedure for the other side.


Torque: 2.2 Nm

23.



WARNING:

Make sure the slider is not separated from the track to prevent the bearings falling out.

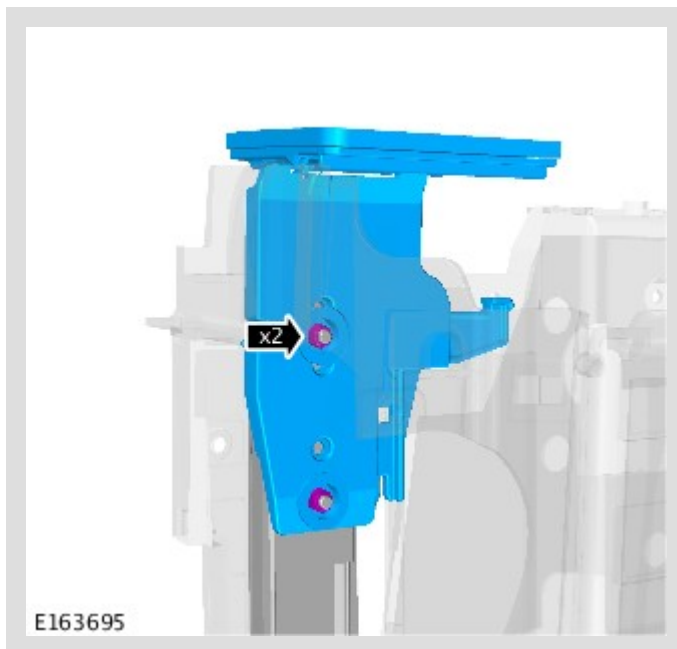

Repeat procedure for the other side.

Torque: 2.2 Nm

24.



WARNING:

Make sure the slider is not separated from the track to prevent the bearings falling out.



Repeat procedure for the other side.


Torque: 2.2 Nm

25.



WARNING:

Make sure the slider is not separated from the track to prevent the bearings falling out.

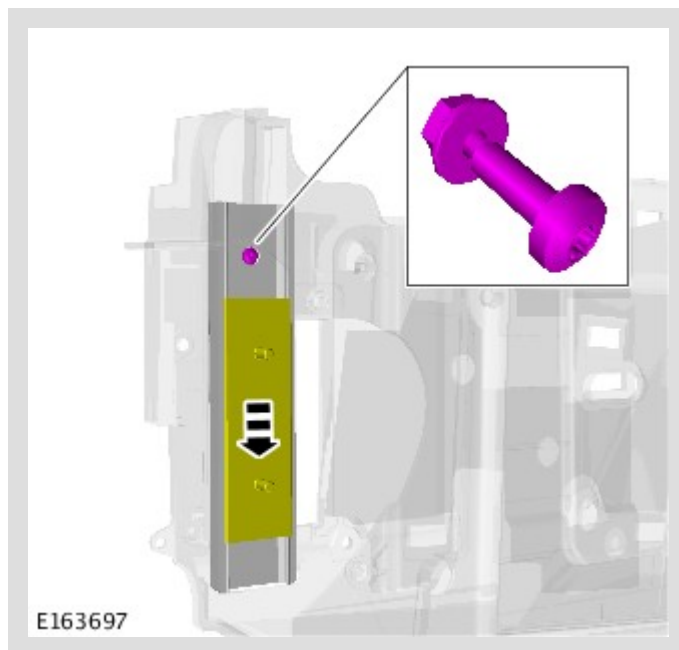

Repeat procedure for the other side.


Torque: 2.2 Nm

26.



WARNING:

Make sure the slider is not separated from the track to prevent the bearings falling out.

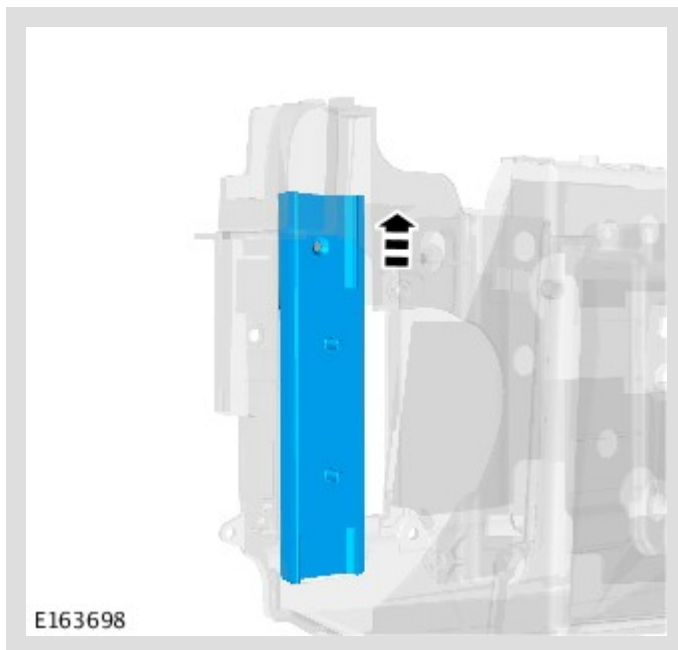

Repeat procedure for the other side.

INSTALLATION

1.

NOTE:

Install the trim retaining clips in the moulding prior to installing the components.



-
2. To install, reverse the removal procedure.