

2016.0 RANGE ROVER (LG), 501-12

INSTRUMENT PANEL AND CONSOLE - STANDARD WHEEL BASE

# IN-VEHICLE CROSSBEAM

[G1551604]

REMOVAL AND INSTALLATION

## REMOVAL

### NOTE:

Removal steps in this procedure may contain installation details.



All vehicles

1.

### WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Make the SRS system safe.


Refer to: Standard Workshop Practices (100-00 General Information, Description and Operation).

3. Refer to: Heater Core and Evaporator Core Housing (412-01A,

Removal and Installation).


Refer to: Heater Core and Evaporator Core Housing (412-01B,  
Removal and Installation).

4.

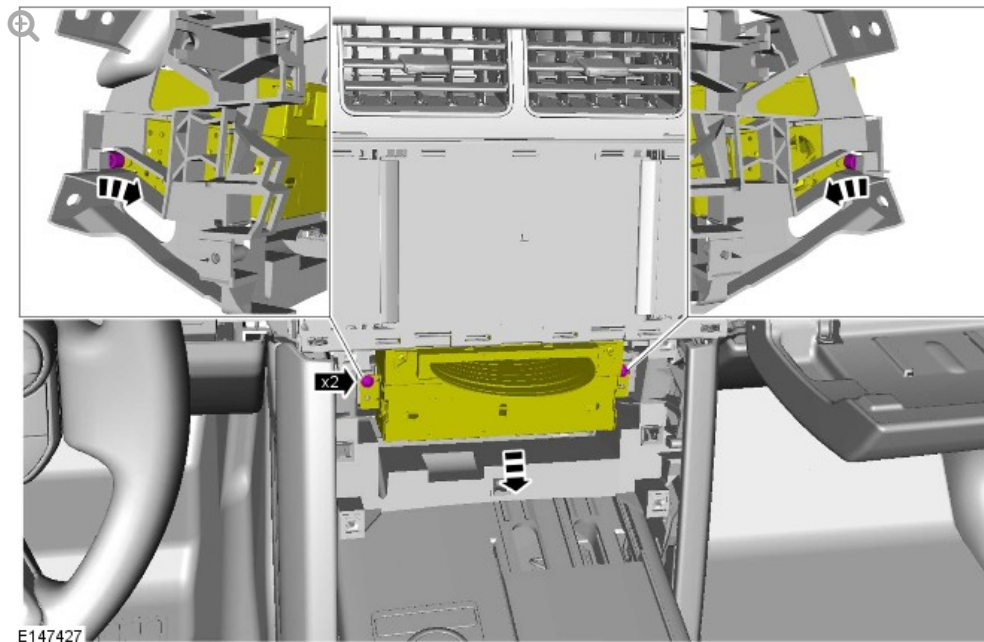


*Torque: 2.2 Nm*



5.

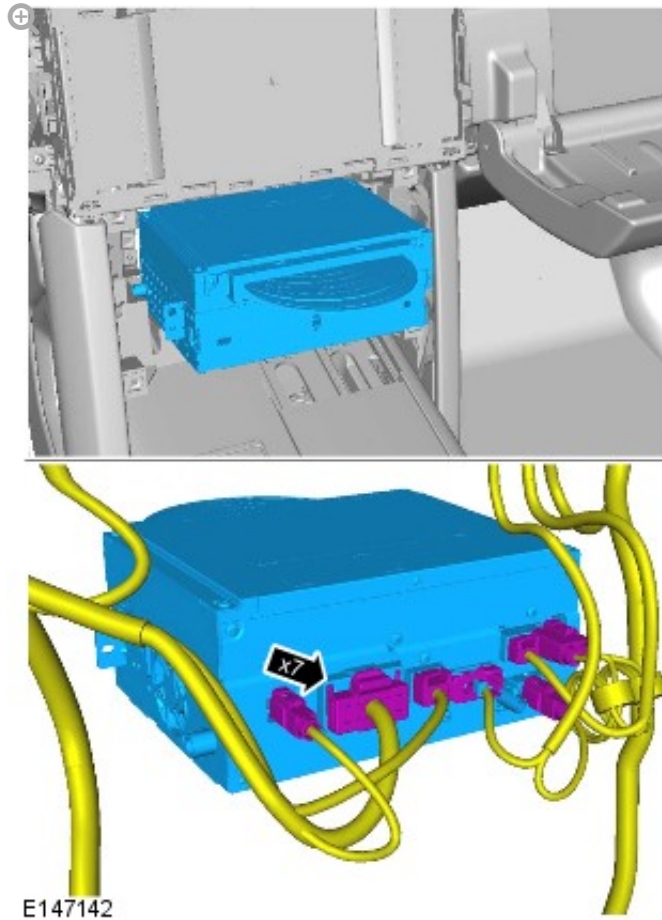



6.

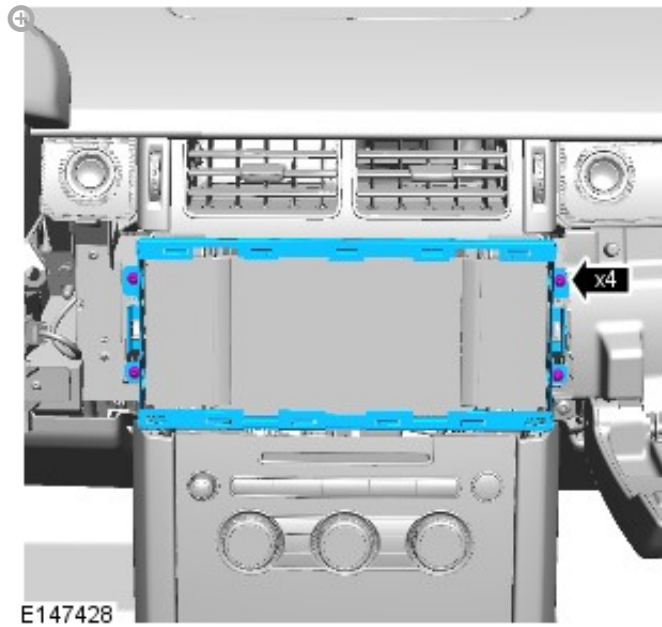

7.

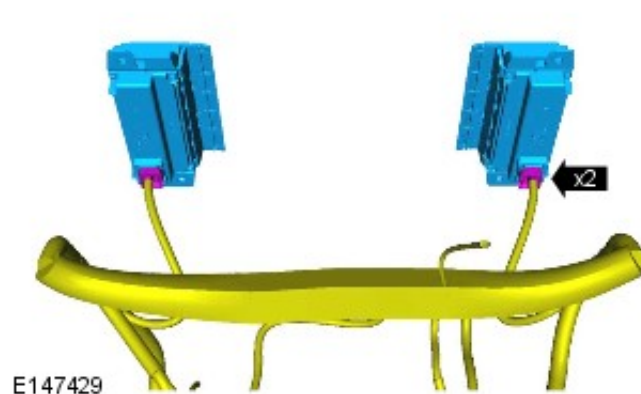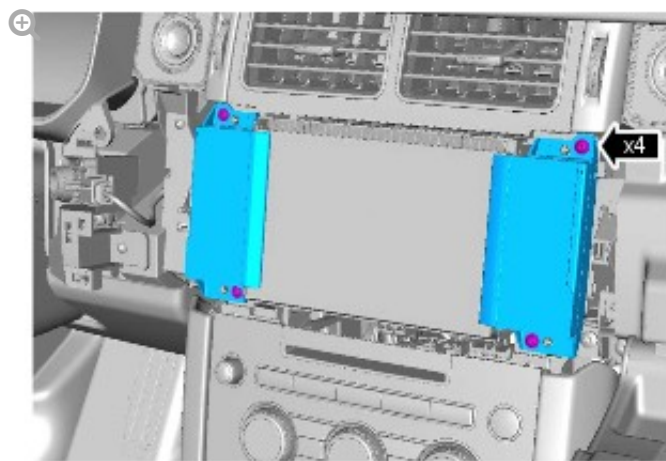


8.

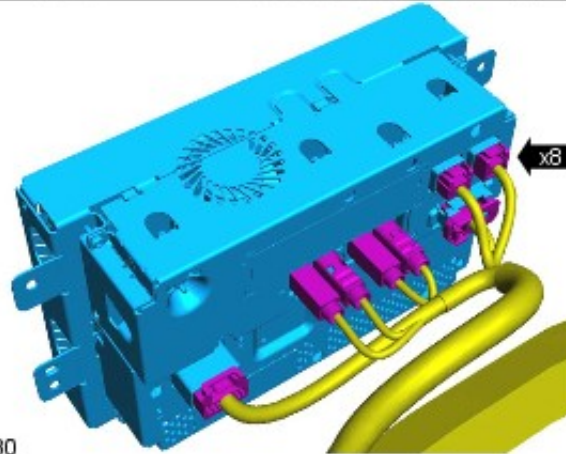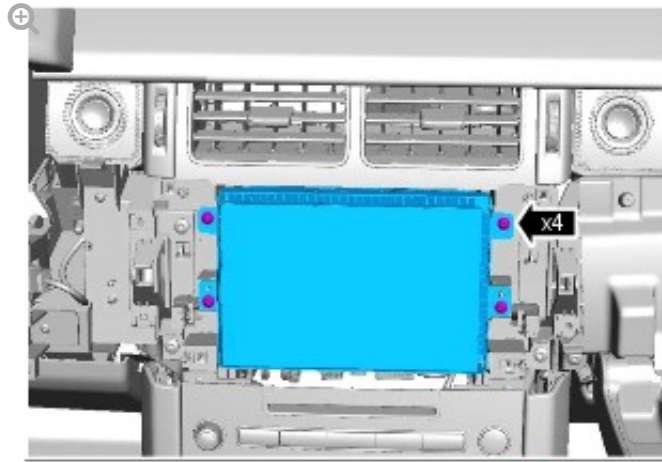


E147430

9.

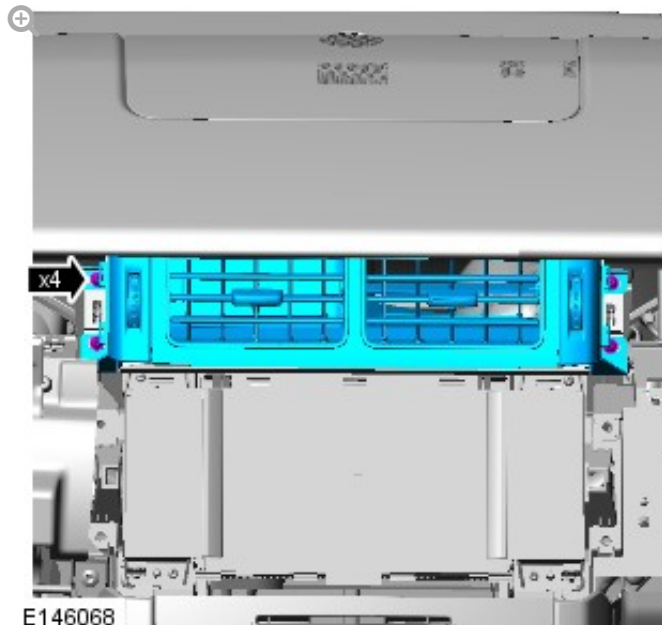


E146068


10.

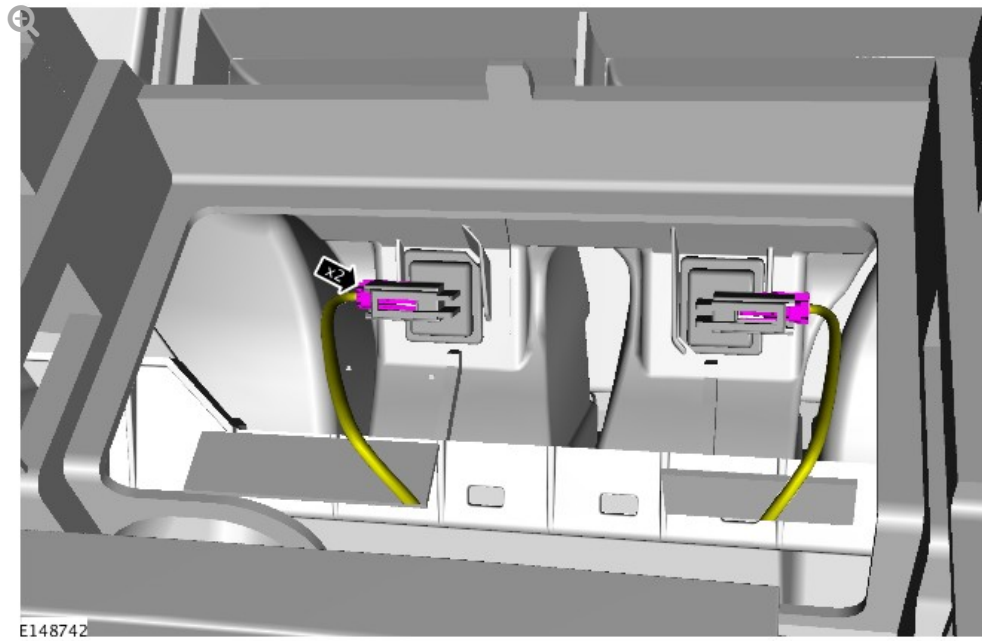


11.

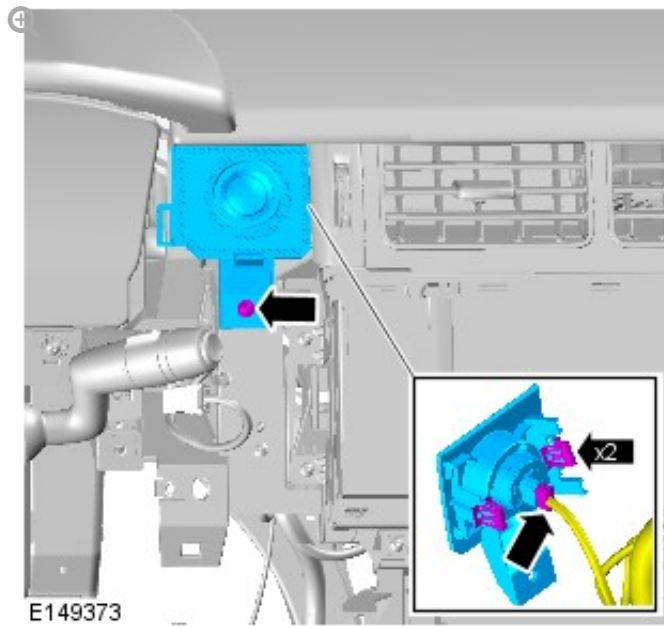


12.

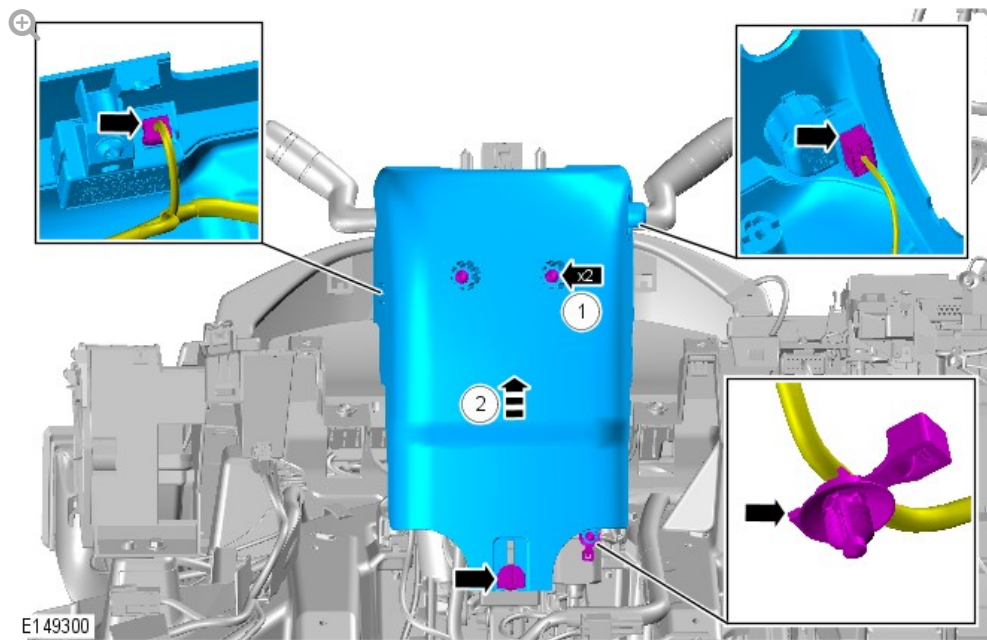

13.

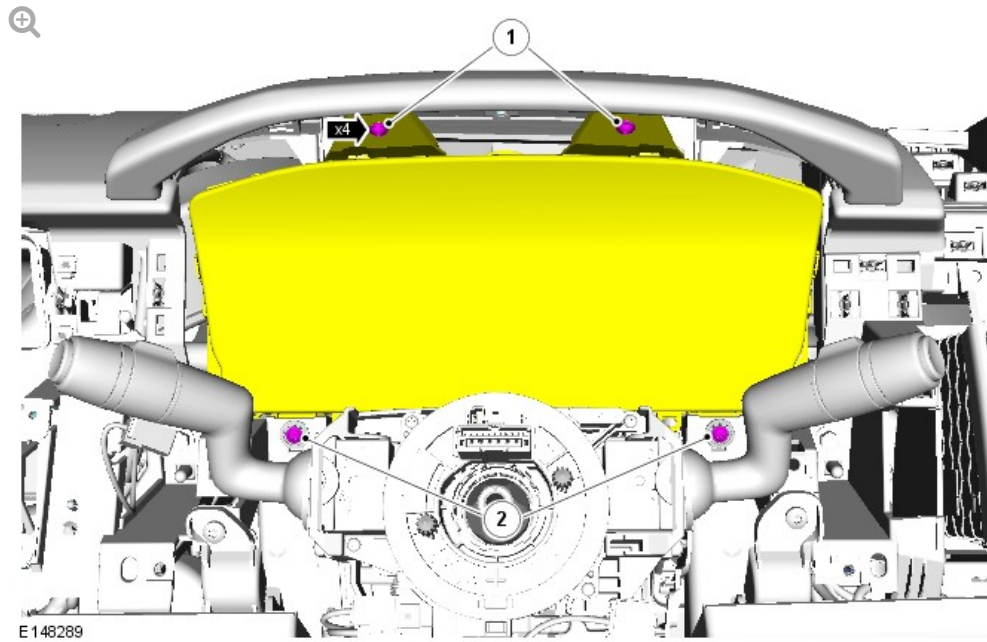



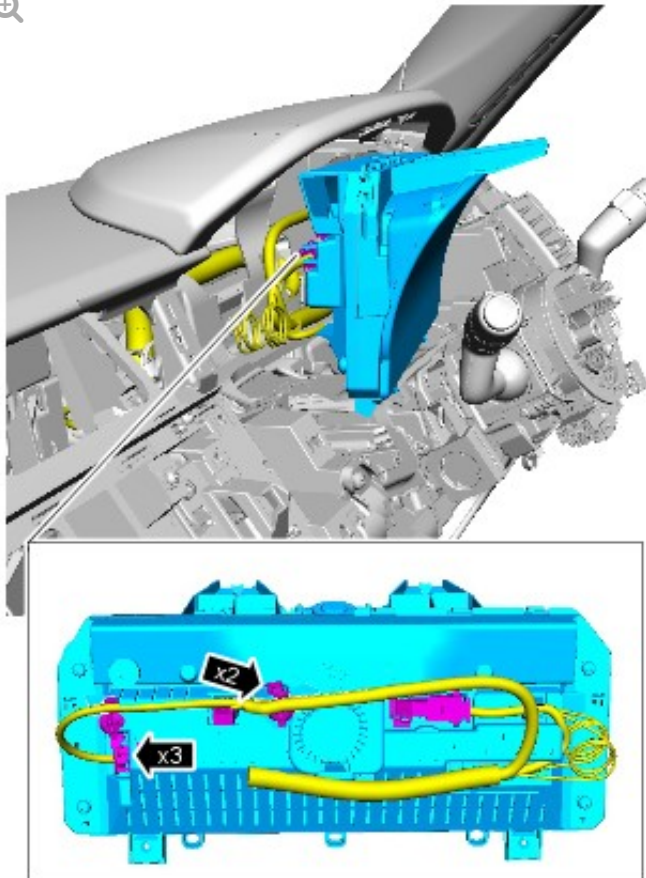


E148290



15.



16.

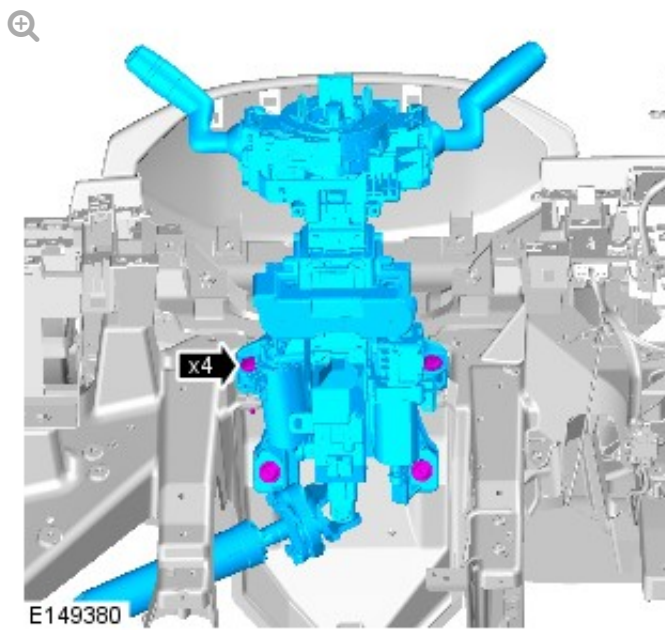


*Torque: 25 Nm*

17.

**CAUTION:**

Install all the bolts finger tight before final tightening.

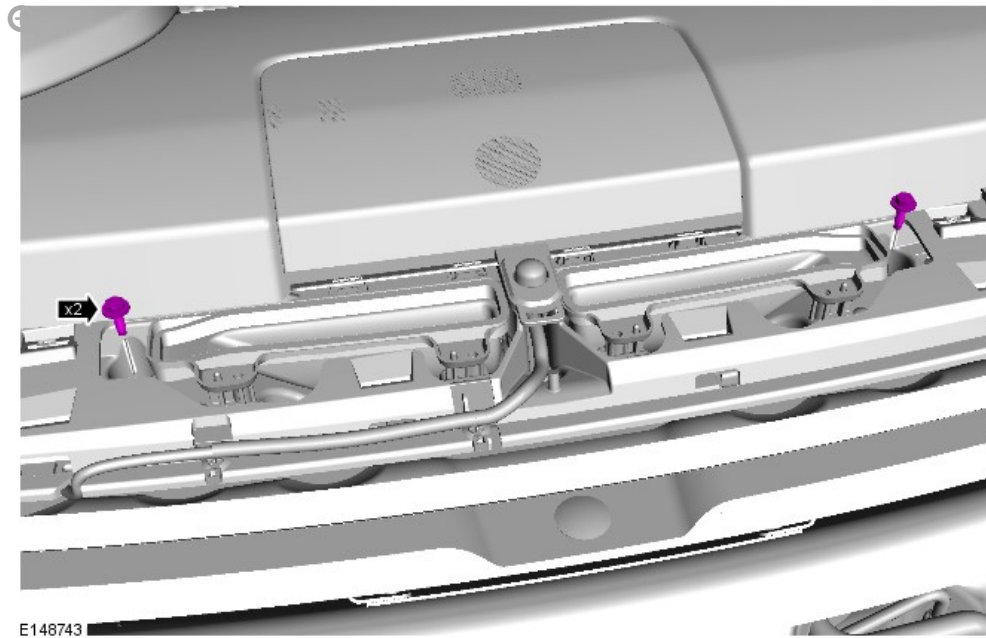


*Torque: 9 Nm*

18.

**NOTE:**

Install the bolt finger tight before final tightening.

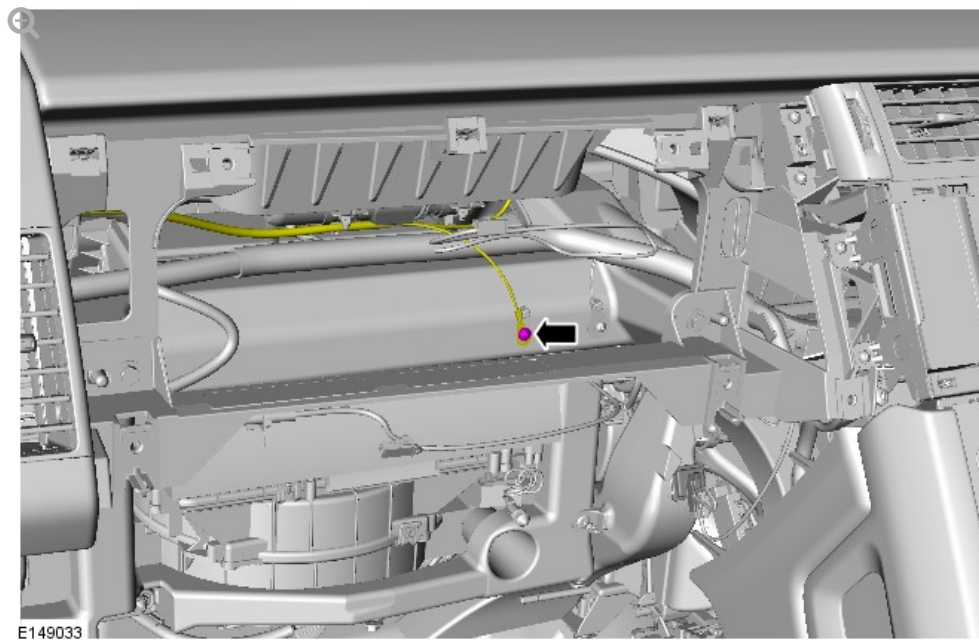


**Torque: 12 Nm**

19.


**CAUTION:**

Install all the bolts finger tight before final tightening.

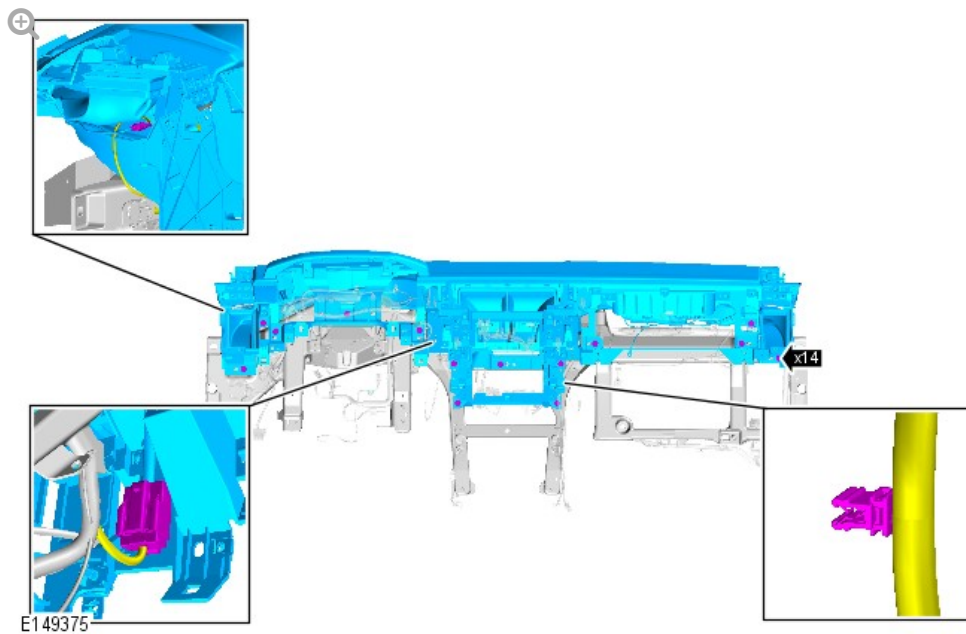

*Torque: 9 Nm*


20.

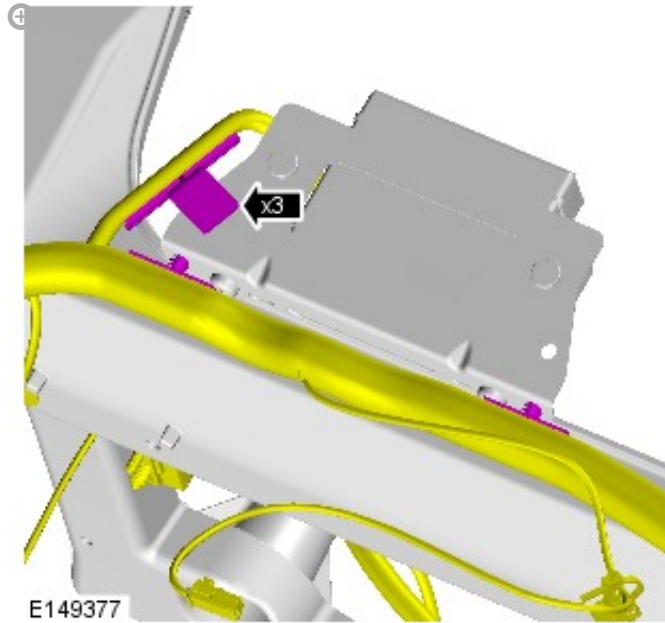

21.

**CAUTION:**


Install all the bolts finger tight before final tightening.

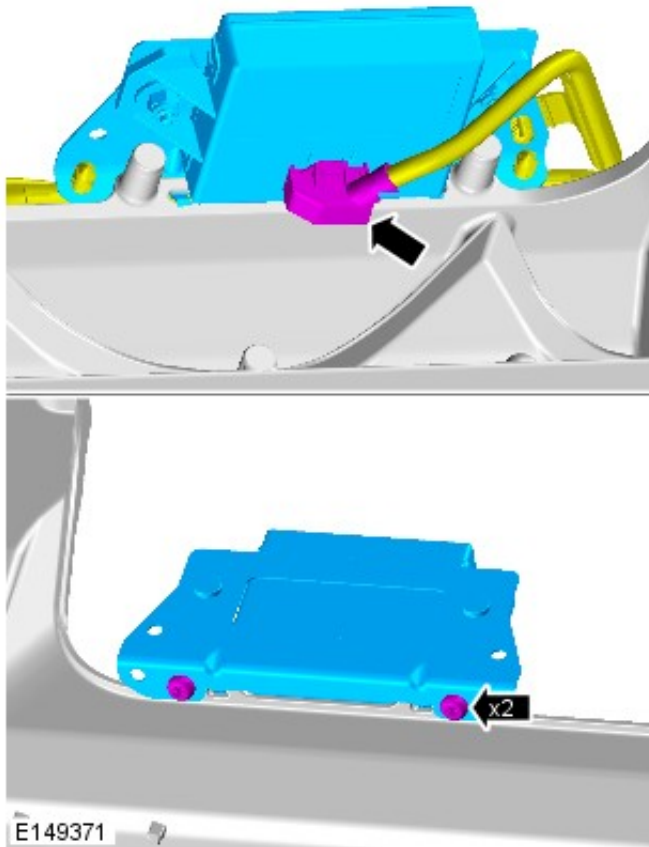

E149371

*Torque: 9 Nm*

22.

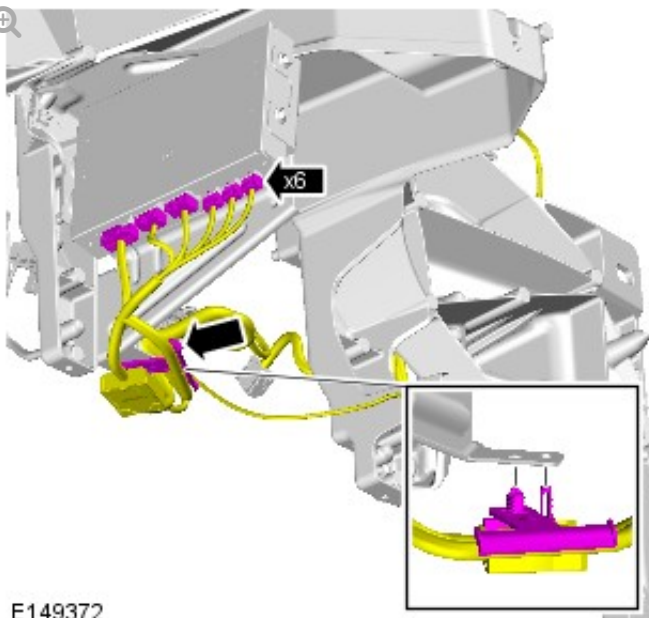


E149372

23.

### CAUTION:

Install all the bolts finger tight before final tightening.

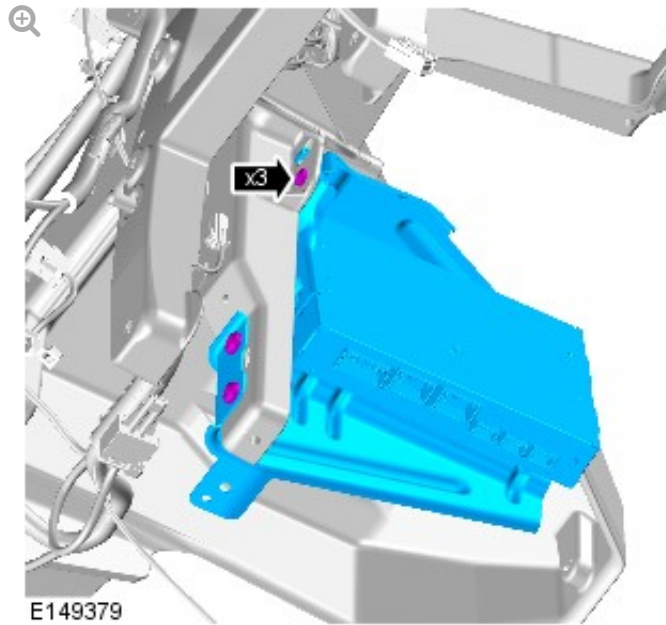


*Torque: 9 Nm*



NAS vehicles

24.

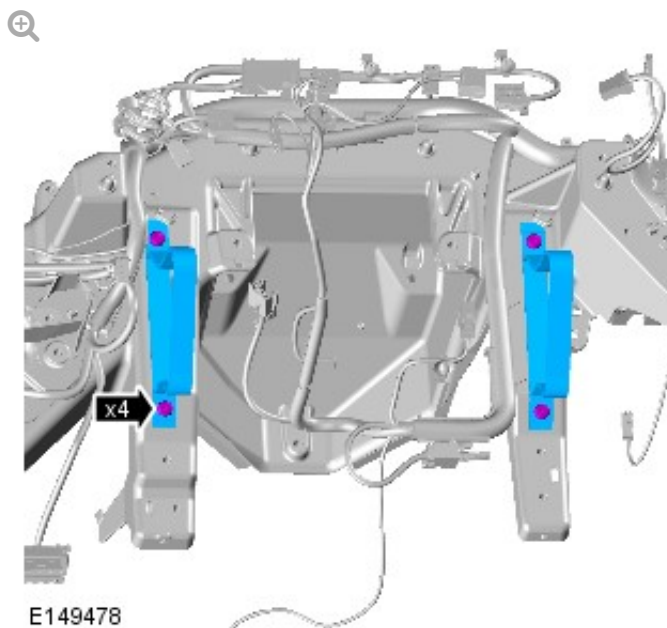



Torque: 9 Nm





All vehicles

25.

### CAUTION:


Install all the bolts finger tight before final tightening.

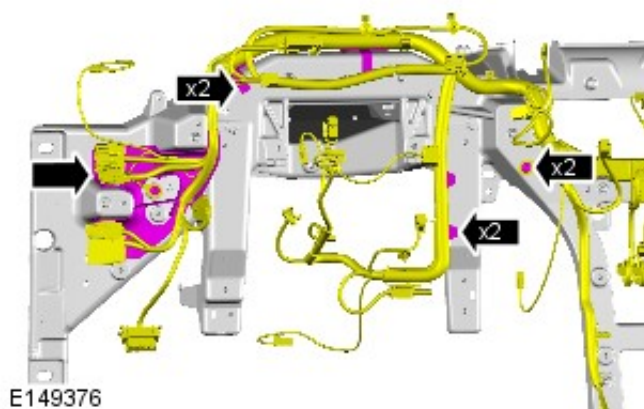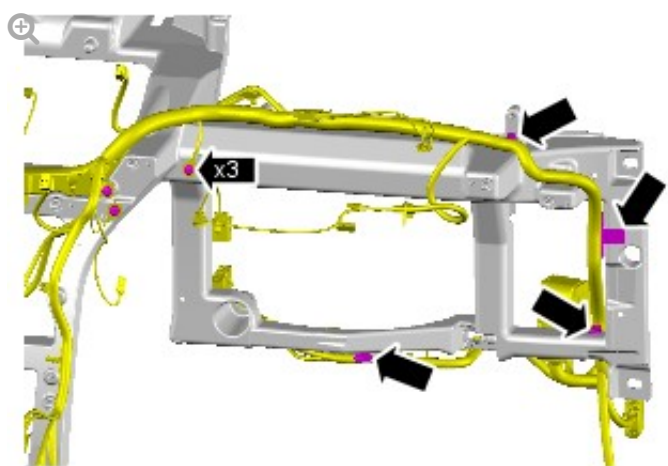

Torque: 12 Nm




26.

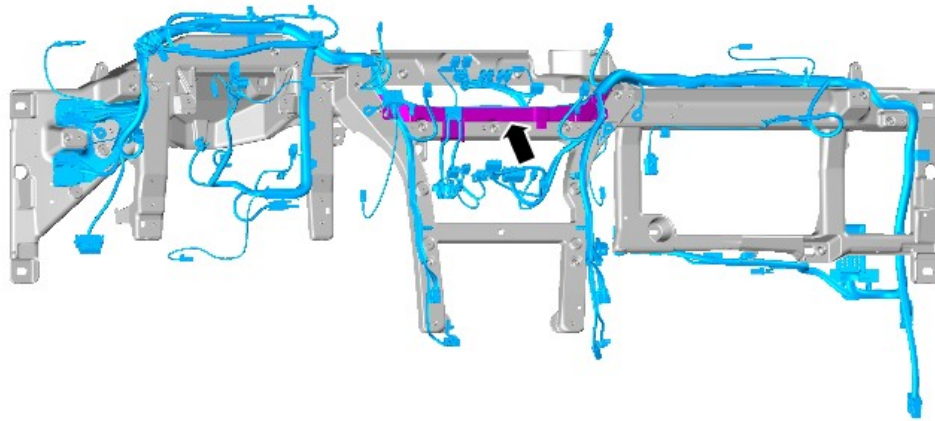

E149381

27.

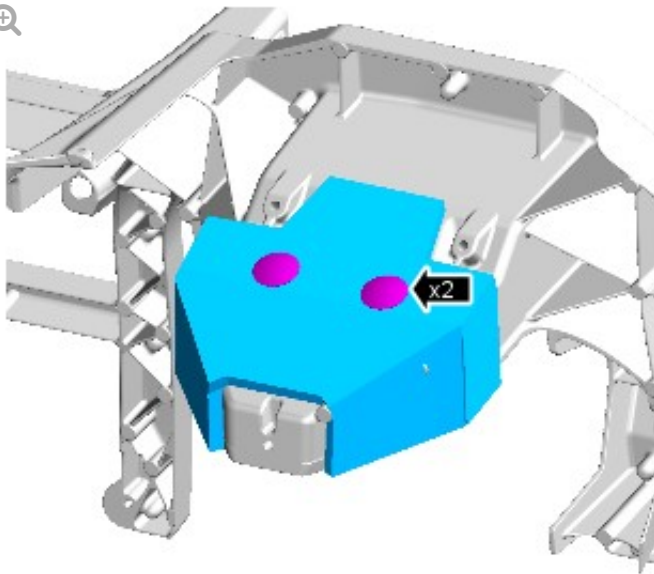

E149378


---

## INSTALLATION

1.

### NOTE:

Install new retaining clips.

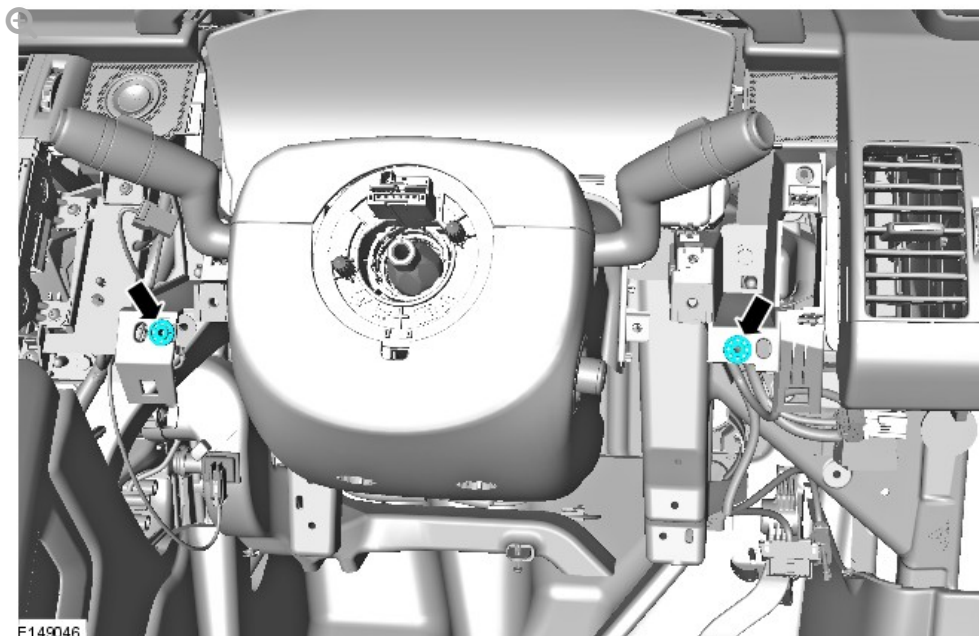

*Torque: 1.1 Nm*

2.

**NOTE:**

Install the trim retaining clips in the moulding prior to installing the components.



E149095

3. To install, reverse the removal procedure.

