

2016.0 RANGE ROVER (LG), 501-30

REAR END SHEET METAL REPAIRS

BACK PANEL OUTER (G1478828)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

The back panel outer is installed in conjunction with:

- Rear bumper
 - Rear muffler
-

1.



E143539

The back panel outer is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.

For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).


-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

4. For additional information, refer to: [Rear Bumper](#) (501-19 Bumpers, Removal and Installation).
5. For additional information, refer to: Rear Muffler (309-00 Exhaust System - TDV6 3.0L Diesel, Removal and Installation) / [Rear Muffler](#) (309-00D Exhaust System - TDV8 4.4L Diesel, Removal and Installation) / [Rear Muffler](#) (309-00C Exhaust System - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).
6. Release the tailgate weatherstrip and position to one side.
7. Remove the tailgate latch striker.
8. Release the loadspace wiring harness and position it to one side.


9.

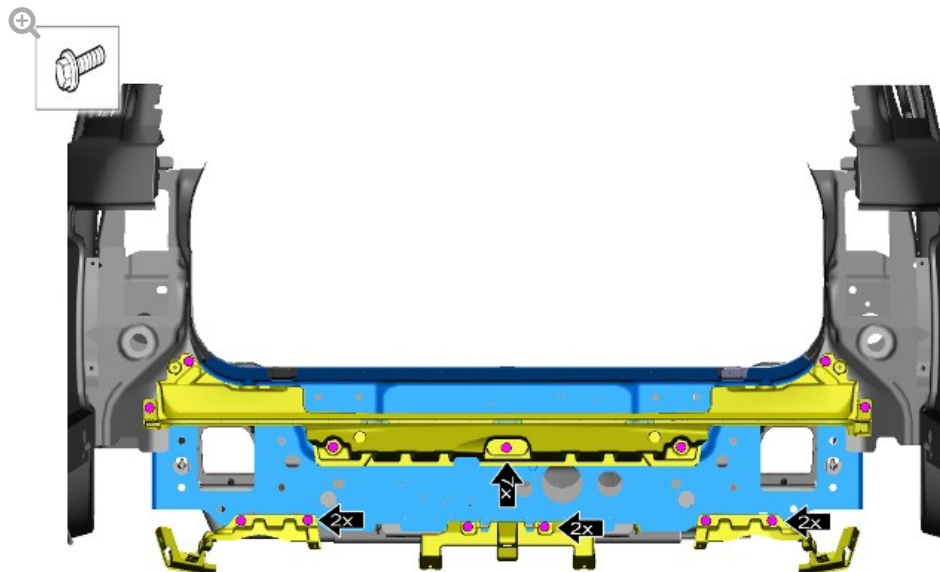

E143546

Remove the rear bumper cover retaining strip and the lower bumper brackets as indicated.


10.

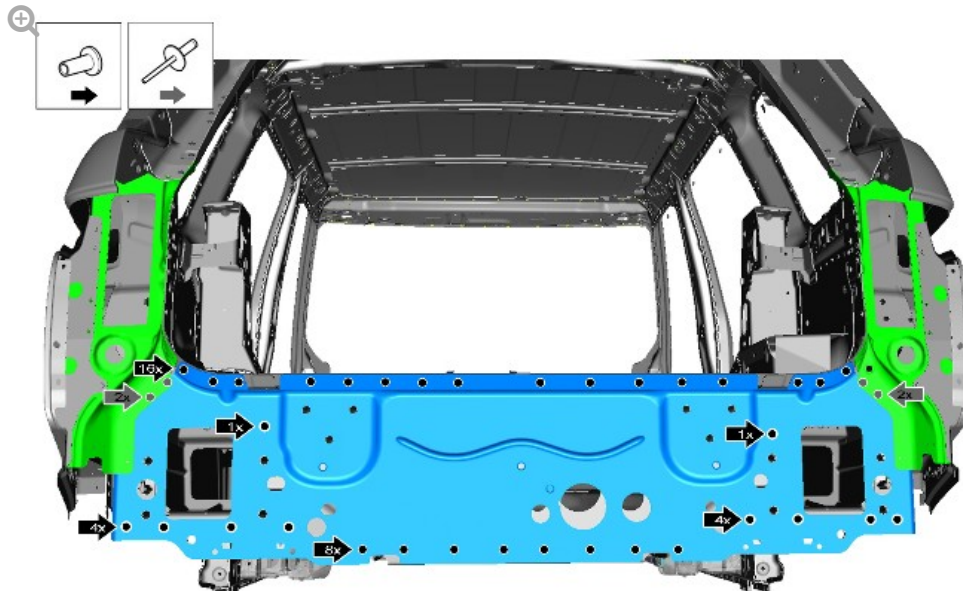

E143540

Remove the SPR's and the BSF's as indicated.


11.

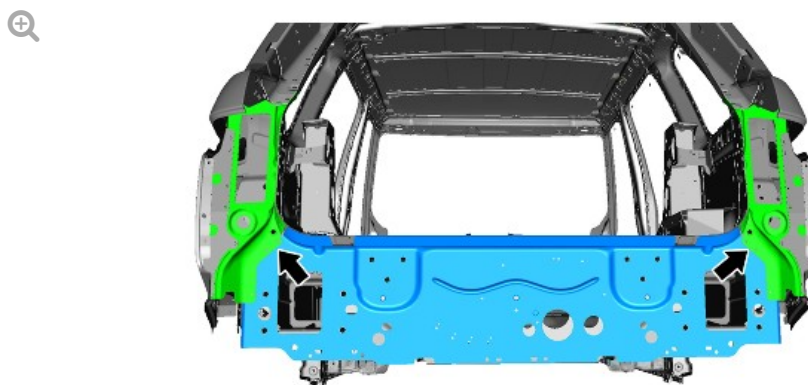

E143543

Carefully build an expansion space between the rear lamp panel outer and the outer back panel as indicated.

12.

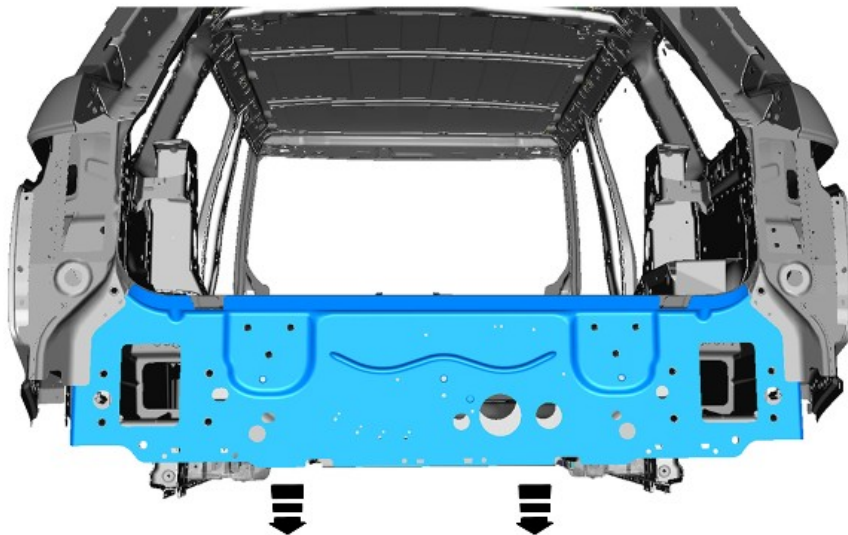


E143544

Separate the joints and pull down on the back panel outer to remove it as indicated.

13.

NOTE:

If there is any evidence of damage or cracks to the battery tray a new component must be installed.

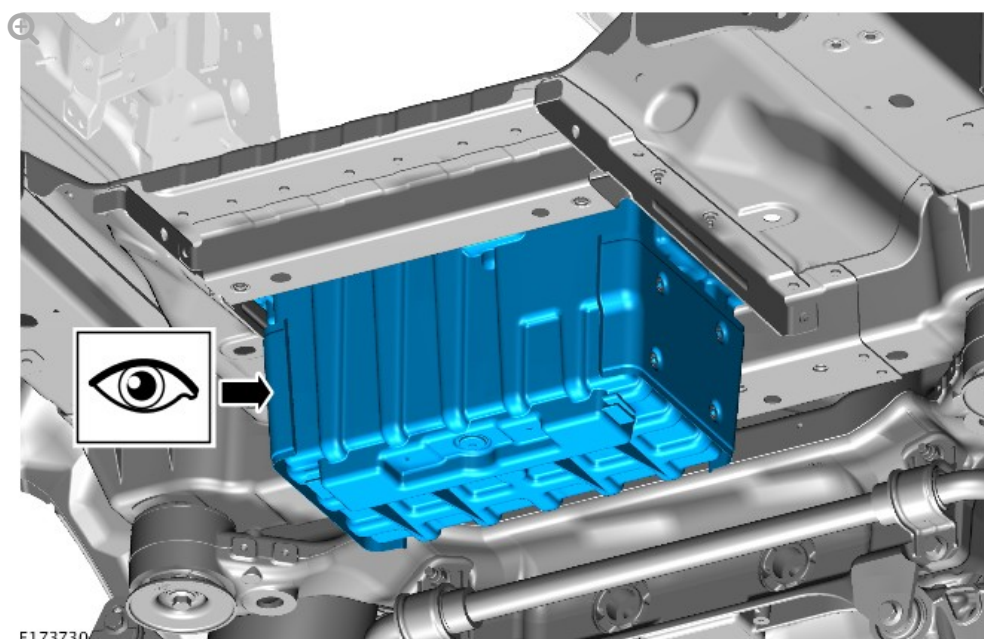

E173730

Check the integrity of the battery tray as indicated.

INSTALLATION

CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.


NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1.

NOTES:

- If the peg indicated by arrow one is broken or damaged but no further damage is evident then this is acceptable as the peg is only used in the original vehicle assembly process.
- If the rear bumper mounting indicated by arrow two is suspected to be damaged make sure a non destructive crack test is carried out before installation the back panel outer is carried out.

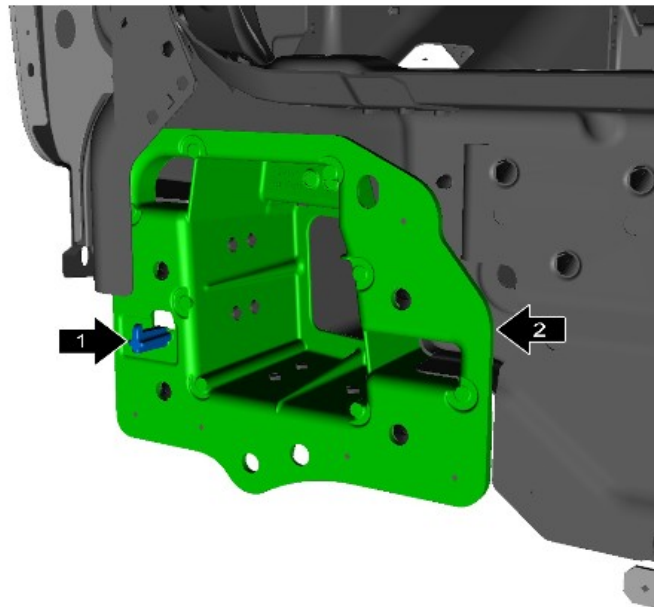


E143547

Check the assembly peg and the rear bumper mounting.

-
2. Remove rivet remnants.
-
3. Dress the flanges where necessary.
-
4. Offer up the new back panel outer and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
-

5.

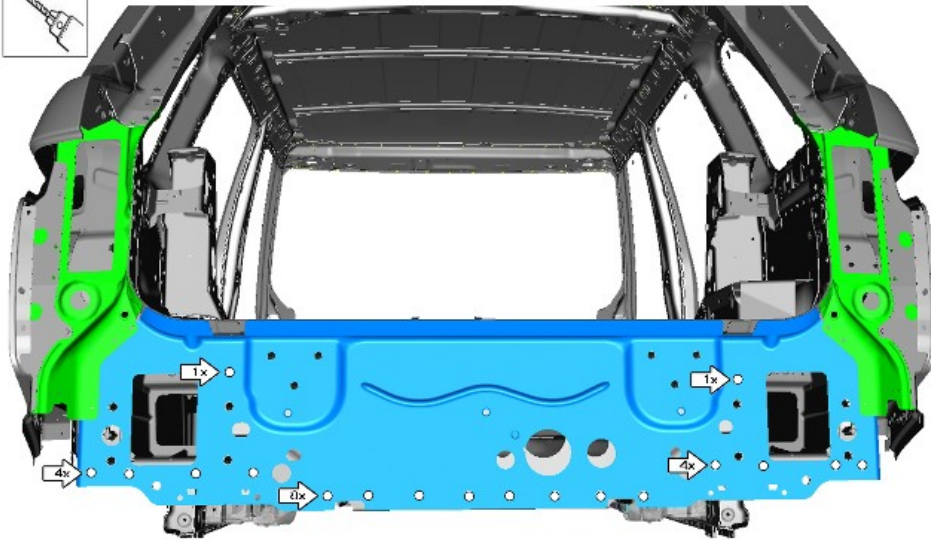

E143545

Drill holes through the old back panel outer into the new back panel outer panel where BSF's are to be installed as indicated.

6. Remove the new back panel outer.

7. Deburr the drilled holes.


8. Using a fine bristle disc, clean and prepare the panel surfaces.

9. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

10.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

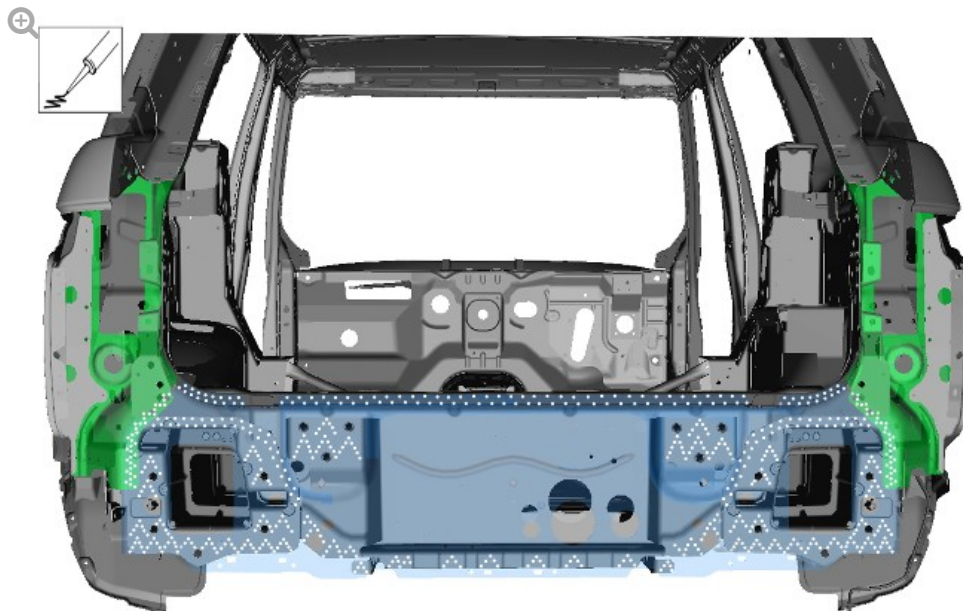


E143542

Apply a 5mm zig zag bead of the Land Rover recommended bonding material to the back panel outer as indicated.

11. Offer up the new back panel outer and clamp into position. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.

12.

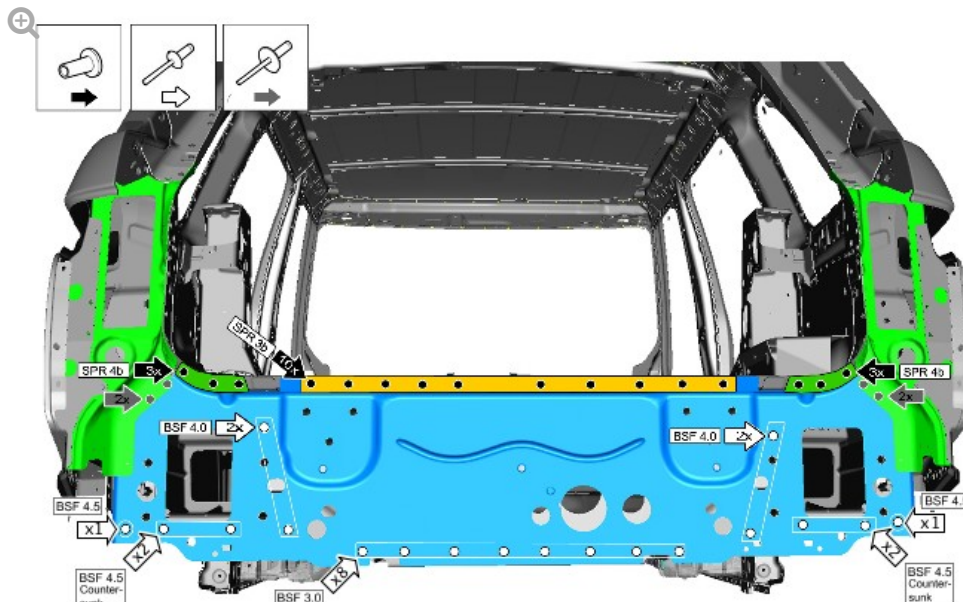


E143541

Install the BSF's and the SPR's as indicated.

13. Remove any excess adhesive.

14.

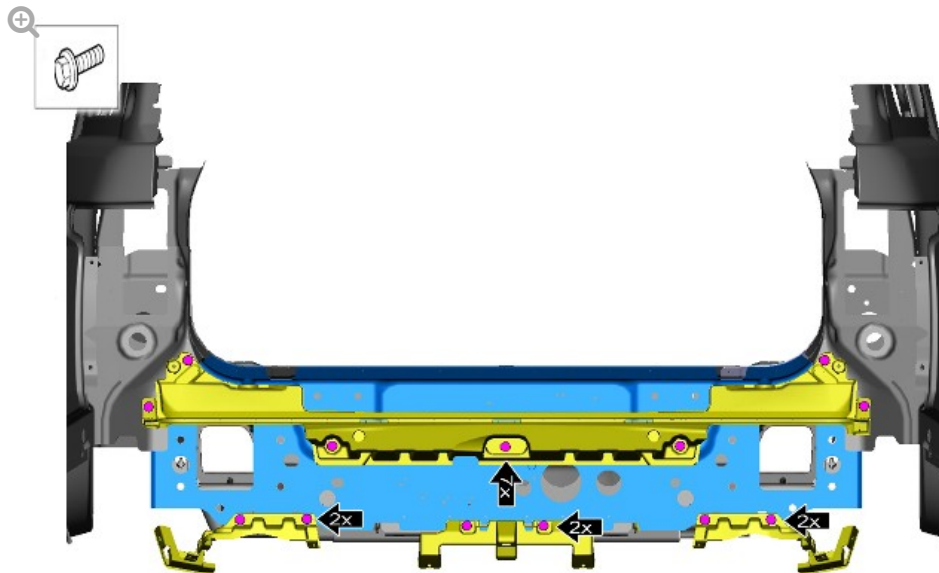

E143546

Install the rear bumper cover retaining strip and the lower bumper brackets and tighten the bolts to 10Nm.

15. Make sure that any open or exposed panel joints are correctly sealed.
16. Make sure corrosion protection is applied to all areas affected by repair.
17. The installation of associated panels and components is the reversal of removal procedure.