

2016.0 RANGE ROVER (LG), 501-30

REAR END SHEET METAL REPAIRS

REAR SIDE MEMBER SECTION [G1454643]

REMOVAL AND INSTALLATION


REMOVAL

NOTE:

The rear side member section is installed in conjunction with:

- Rear bumper
 - Back panel outer
 - Back panel inner
 - Rear floor side extension
 - Rear floor panel section
-

1. 

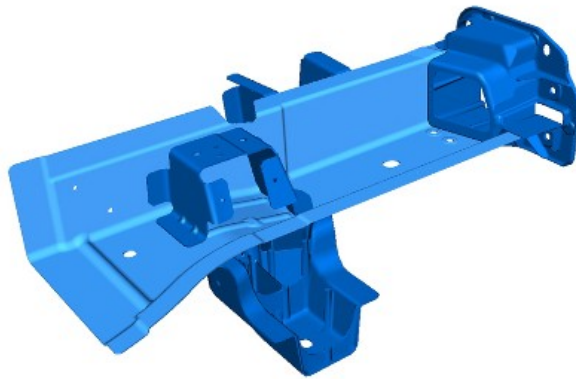

E143509

The rear side member section is serviced as indicated. It includes the rear bumper mounting and the rear side member closing panel.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.

For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

- To make sure the vehicle is correctly aligned it must be placed a Land Rover approved alignment jig.

4. For additional information, refer to: [Rear Bumper](#) (501-19 Bumpers, Removal and Installation).

5. For additional information, refer to: [Back Panel Outer](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

6. For additional information, refer to: [Back Panel Inner](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).


7. For additional information, refer to: [Rear Floor Side Extension](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

8. For additional information, refer to: [Rear Floor Panel Section](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

9. Remove any remaining miscellaneous components from the repair area as necessary.

10. Release the rear side member wiring harness and position it to one side.



11.

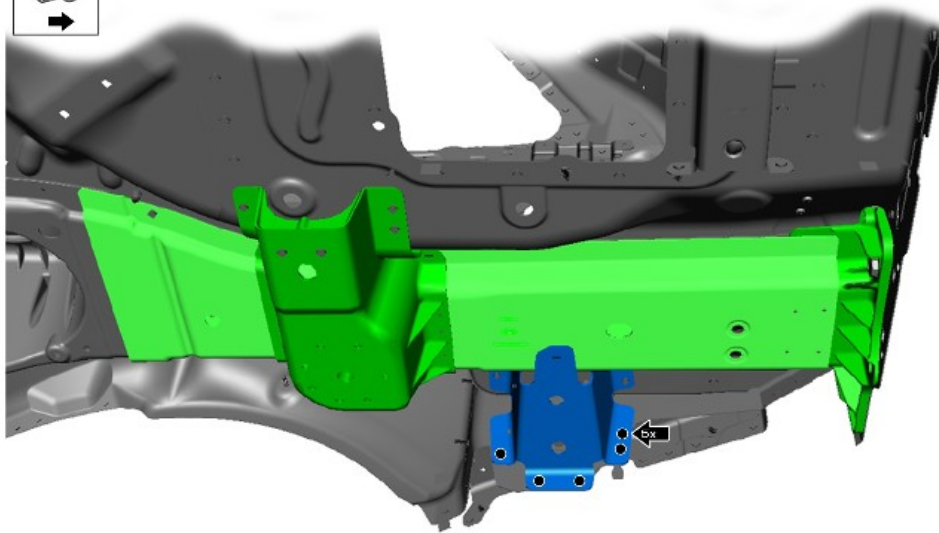

E143510

Remove the SPR's as indicated.


12.

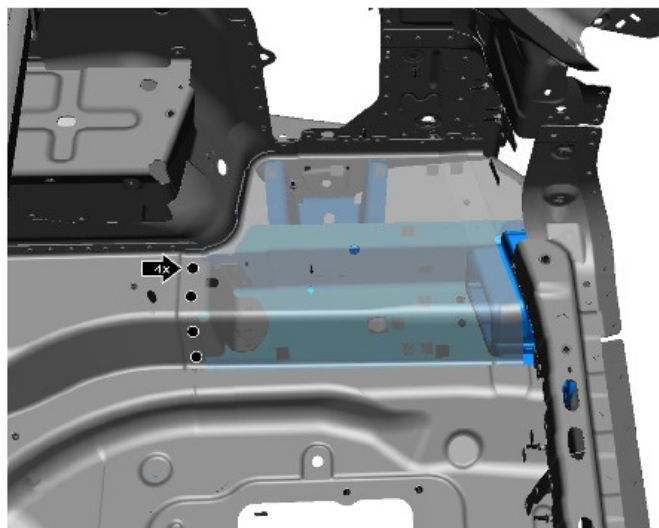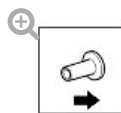

E143511

Remove the SPR's as indicated.

13.

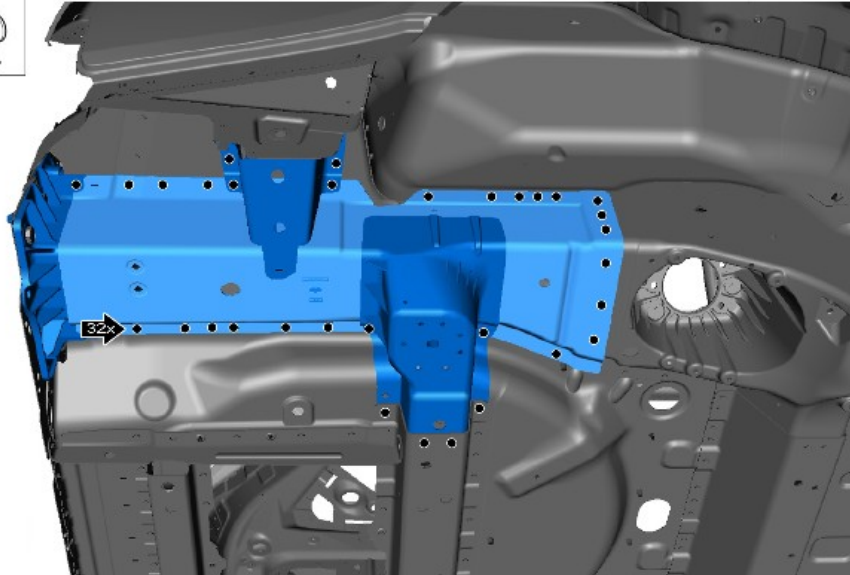



E143512

Remove the SPR's as indicated.

14.

NOTE:


Care should be taken when cutting the rear side member section joint to avoid damaging the inner panels.

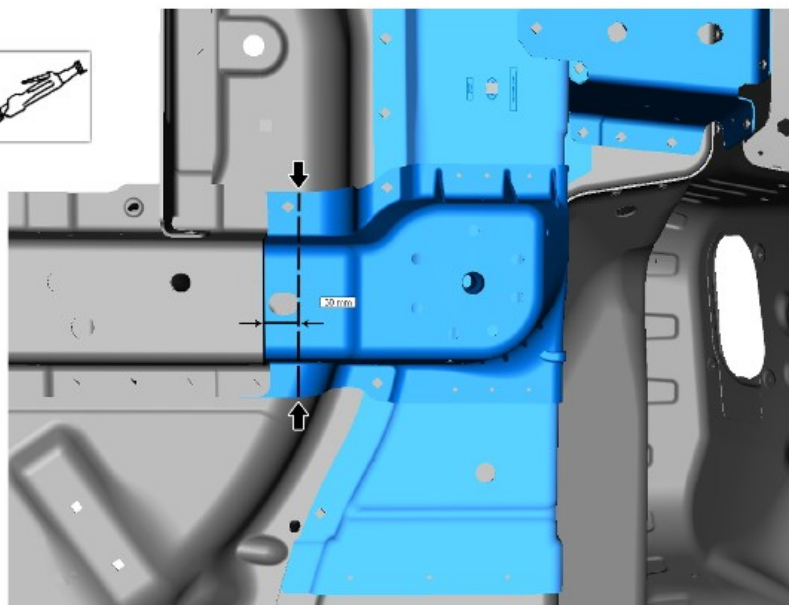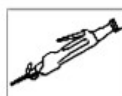

E143513

Mark out and cut through the rear side member, separate the joints and remove the rear side member section as indicated.

15.

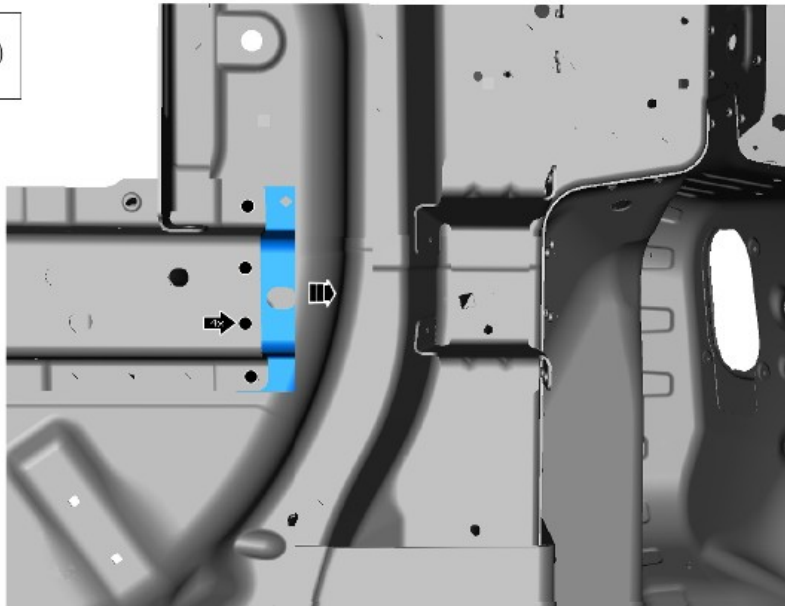

Remove the SPR's and separate the joints. Pull the rear side member remnant to the outside to release it from the vehicle assembly.

INSTALLATION

CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:


- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1. Remove rivet remnants.

2. Dress flanges where necessary.

3. Offer up the new rear side member section and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.


4.

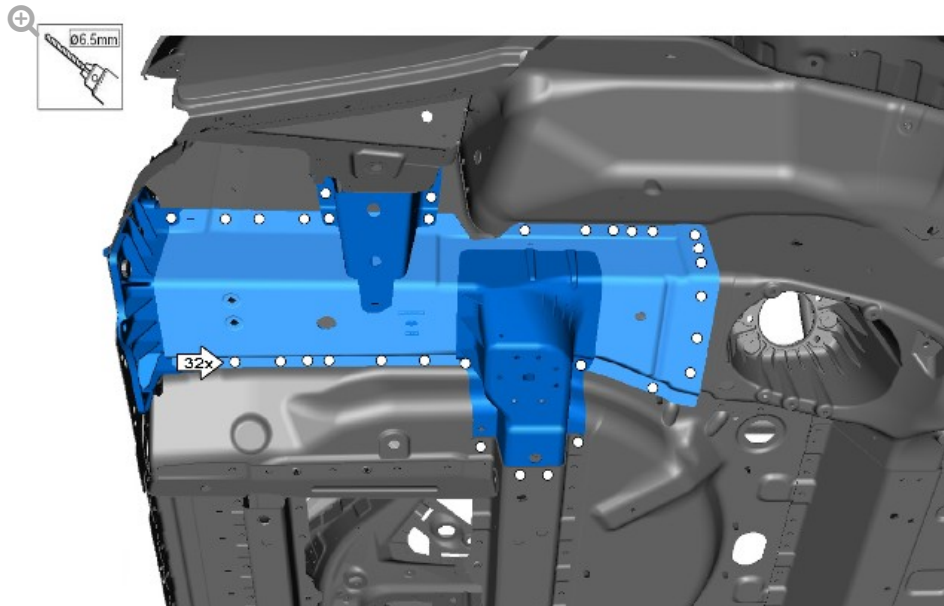

E143515

Drill holes where the BSF's are to be installed as indicated.


5.

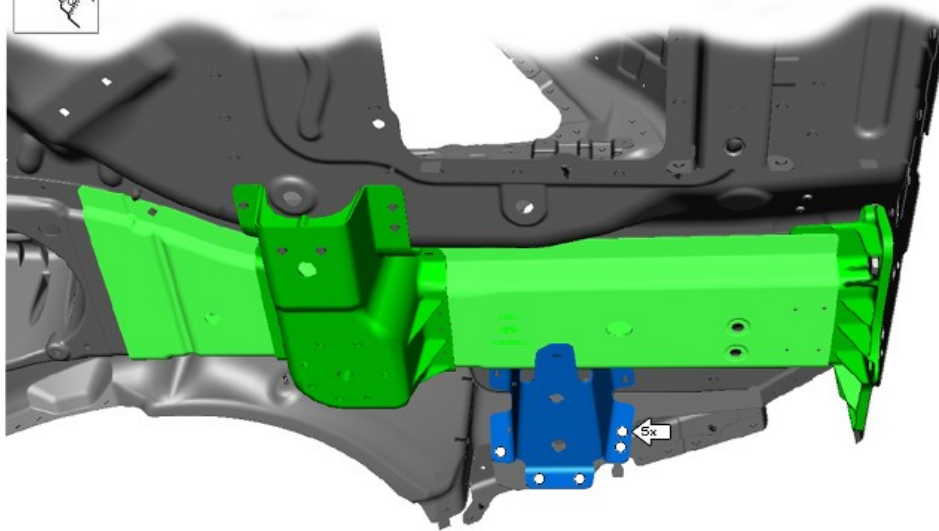

E143516

Drill holes where the BSF's are to be installed as indicated.

6.

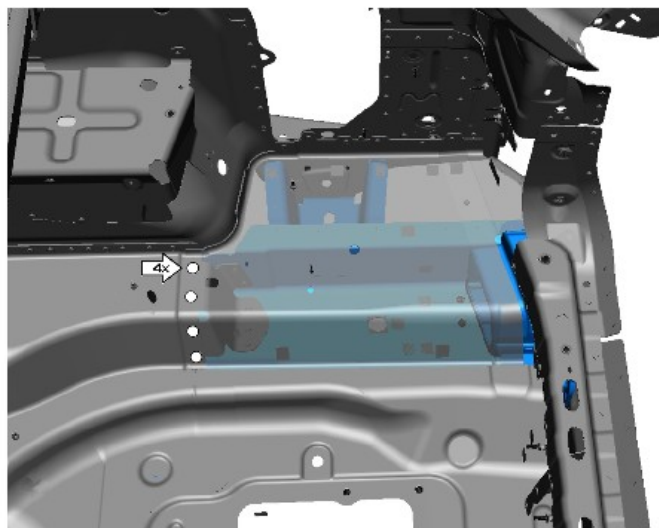

E143517

Drill holes where the BSF's are to be installed as indicated.


-
7. Remove the new rear side member section.
 8. Deburr the drilled holes.
 9. Using a fine bristle disc, clean and prepare the rear side member

panel surfaces.

-
10. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.
-

11. **NOTE:**

Make sure a continuous bead of adhesive surrounds fixing holes.

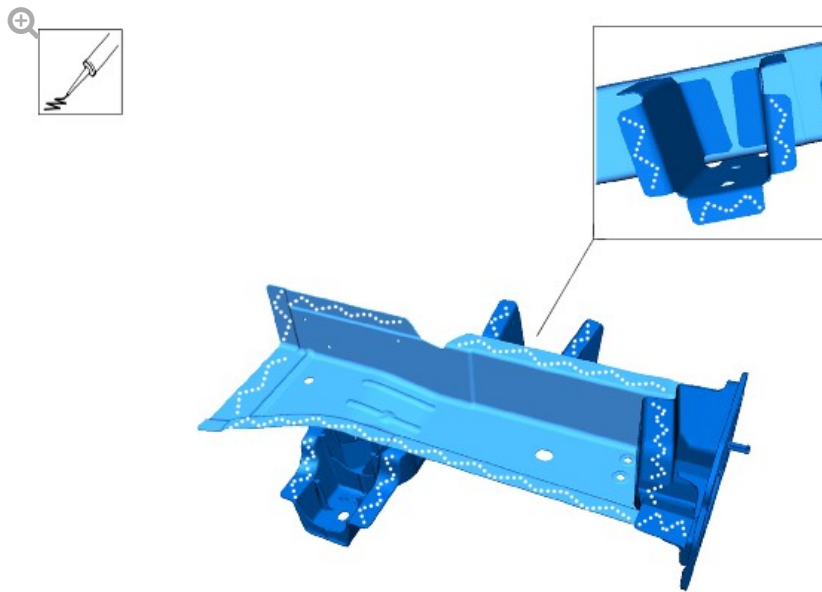


E144458

Apply a 5mm bead of Land Rover recommended bonding material to the rear side member section as indicated.

-
12. Offer up the new rear side member section and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
-


13.

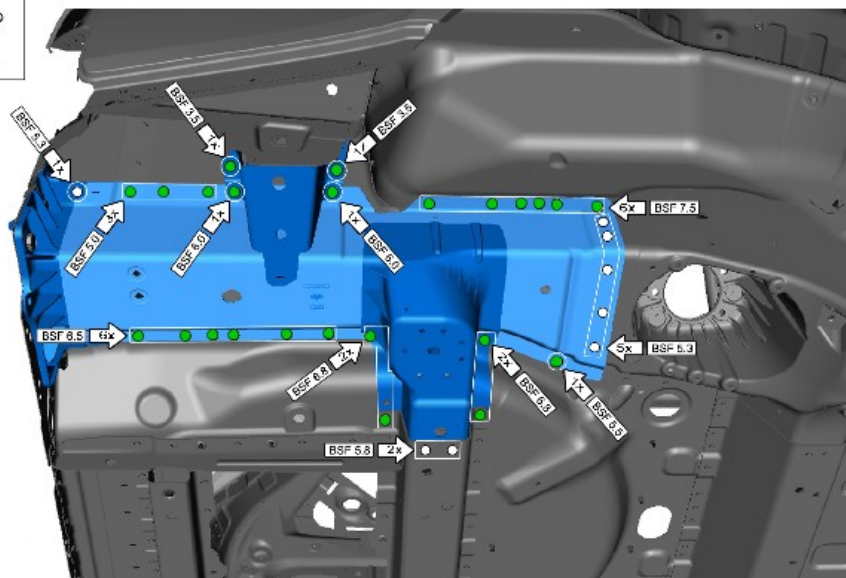

E144459

Install the BSF's as indicated.


14.

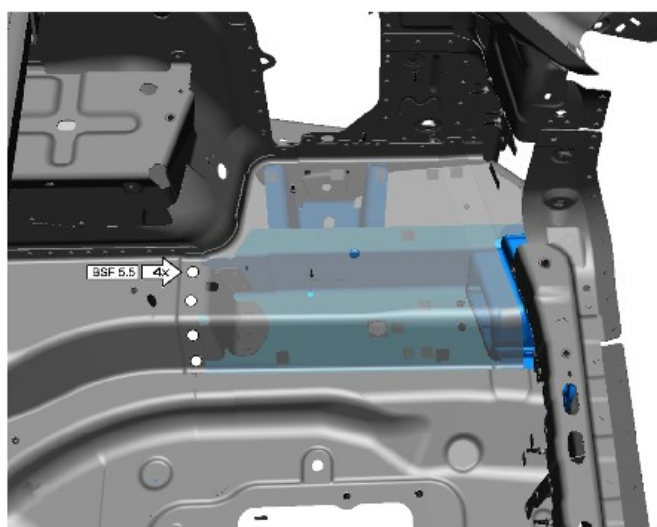

E143518

Install the BSF's as indicated.

15.

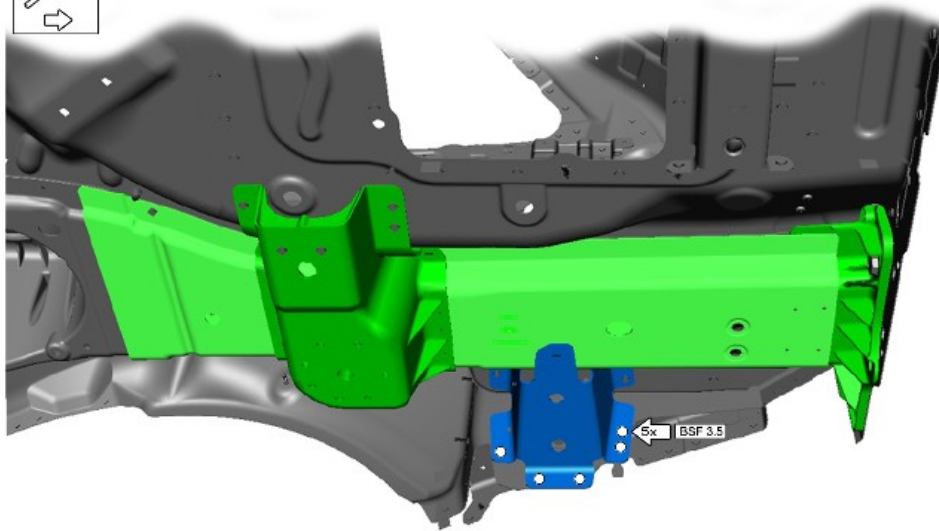

E144460

Install the BSF's as indicated.

16. Remove any excess adhesive.

17. Make sure that any open or exposed panel joints are suitably sealed.

18. Make sure corrosion protection is applied to all areas affected by repair.

19. The installation of associated panels and components is the reversal of removal procedure.