

2016.0 RANGE ROVER (LG), 501-30

REAR END SHEET METAL REPAIRS

REAR WHEELHOUSE EXTENSION (G1532027)

REMOVAL AND INSTALLATION


REMOVAL

NOTE:

The rear wheelhouse extension is installed in conjunction with:

- Quarter panel
 - Quarter panel reinforcement
 - Rear lamp panel outer
 - Rear lamp panel inner
-

1.

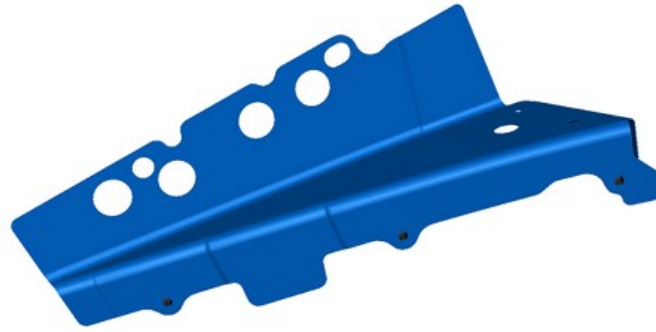

E149228

The rear wheelhouse extension is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.

For additional information, refer to: Health and Safety Precautions (100-00, Description and Operation).

-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.


-
4. For additional information, refer to: Quarter Panel (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

 5. For additional information, refer to: Quarter Panel Reinforcement (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

 6. For additional information, refer to: Rear Lamp Panel Outer (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

 7. For additional information, refer to: Rear Lamp Panel Inner (501-30 Rear End Sheet Metal Repairs, Removal and Installation).



8.

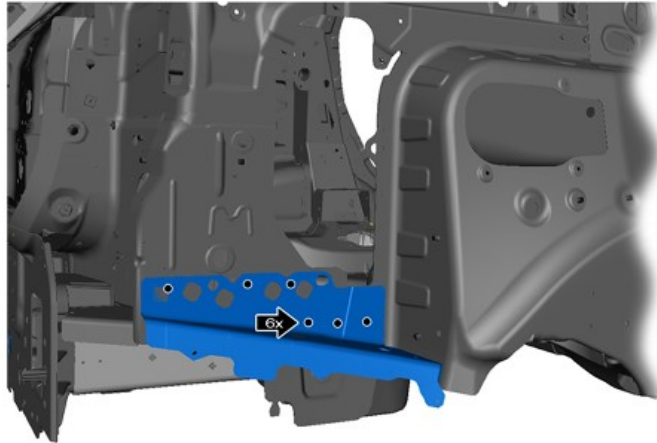

E149229

Remove the SPR's as indicated.


9.

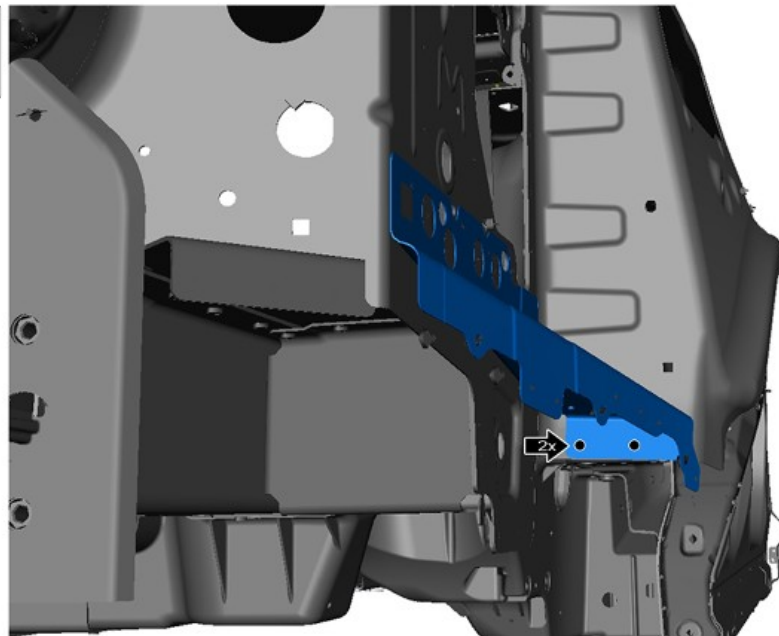

E149230

Remove the SPR's as indicated.

10.

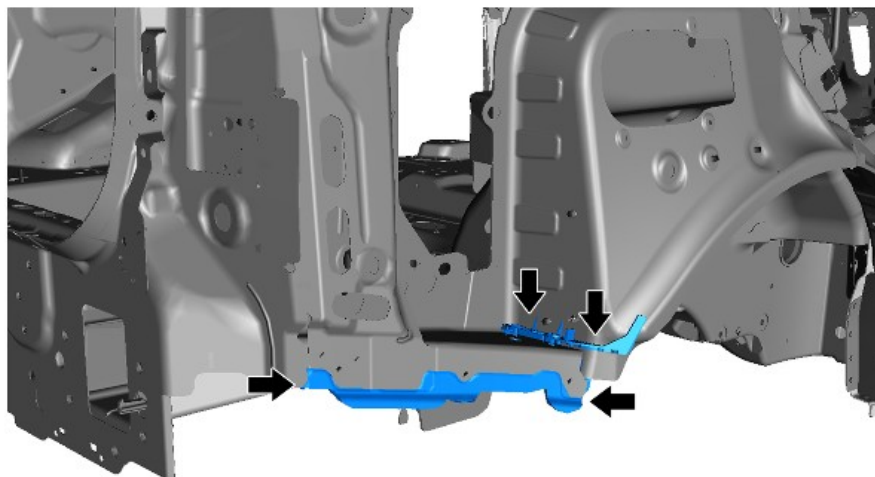

E149233

Remove the noise, vibration and harshness (NVH) components as indicated.

11. Separate the joints and remove the rear wheelhouse extension panel.

INSTALLATION

CAUTION:


Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

-
1. Remove rivet remnants.
-
2. Dress flanges where necessary.
-
3. Offer up the new rear wheelhouse extension and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
-

4.

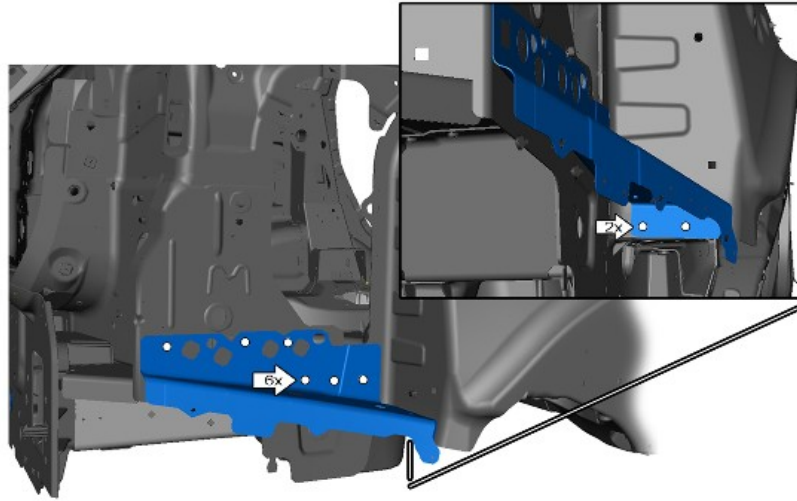

E149234

Drill holes through the old rear wheelhouse extension into the new rear wheelhouse extension where BSF's are to be installed as indicated.

5. Remove the new rear wheelhouse extension.

6. Deburr the drilled holes.

7. Using a fine bristle disc, clean and prepare the panel surfaces.

8. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

9.



NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

Apply a 5mm zig zag bead of the Land Rover recommended bonding material to the new rear wheelhouse extension.

10. Offer up the new rear wheelhouse extension, clamp into position. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.



11.

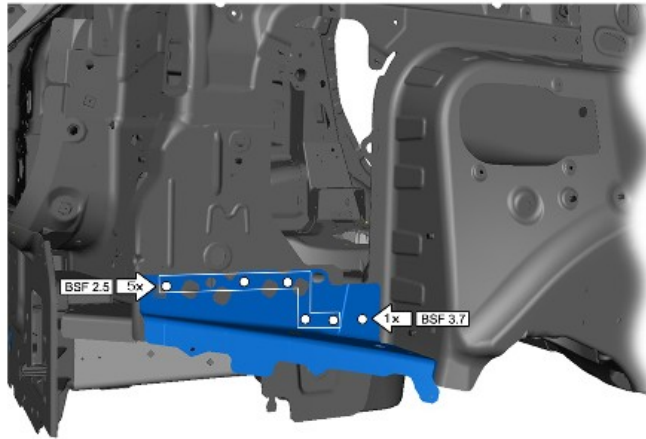

E149232

Install the BSF's as indicated.

12.

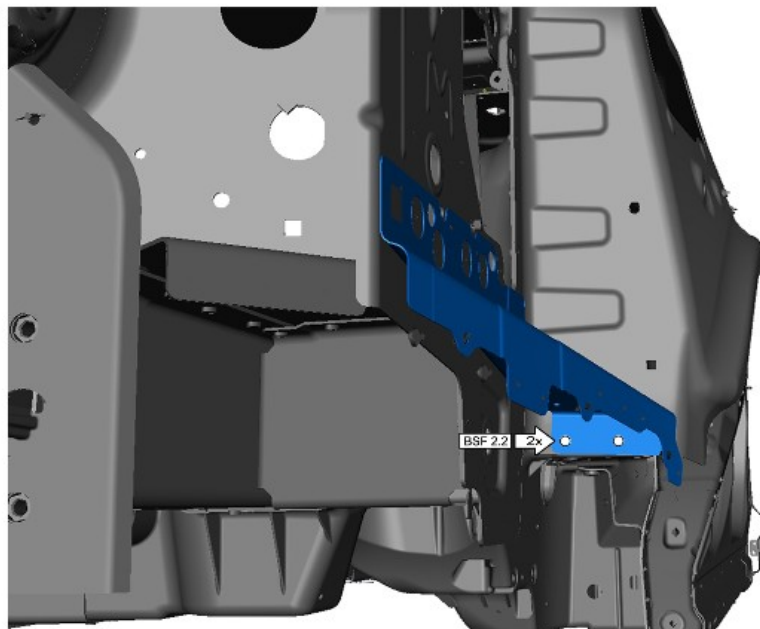


E149231

Install the BSF's as indicated.

13. Remove any excess adhesive.

14.

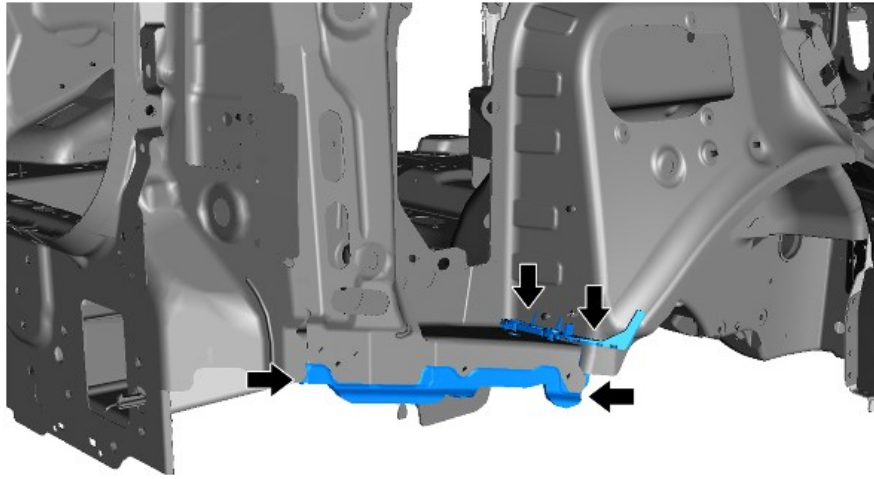

E149233

Install the NVH component as indicated.

-
15. Make sure that any open or exposed panel joints are correctly sealed.
-
16. Make sure corrosion protection is applied to all areas affected by repair.
-
17. The installation of associated panels and components is the reversal of the removal procedure.