

2016.0 RANGE ROVER (LG), 502-00

UNI-BODY, SUBFRAME AND MOUNTING SYSTEM

REAR SUBFRAME BUSHING

[G1509254]

REMOVAL AND INSTALLATION

SPECIAL TOOL(S)



204-598

Hydraulic Cylinder
10t



JLR-502-016

Remover, Bush



E145968

JLR-502-017


Remover Support,
Bush



E145969

JLR-502-018

Installer, Bush

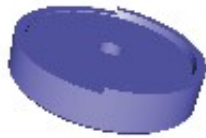

E145970

JLR-502-019

Remover Support,
Bush

REMOVAL

CAUTION:

Take extra care not to damage the component surface, failure to follow this instruction may result in corrosion.

NOTE:


Removal steps in this procedure may contain installation details.

1. Refer to: [Rear Subframe](#) (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).

2.

NOTE:

Note the orientation of the bushing before removal.

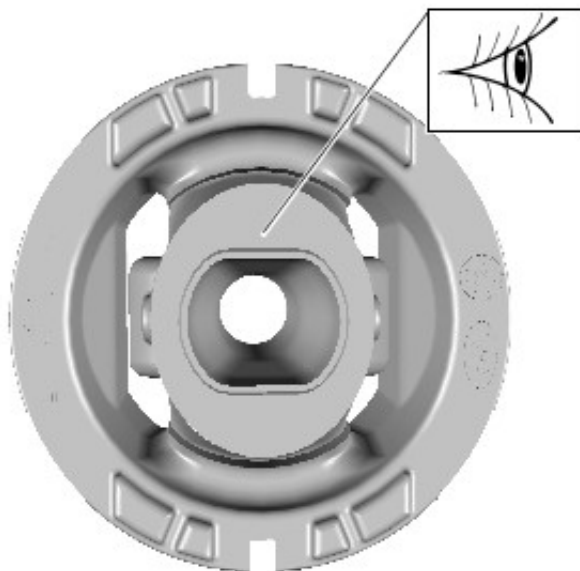


E152512

3.

CAUTION:

The bush flanges need to be removed to allow bush removal.

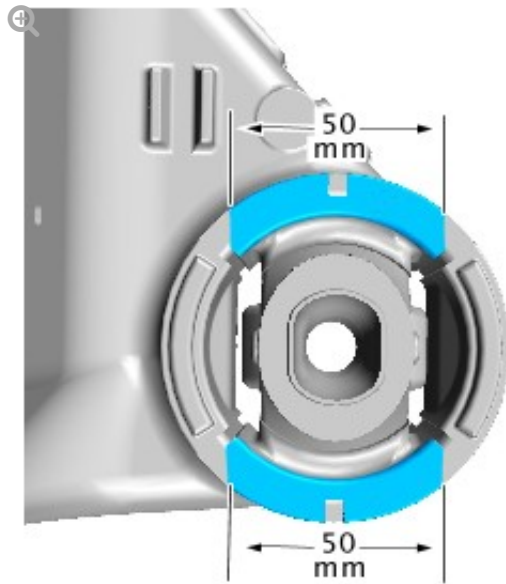


E156579

4.

CAUTION:

Make sure that the special tool is correctly located.

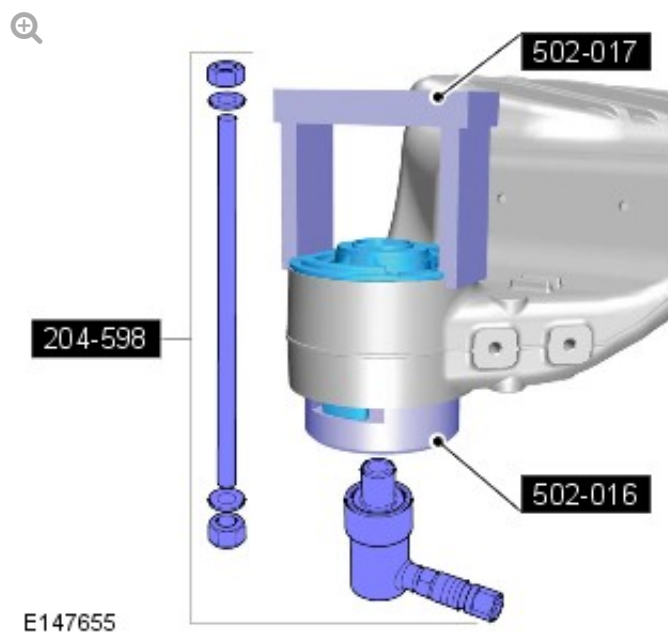


Special Tool(s): [204-598](#), [JLR-502-016](#), [JLR-502-017](#)

INSTALLATION

1.

NOTE:


Make sure the bushing is correctly orientated.

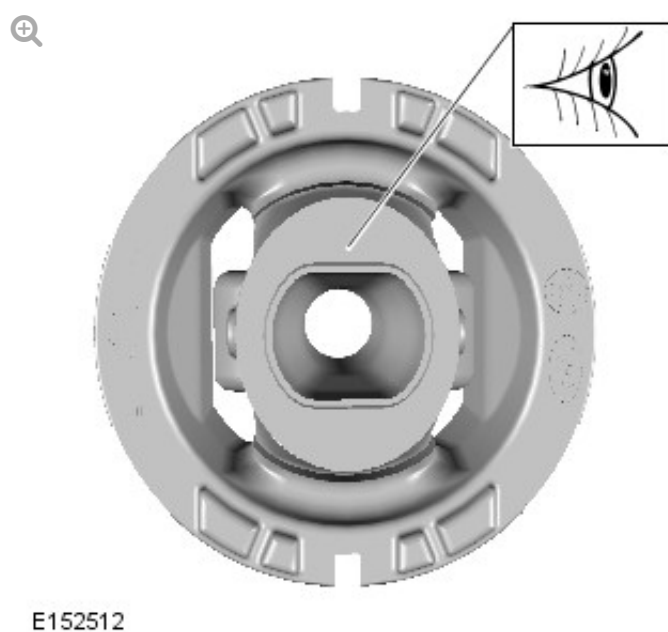

2.

CAUTIONS:

- Use the recommended lubricant.
- Make sure that the special tool is correctly located.

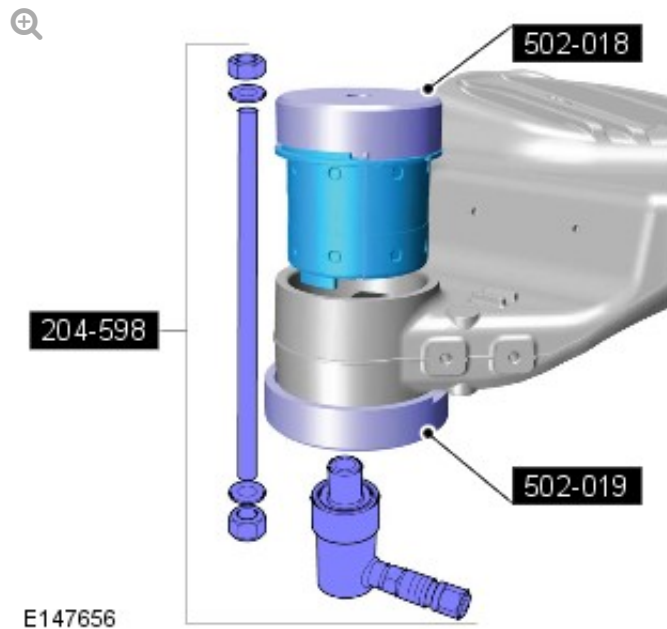

Using the special tools, install the rear subframe bush.

Refer to: [Specifications](#) (502-00 Uni-Body, Subframe and Mounting System, Specifications).

Special Tool(s): [204-598](#), [JLR-502-018](#), [JLR-502-019](#)

3. Refer to: [Rear Subframe](#) (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).