

2016.0 RANGE ROVER (LG), 206-05

PARKING BRAKE AND ACTUATION

ELECTRONIC PARKING
BRAKE RELEASE WHEN THE
VEHICLE HAS NO
ELECTRICAL POWER (G1509075)

GENERAL PROCEDURES

01.01.27	ELECTRONIC PARK BRAKE RELEASE - PROCEDURE	ALL DERIVATIVES	0.6	USED WITHINS
----------	--	--------------------	-----	--------------

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Adjustment Step 1	Renew Part	Electric park brake actuator fitting kit

CHECK

CAUTION:

LH illustration shown, RH is similar.

NOTES:

- To be carried out in the event that the vehicle has no electrical power.
- Removal steps in this procedure may contain installation details.

1.

WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Remove the rear wheel and tire.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

3.

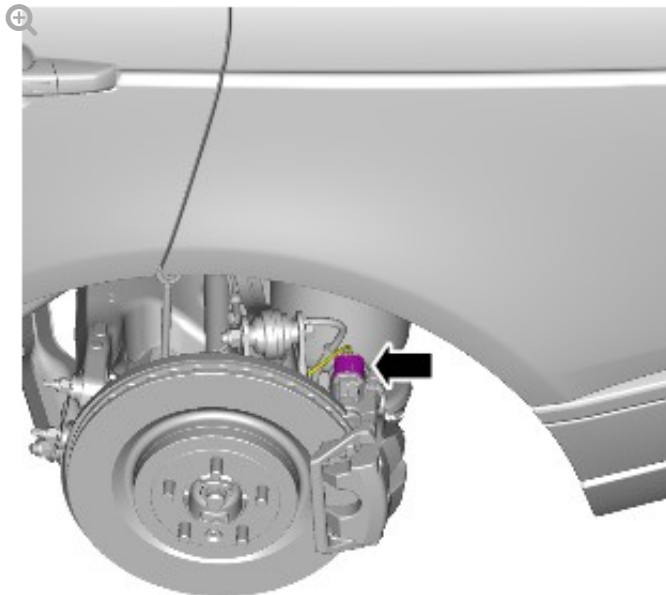


E146982

4.

NOTE:


Remove and discard the retaining bolts and O-ring seal.

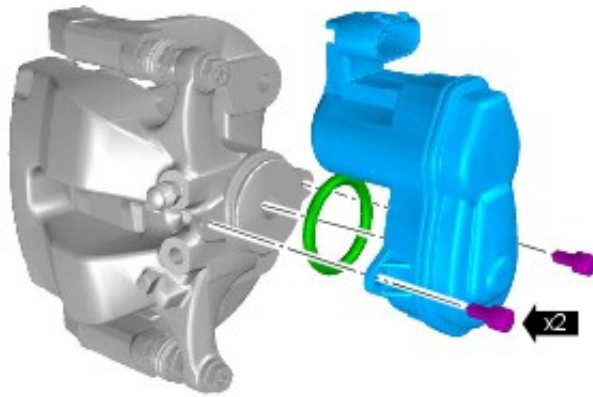

E146983

Torque: 11 Nm

5.

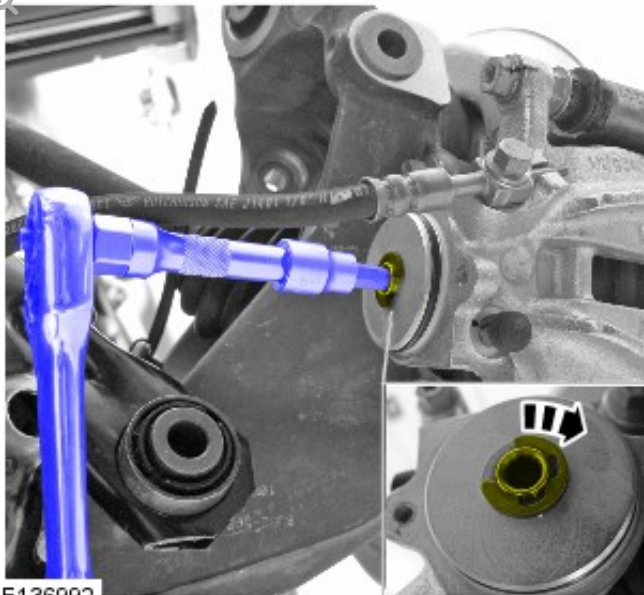

E136992

6. Repeat the above procedure for the other side.

ADJUSTMENT

7.

NOTE:

New retaining bolts and O-ring seal are to be installed.

To install, reverse the removal procedure.

Renew Part: [Electric park brake actuator fitting kit](#).

8. Calibrate the electric parking brake (EPB) using the diagnostic tool.