

2016.0 RANGE ROVER (LG), 205-03

FRONT DRIVE AXLE/DIFFERENTIAL

DIFFERENTIAL DRAINING AND FILLING [G1509004]

GENERAL PROCEDURES

54.15.02	FRONT AXLE - DRAIN AND REFILL	ALL DERIVATIVES	0.4	USED WITHINS
----------	--	--------------------	-----	--------------

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.


1. Raise and support the vehicle.

2. For additional information, refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).

3.

NOTE:


If equipped.

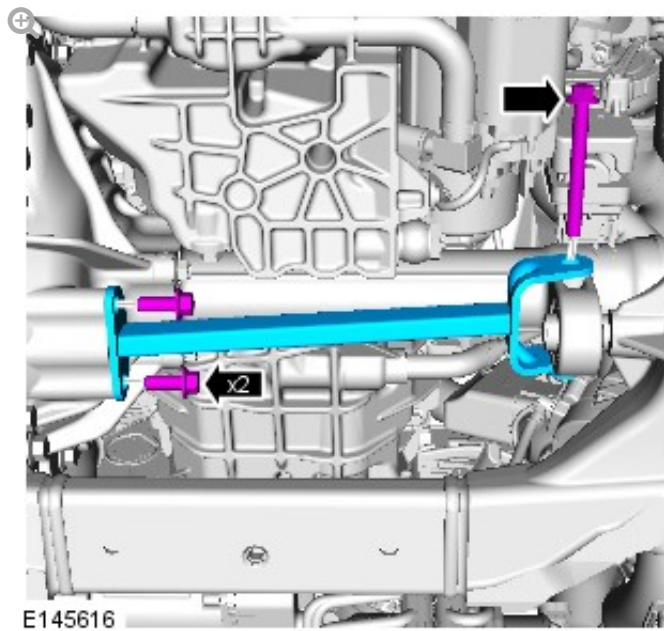

4.

NOTE:

Discard the sealing plug.

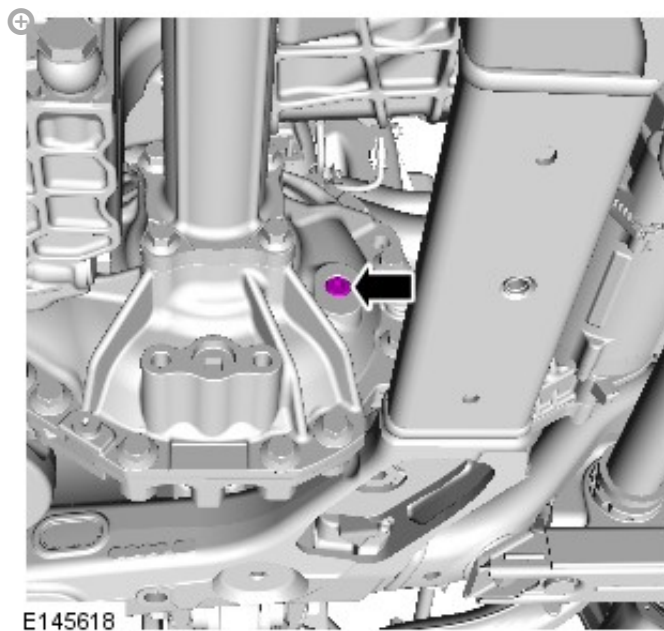


- Clean the area around the fluid filler plug.
- Position a container to collect spillage.

5.

NOTE:

Discard the sealing plug.

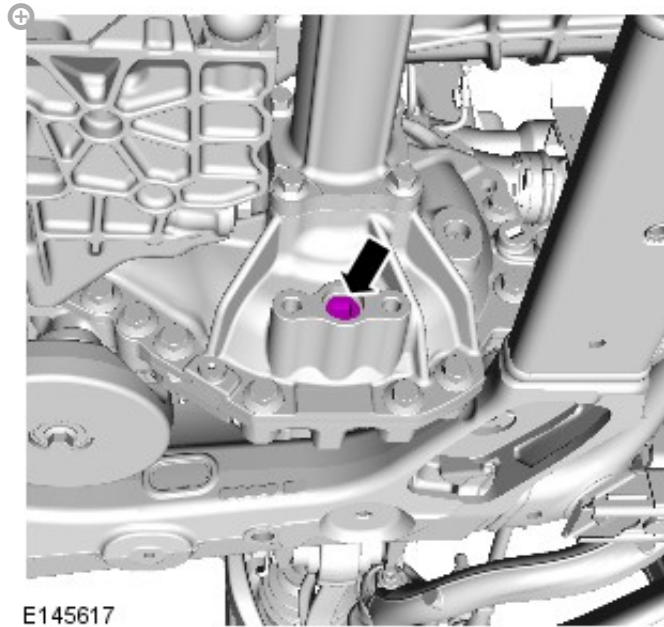


Drain the differential fluid.

- Clean the area around the fluid drain plug.

6.

NOTE:

Install a new sealing plug.

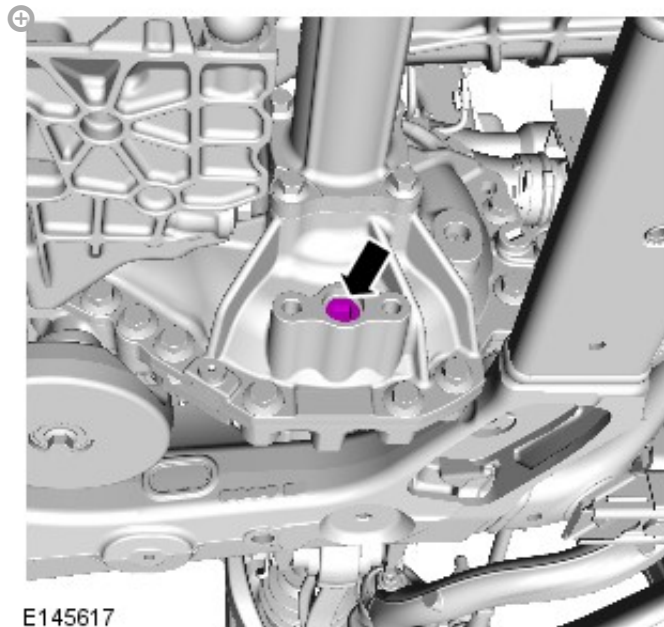

E145617

TORQUE: 30 Nm


-
7. Fill the rear differential, until a thin thread of fluid runs from the filler hole.

For additional information, refer to: [Specifications](#) (205-03 Front Drive Axle/Differential, Specifications).

8.

NOTE:

Install a new sealing plug.

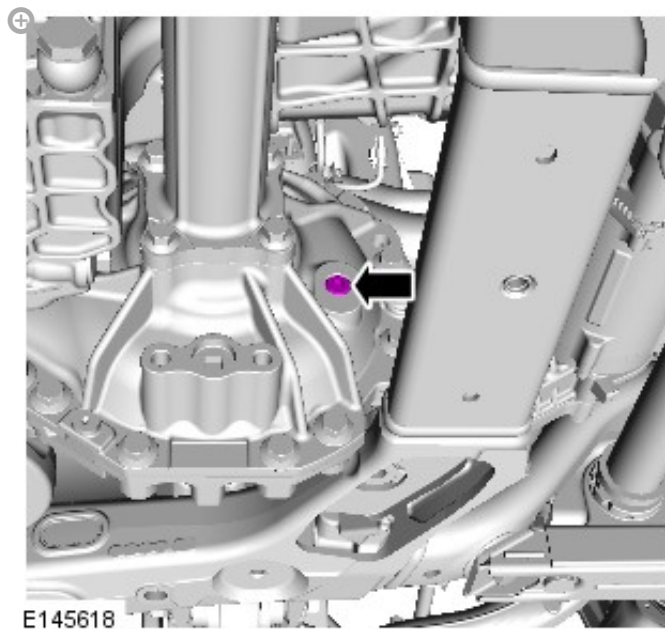


TORQUE: 30 Nm

9.

NOTE:

If equipped.

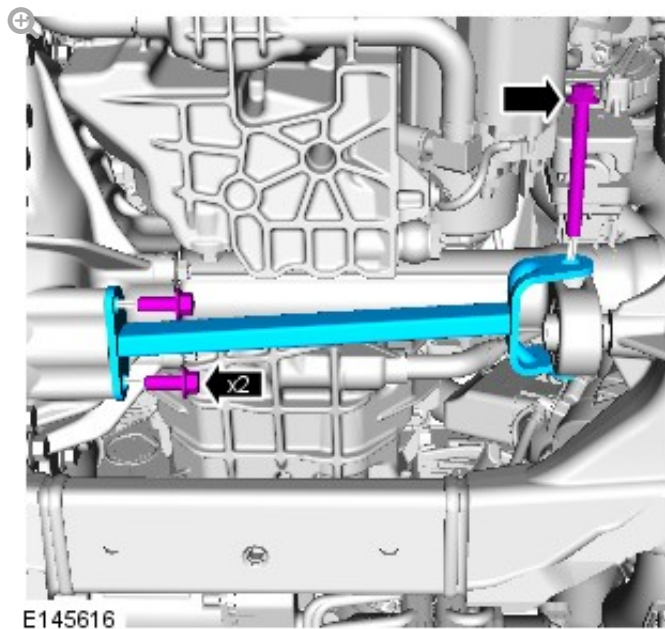

TORQUE: 50 Nm

10. Install the engine undershield.

For additional information, refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).