

2016.0 RANGE ROVER (LG), 205-03

FRONT DRIVE AXLE/DIFFERENTIAL

DIFFERENTIAL SUPPORT BUSH (G1620446)

REMOVAL AND INSTALLATION

SPECIAL TOOL(S)



204-598

Hydraulic Cylinder
10t



**JLR-205-
990**

Installer, Bush




E150805

JLR-205-991

Support, Bush


REMOVAL

1.

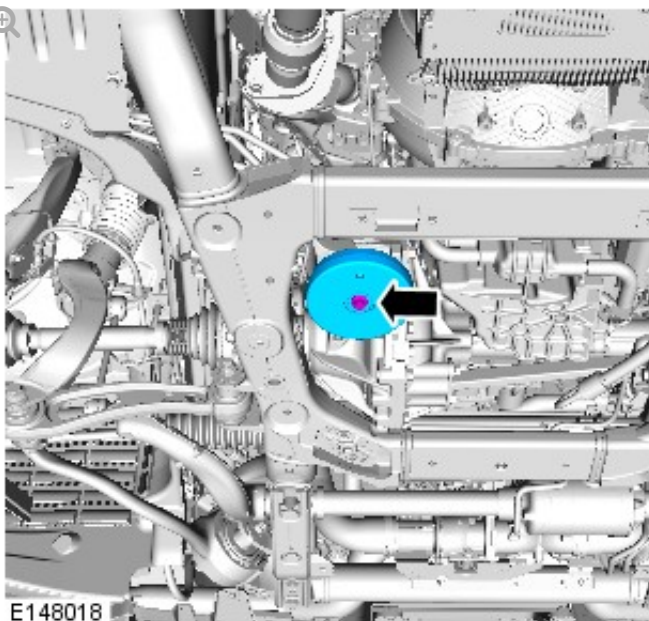


E148018

2.

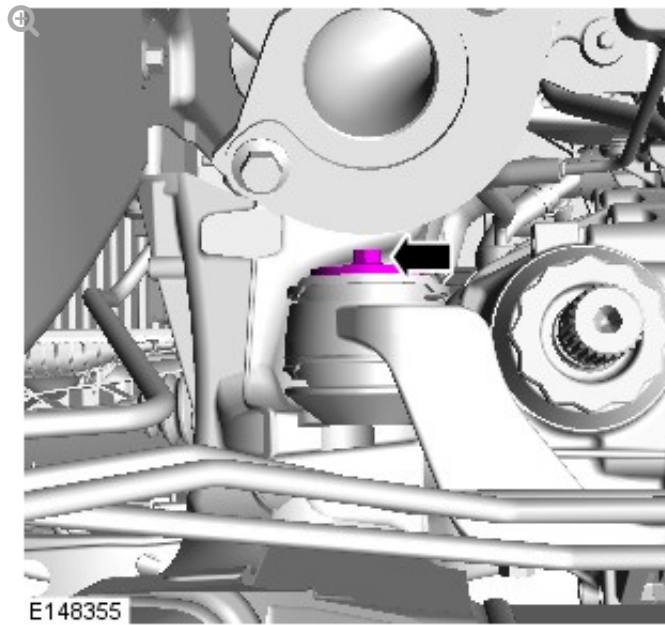

3.

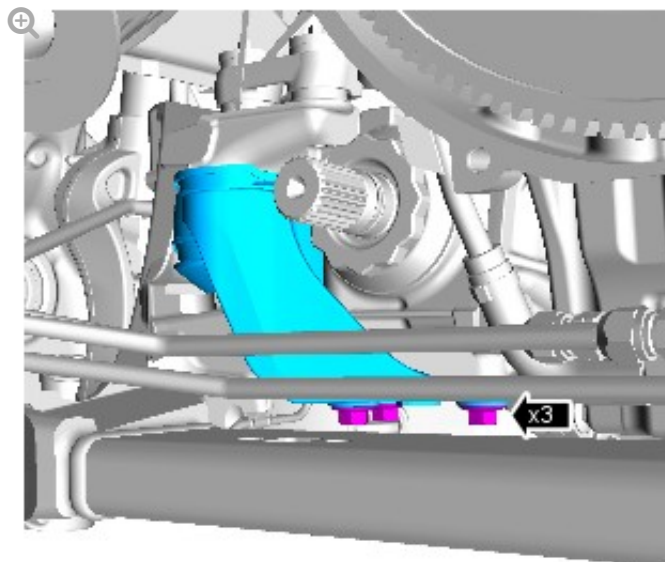

4.

CAUTION:

Note the orientation of the bushing before removal.



E156669

Using a suitable tool, remove the bush.

INSTALLATION

1.

NOTE:

Make sure the new bushes are installed in the correct orientation.



E156670


2.

CAUTION:

Make sure that the special tool is correctly located.

NOTE:

Make sure the bushing is correctly orientated.

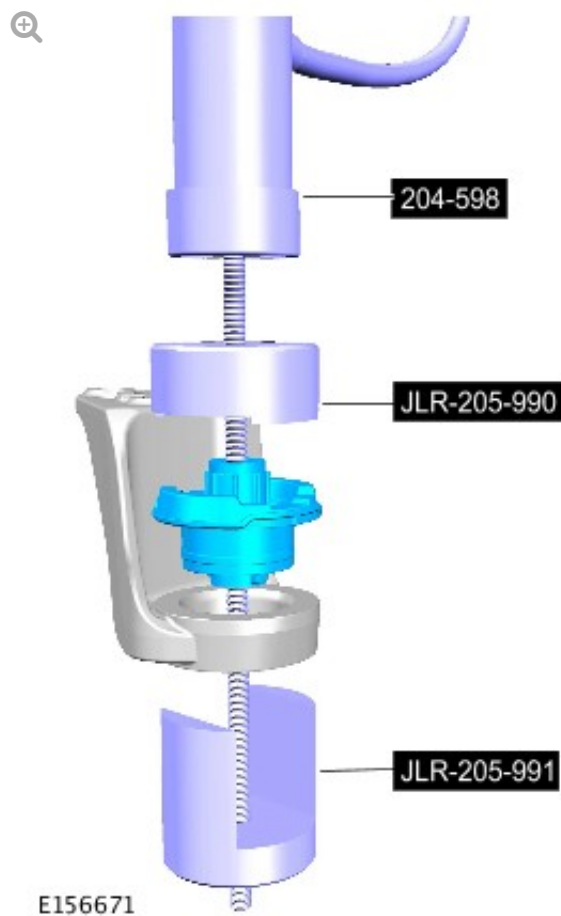


Special Tool(s): 204-598, JLR-205-990, JLR-205-991

3.

CAUTION:

Only tighten the bolts finger-tight at this stage.

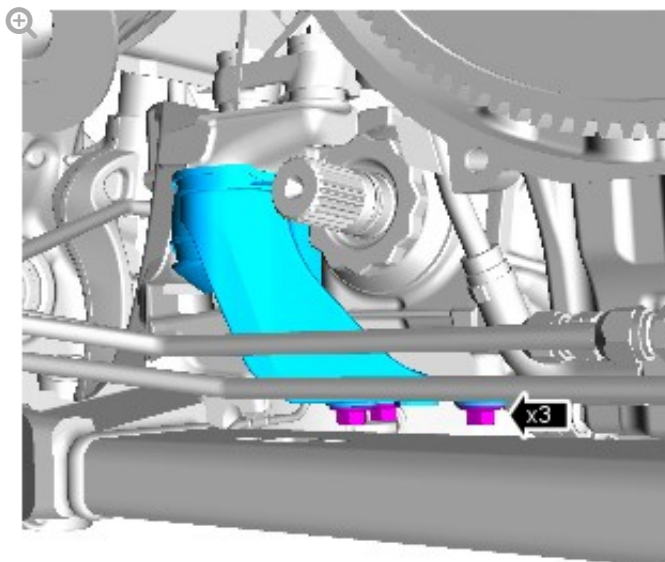


E148356

4.


CAUTION:

Install the bolt finger tight.

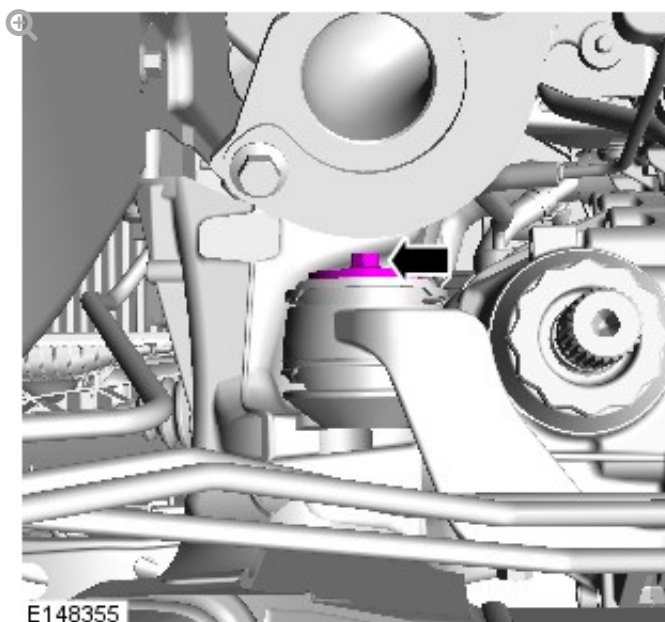

E148355


5.

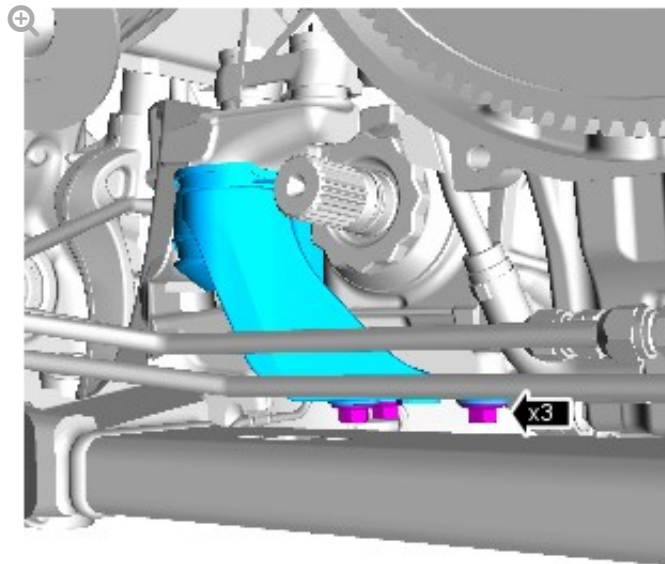

E148356

Torque: 90 Nm


6.

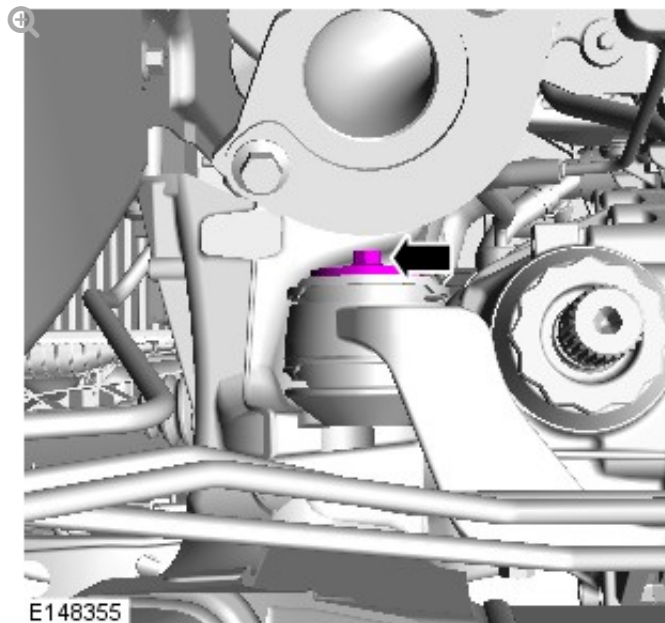

E148355

Torque: 60 Nm

7.

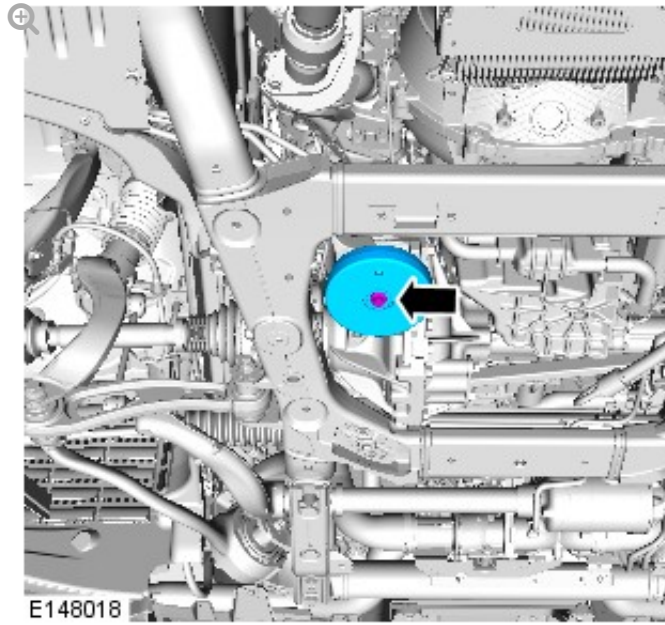

Torque: **45 Nm**