

2016.0 RANGE ROVER (LG), 205-02

REAR DRIVE AXLE/DIFFERENTIAL

**DIFFERENTIAL CASE – TDV6
3.0L DIESEL /TDV8 4.4L
DIESEL/V6 S/C 3.0L PETROL
/V8 N/A 5.0L PETROL/V8
S/C 5.0L PETROL** (G1605960)

REMOVAL AND INSTALLATION

			3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID			
51.15.01	DIFFERENTIAL - RENEW		3.9	USED WITHINS	+	

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Component shown removed for clarity.
- Electric rear differential shown. Open rear differential similar.

1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

- 2.

WARNING:


Do not work on or under a vehicle supported only by a jack.
Always support the vehicle on safety stands.

Raise and support the vehicle.


Refer to: [Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

3. Refer to: [Rear Driveshaft - TDV6 3.0L Diesel](#) (205-01 Driveshaft, Removal and Installation).
Refer to: [Rear Driveshaft - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (205-01 Driveshaft, Removal and Installation).
Refer to: [Rear Driveshaft - TDV8 4.4L Diesel](#) (205-01 Driveshaft, Removal and Installation).
Refer to: [Rear Driveshaft - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (205-01 Driveshaft, Removal and Installation).
4. Refer to: [Differential Draining and Filling](#) (205-02 Rear Drive Axle/Differential, General Procedures).
5. Remove the left halfshaft.
Refer to: [Rear Halfshaft](#) (205-05 Rear Drive Halfshafts, Removal and Installation).
6. Remove the right halfshaft.
Refer to: [Rear Halfshaft](#) (205-05 Rear Drive Halfshafts, Removal and Installation).

7.

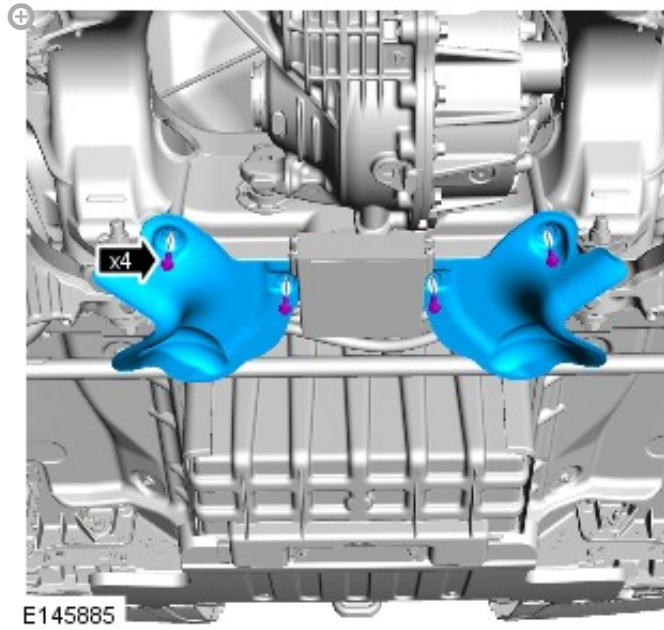


8.

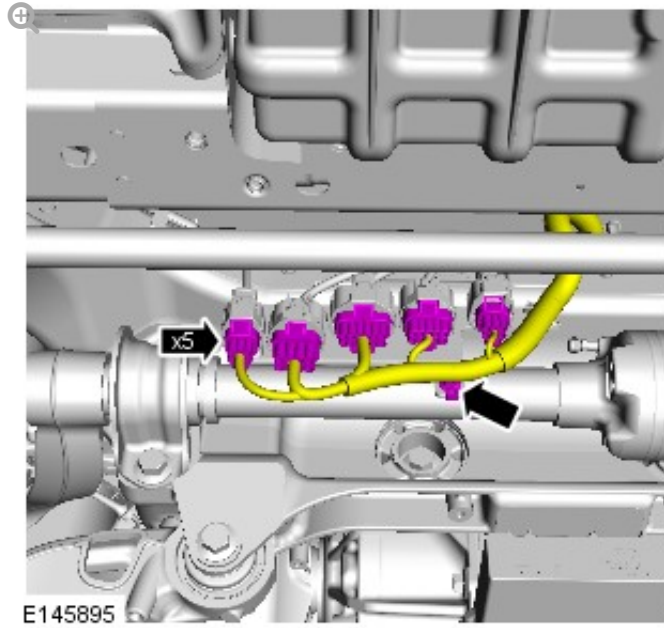

9.

NOTE:

If equipped.

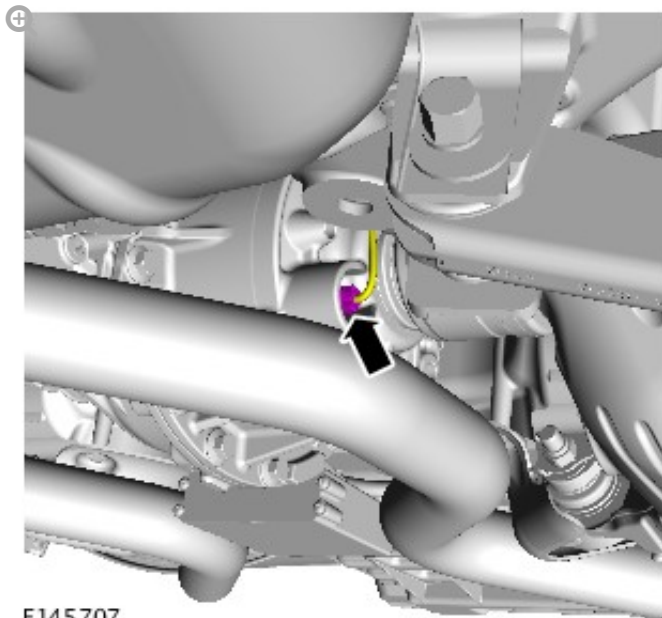


E145707

10.

NOTES:

- LH illustration shown, RH is similar.
- Repeat the procedure for the other side.

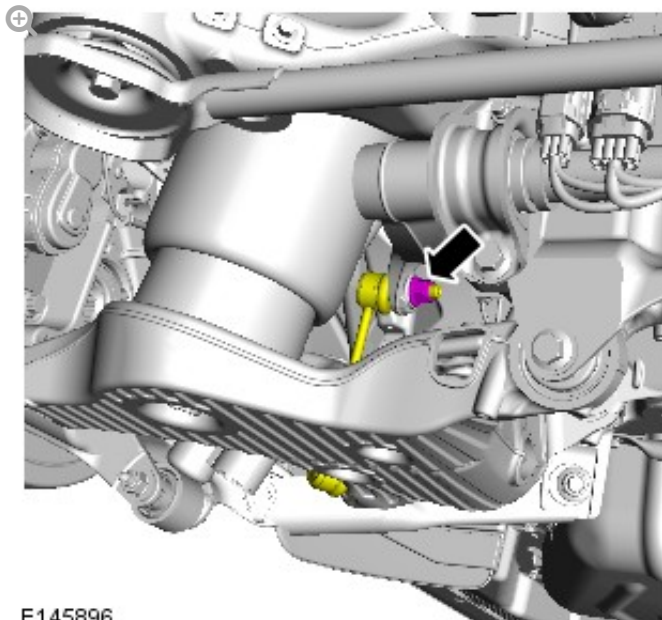

E145896


11.

CAUTION:

Make sure that the component is not suspended by the fluid hoses.

NOTE:

If equipped.

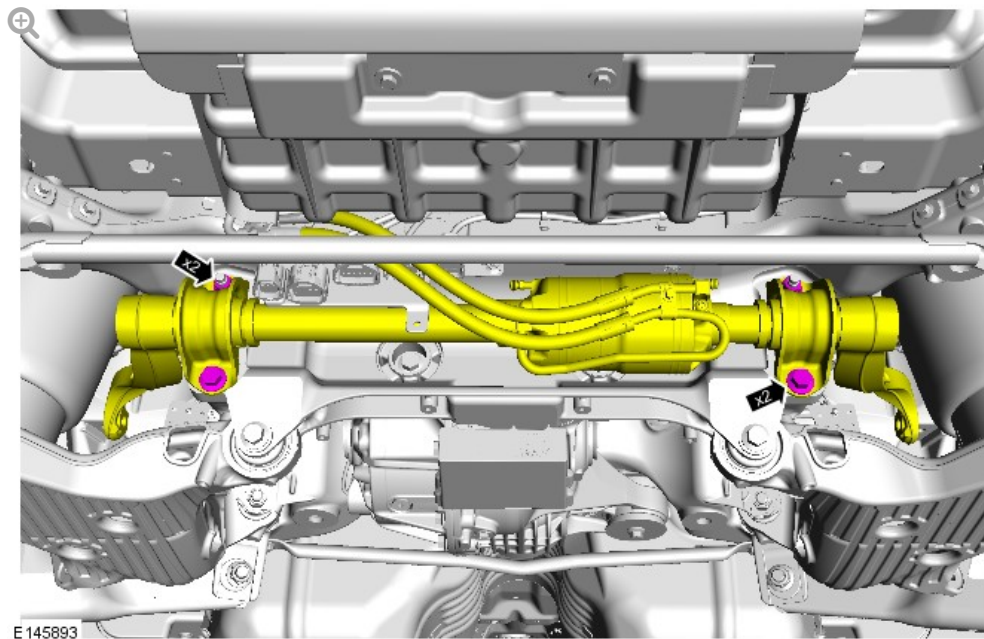


Tie aside.

12.


NOTE:

If equipped.

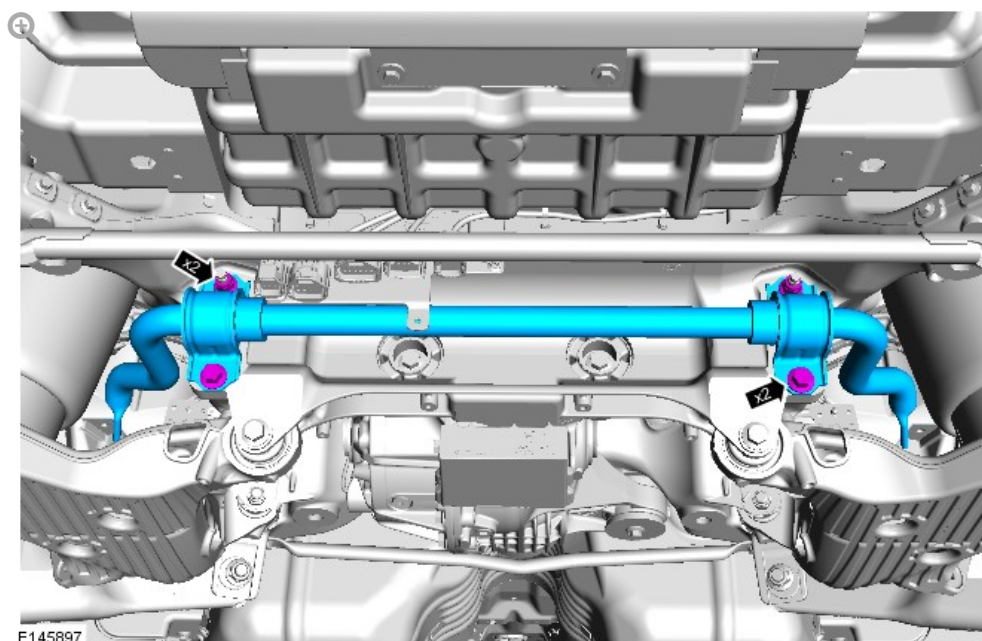


E145897

13.

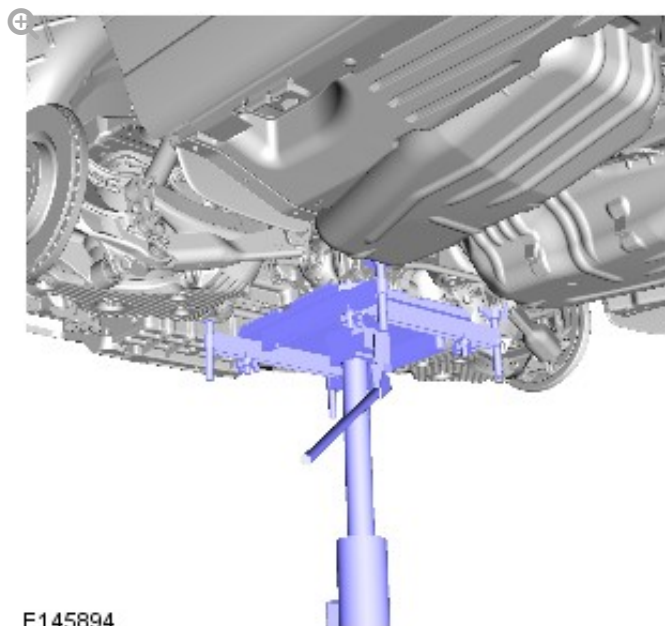


E145894

14.

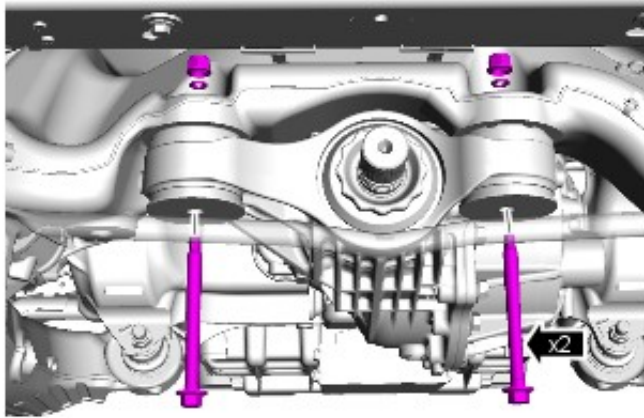


E145888

15.

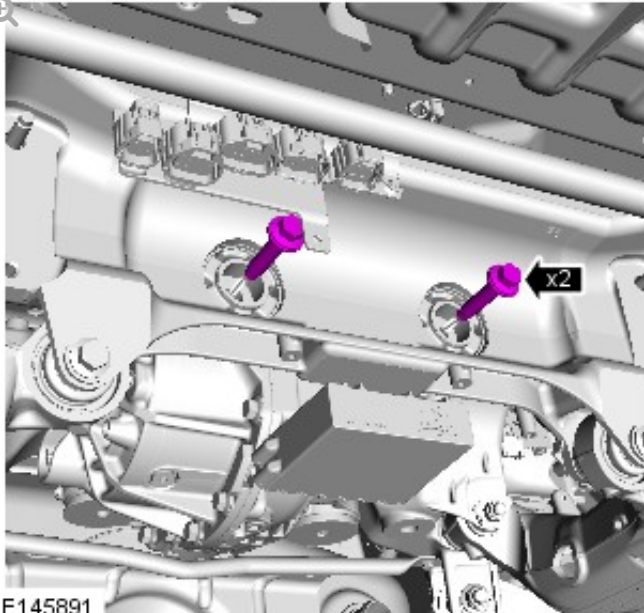


E145891

16.

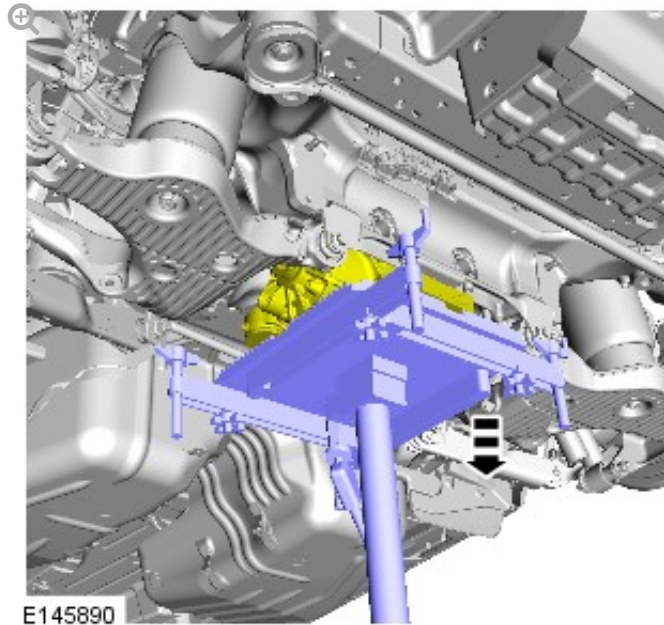


17.

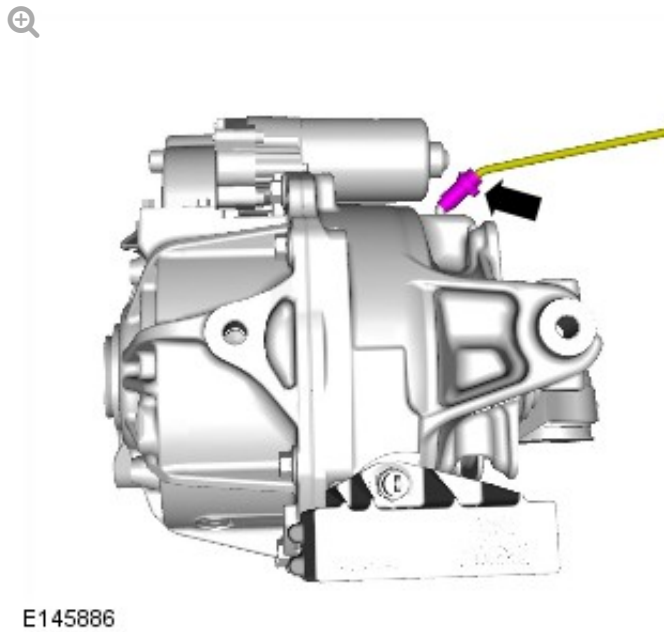

18.


NOTE:

If equipped.

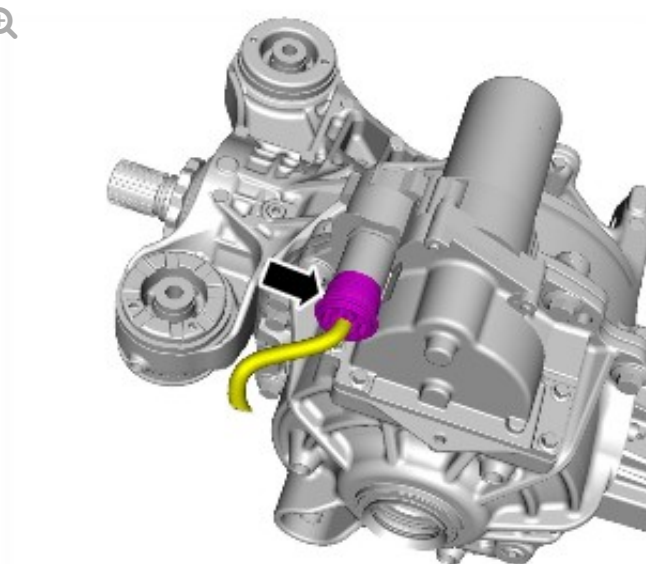

E145887


19.

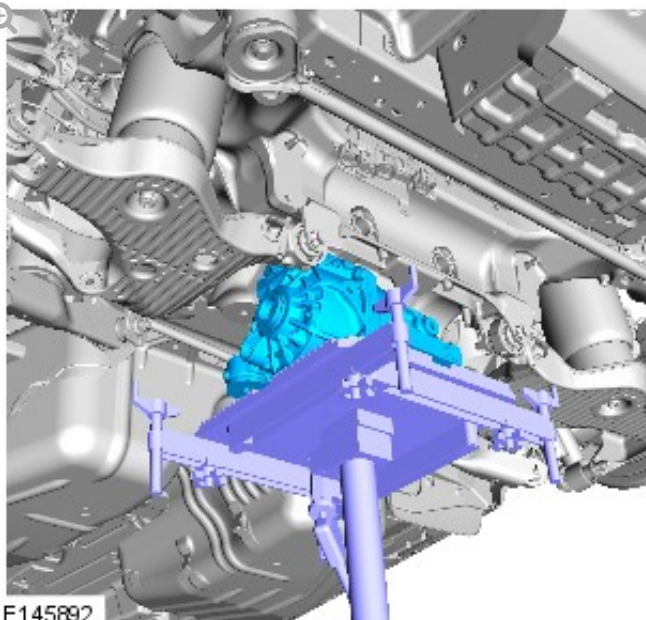

E145892

INSTALLATION


1.

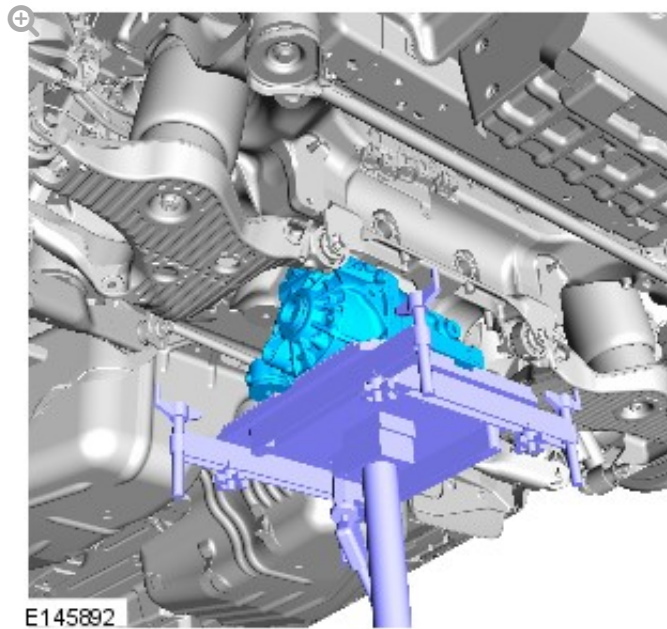


2.

NOTE:

If equipped.

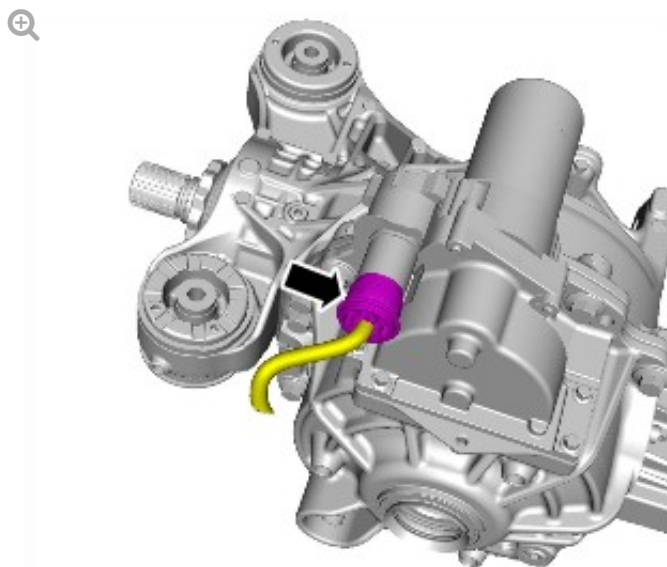


3.

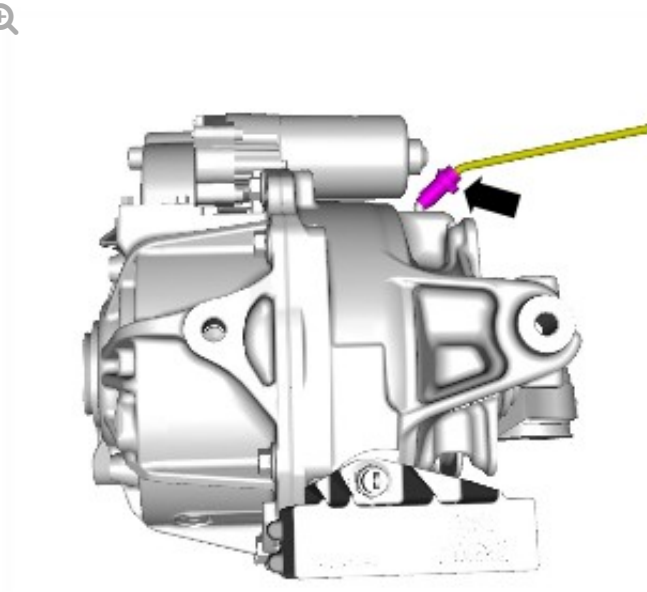

E145886

4.

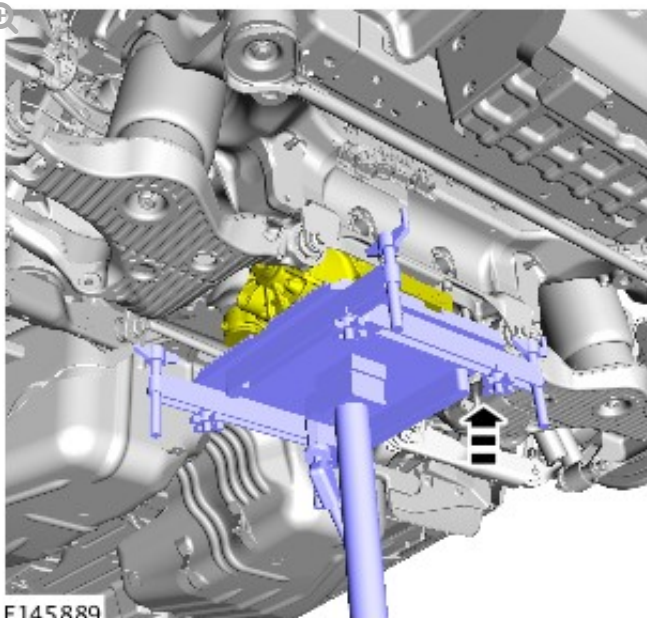


E145889

5.

NOTE:


Do not tighten at this stage.

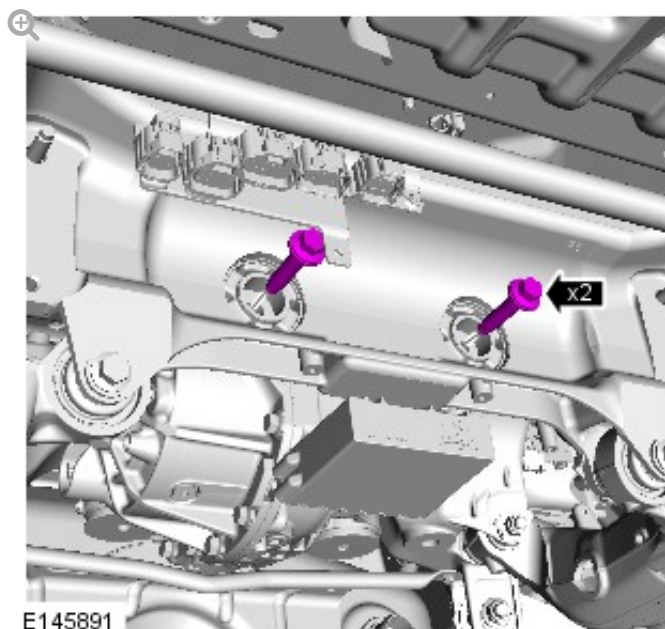


6.

NOTE:

Do not tighten at this stage.

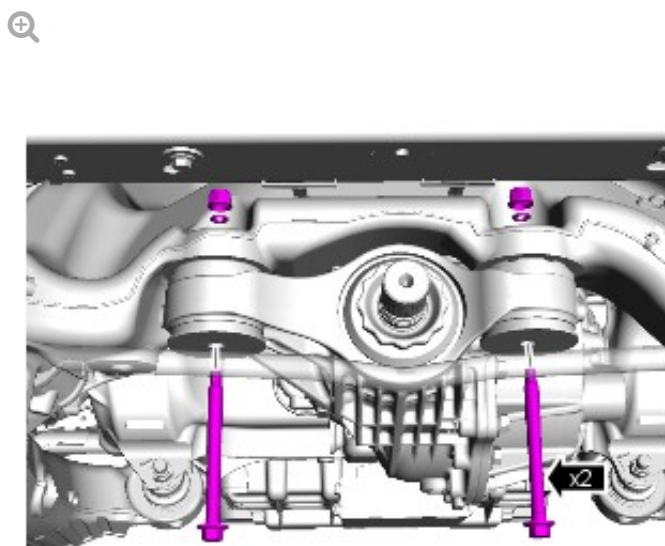


7.

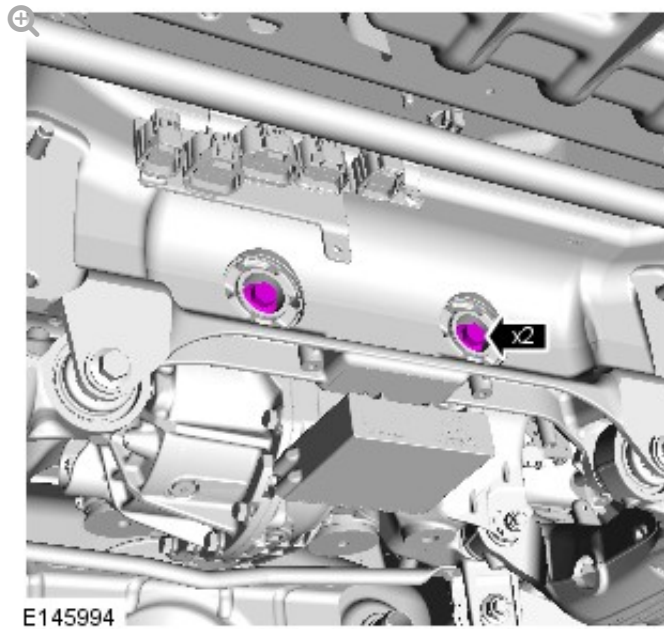


Torque: 170 Nm

8.

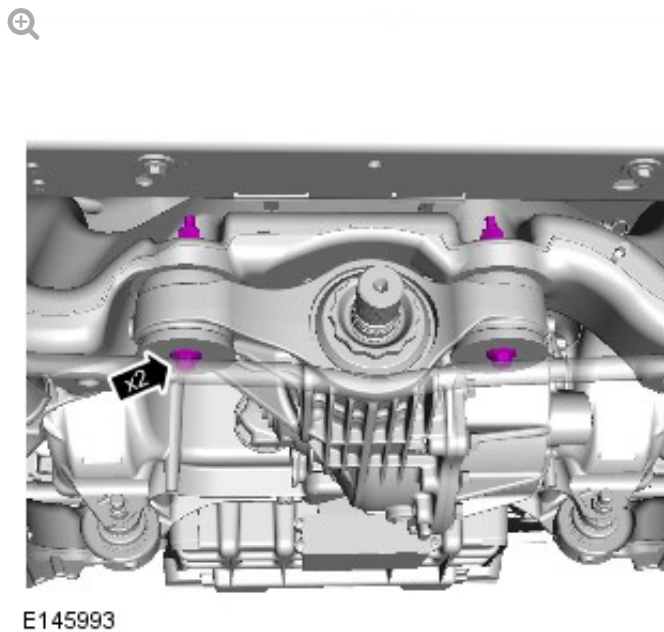

Torque: 110 Nm

9.

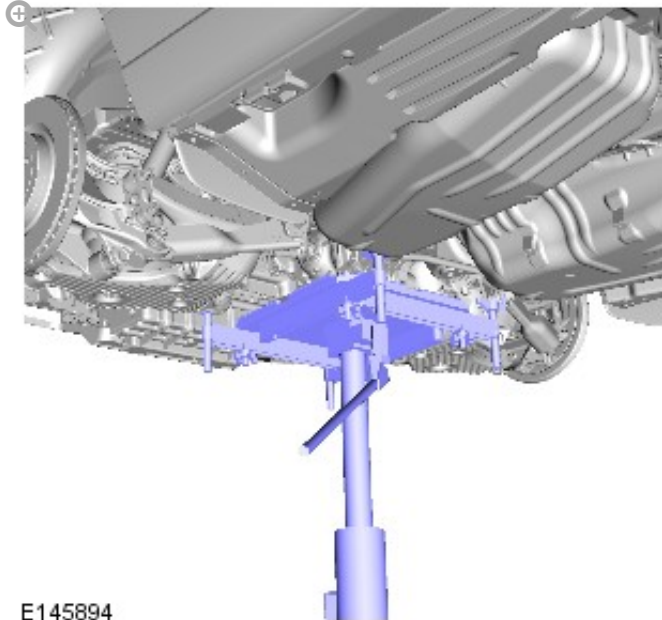


E145894

10.

NOTE:

If equipped.

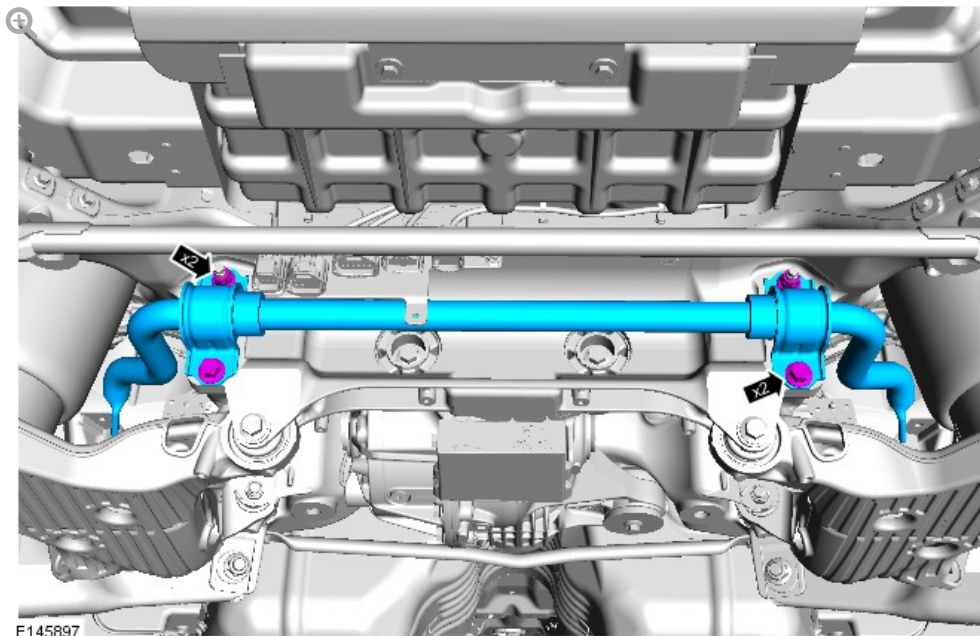


E145897

Torque: 110 Nm

11.

NOTE:

If equipped.

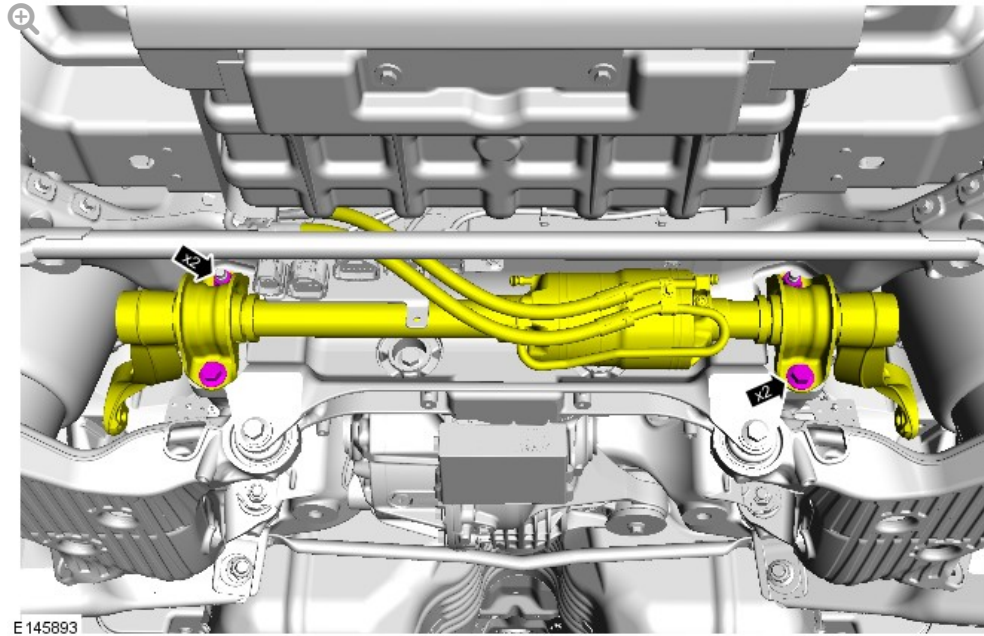


Torque: 110 Nm

12.

NOTES:

- LH illustration shown, RH is similar.
- Repeat the procedure for the other side.

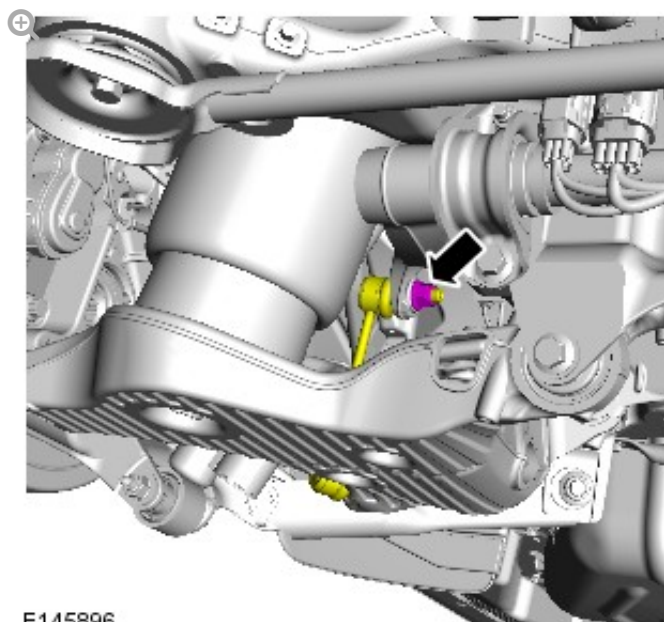


E145896

Torque: 185 Nm

13.


NOTE:

If equipped.

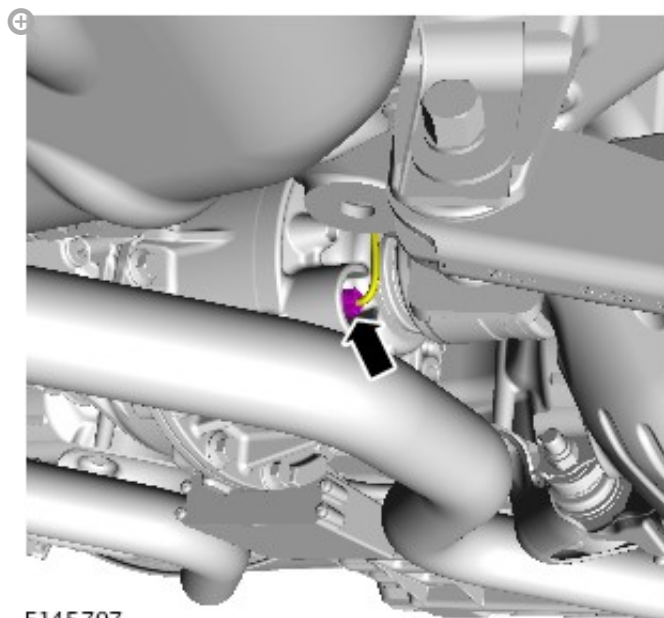


E145707

14.

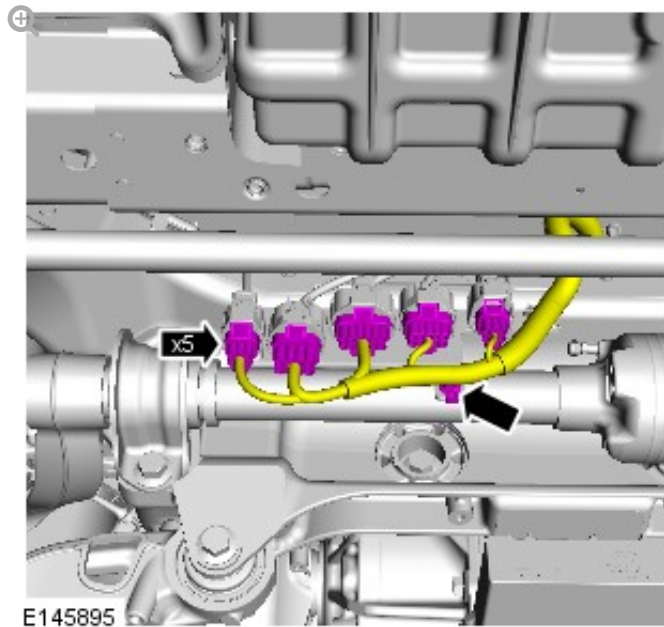

15.

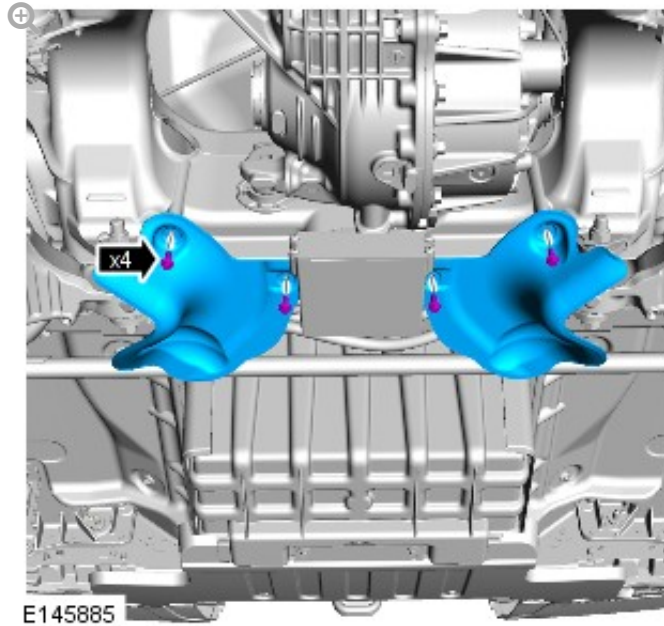

Torque: 5 Nm

16. Install the right halfshaft.
Refer to: [Rear Halfshaft](#) (205-05 Rear Drive Halfshafts, Removal and Installation).
17. Install the left halfshaft.
Refer to: [Rear Halfshaft](#) (205-05 Rear Drive Halfshafts, Removal and Installation).

18. Refer to: [Rear Driveshaft - TDV6 3.0L Diesel](#) (205-01 Driveshaft, Removal and Installation).
Refer to: [Rear Driveshaft - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (205-01 Driveshaft, Removal and Installation).
Refer to: [Rear Driveshaft - TDV8 4.4L Diesel](#) (205-01 Driveshaft, Removal and Installation).
Refer to: [Rear Driveshaft - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (205-01 Driveshaft, Removal and Installation).
19. Refer to: [Differential Draining and Filling](#) (205-02 Rear Drive Axle/Differential, General Procedures).
20. Connect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).