

2016.0 RANGE ROVER (LG), 204-06

RIDE AND HANDLING OPTIMIZATION

ACTIVE STABILIZATION SYSTEM FLUID LEVEL CHECK

[G1590647]


GENERAL PROCEDURES

CHECK

NOTE:

The fluid level should be set to the "MAX" line with the fluid at 20°C.

1.

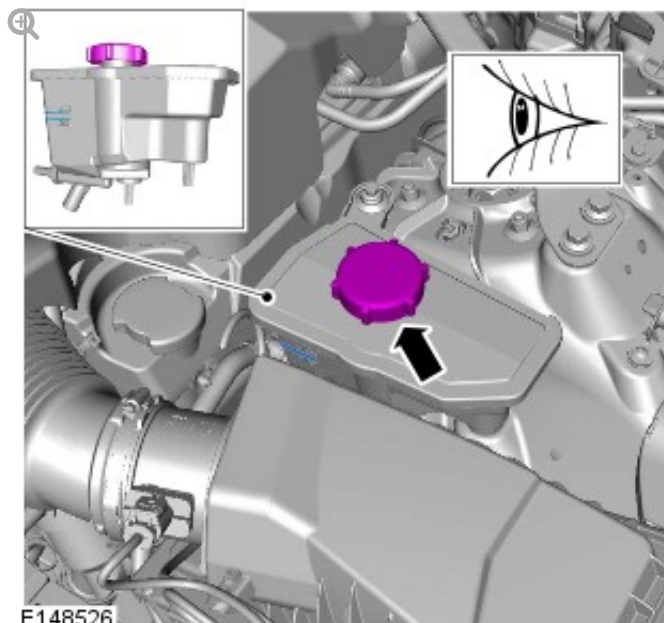

- 1.** With the fluid temperature at normal operating temperature 50-70°C the level may be 10-15mm above this mark.
Topping up at normal operating temperature should take account of this. Do not remove fluid to achieve the "MAX" level when the fluid is at normal operating temperature.
- 2.** The fluid level should be checked with engine off and engine on, any significant drop (more than 5mm) indicates trapped air in the system.