

2016.0 RANGE ROVER (LG), 204-06

RIDE AND HANDLING OPTIMIZATION

FRONT STABILIZER BAR BUSHING (G1561059)

REMOVAL AND INSTALLATION

60.10.05	MOUNTING RUBBERS - STABILIZER BAR - SET - RENEW	ALL DERIVATIVES	0.5	USED WITHINS	+
----------	---	--------------------	-----	-----------------	---

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).


3.

CAUTION:

Make sure that new bolts are installed.

NOTE:

Support the dynamic response front actuator to make sure the hydraulic hoses are not strained.

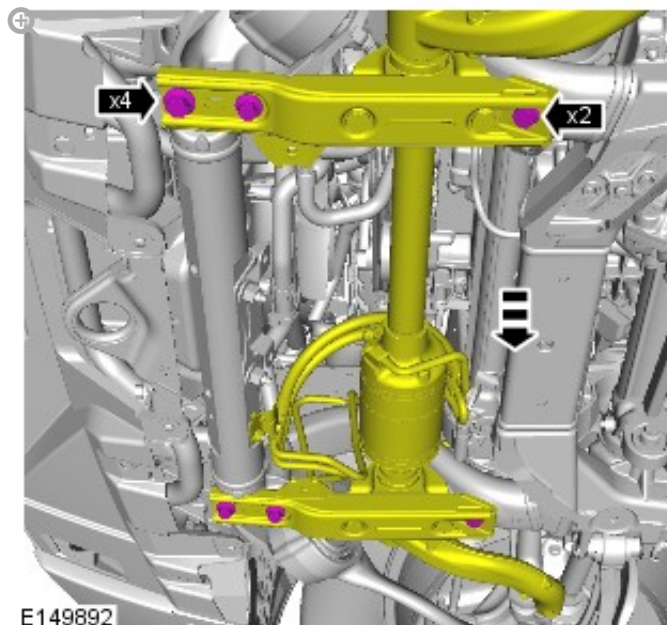

Torque:

M14

Stage 1: **140 Nm**

Stage 2: **120°**

M12


Stage 1: **90 Nm**

Stage 2: **180°**

4.

NOTES:

- LH illustration shown, RH is similar.
- The step must be carried out on both sides.
- Make sure the new bushes are installed in the correct orientation.

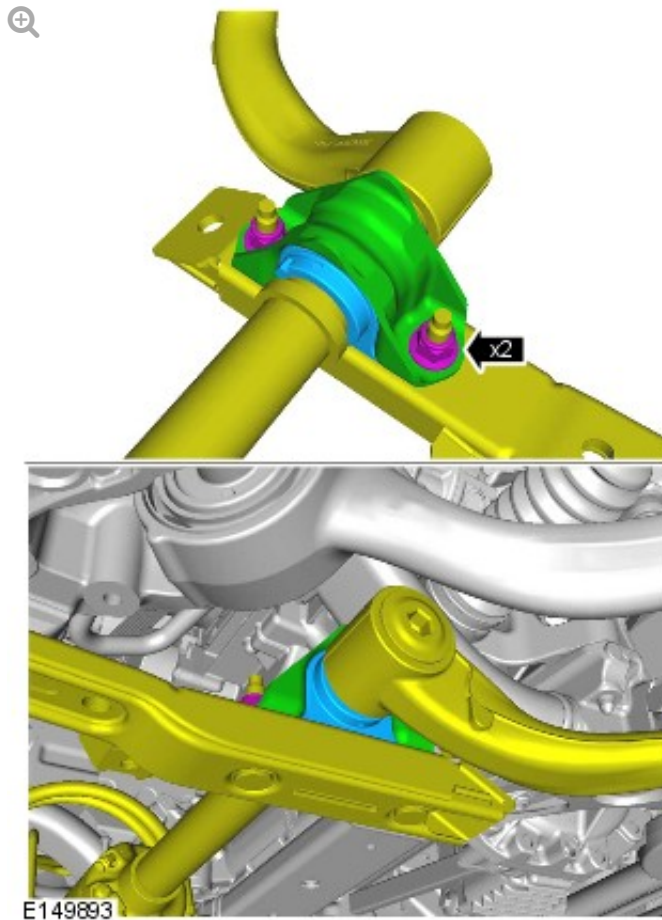

Torque: 110 Nm


5.

CAUTION:

Make sure the stabilizer bar is not damaged or scratched when cutting the bush.

NOTES:

- LH illustration shown, RH is similar.
- This step is for bushes that have been fitted to the stabilizer bar without a split.

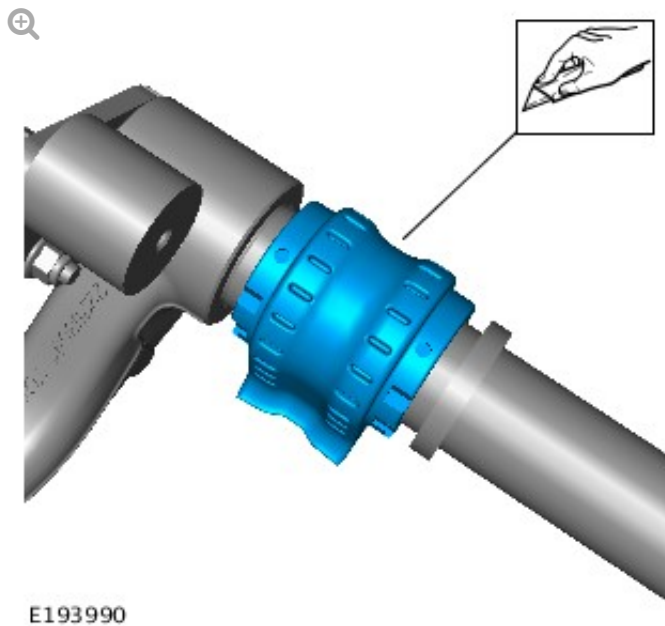

Using a suitable cutting tool, cut and remove the bush from the stabilizer bar.

INSTALLATION

1.

CAUTIONS:

- The bush must be installed without any additional lubricant. Failure to follow this instruction may cause damage to the component.
- Nuts must be tightened with vehicle at normal ride height.
- Make sure that all the component mating faces are clean and free from scratches.

To install, reverse the removal procedure.