

2016.0 RANGE ROVER (LG), 204-06

RIDE AND HANDLING OPTIMIZATION

FRONT STABILIZER BAR (G1561058)

REMOVAL AND INSTALLATION

60.10.01	STABILIZER BAR - RENEW	3000 CC, TDV6, DIESEL	11.9	USED WITHINS	+
----------	------------------------------	-----------------------------	------	-----------------	---

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.

Refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).


3.

CAUTION:

Use a wrench on the hexagon provided to prevent the ball joint rotating.

NOTES:

- RH illustration shown, LH is similar.
- The step must be carried out on both sides.

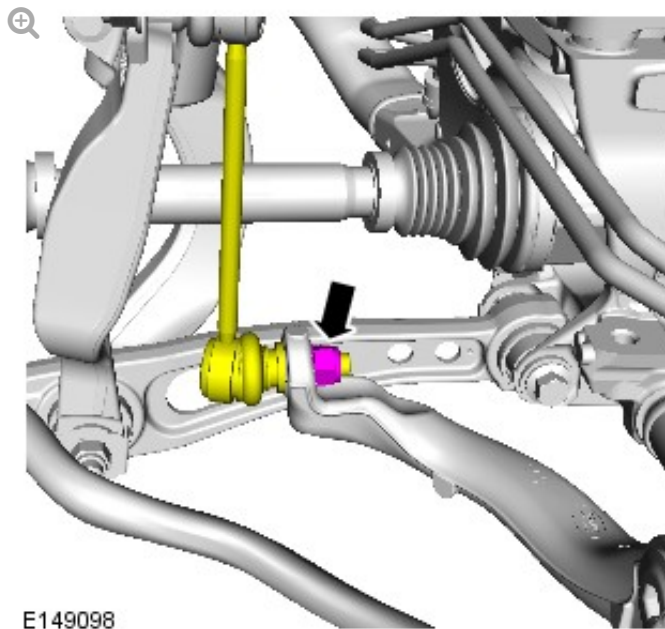

Torque: 185 Nm


4.

CAUTION:

Fixings must be started by hand to avoid damaging the threads.

NOTE:

Make sure that new bolts are installed.

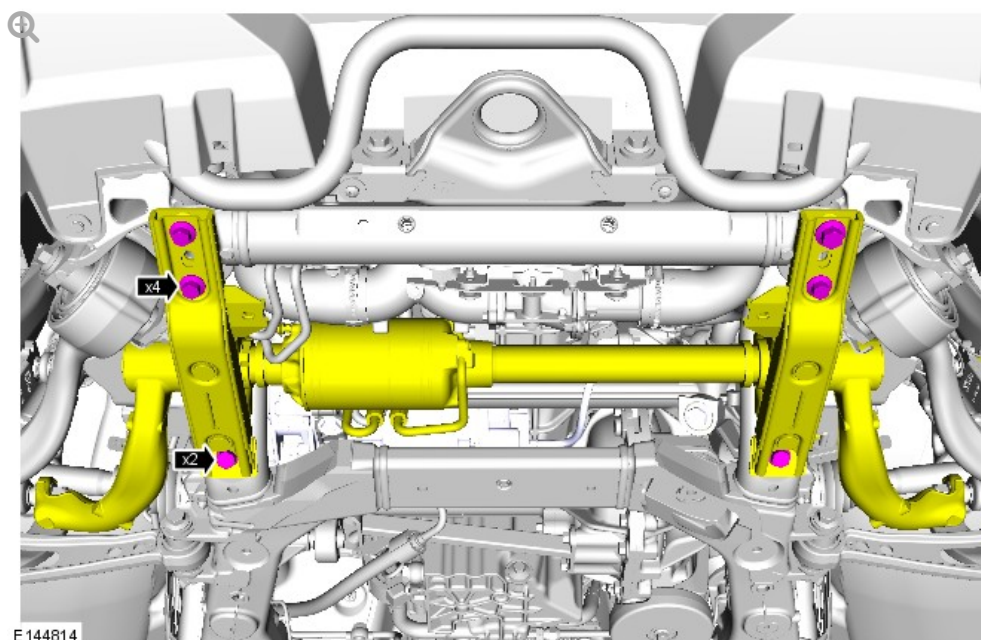

Install all the bolts finger tight then tighten in the sequence below:

Torque:

M12 bolts

Stage 1: **90 Nm**

Stage 2: **180°**

M14 bolts

Stage 1: **140 Nm**

Stage 2: **120°**


5.

CAUTION:

Be prepared to collect escaping fluids.


NOTE:

New O-ring seal is be installed.

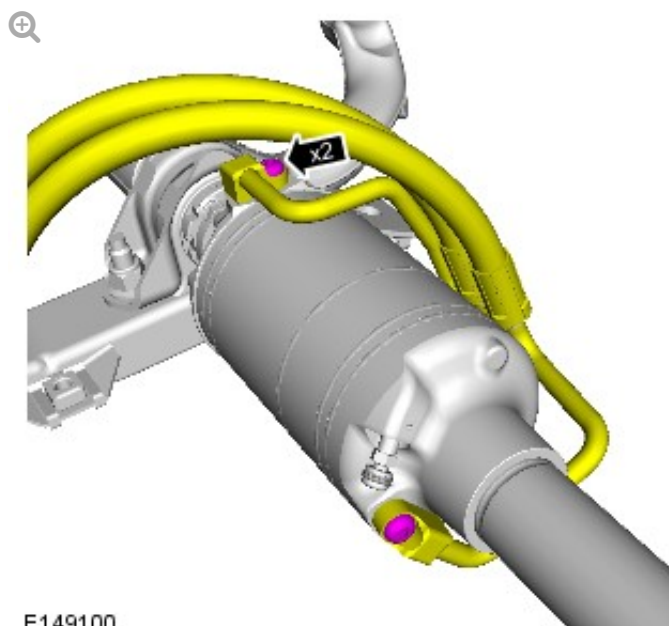

Torque: 22 Nm

6.

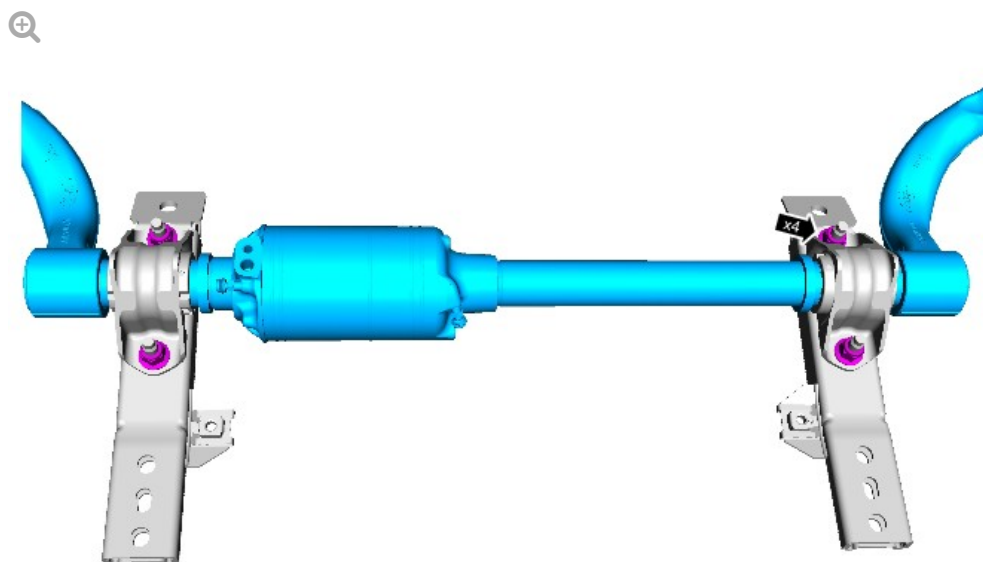

Torque: 110 Nm

INSTALLATION

CAUTION:

The bush must be installed without any additional lubricant. Failure to follow this instruction may cause damage to the component.

1. To install, reverse the removal procedure.
2. Refer to: [Active Stabilization System Bleeding](#) (204-06 Ride and Handling Optimization, General Procedures).