

2016.0 RANGE ROVER (LG), 204-01

FRONT SUSPENSION

FRONT LOWER ARM BUSHING (G1679070)


REMOVAL AND INSTALLATION

SPECIAL TOOL(S)



**JLR-204-
816**

Remover, Bush

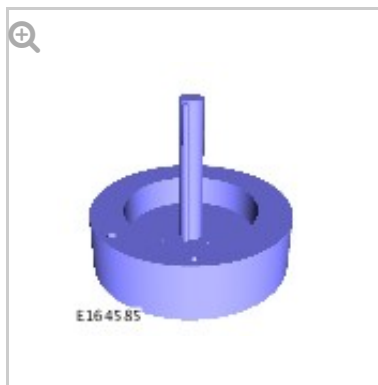

**JLR-204-
817**

Installer, Bush



JLR-204-818

Remover/Support,
Bush

GENERAL EQUIPMENT

EQUIPMENT NAME

Hydraulic press

REMOVAL

CAUTION:

Bushes must be installed in pairs.

1.

WARNING:


Do not work on or under a vehicle supported only by a jack.
Always support the vehicle on safety stands.

Raise and support the vehicle.

2. Remove the front lower arm.

Refer to: [Front Lower Arm](#) (204-01 Front Suspension, Removal and Installation).

3.

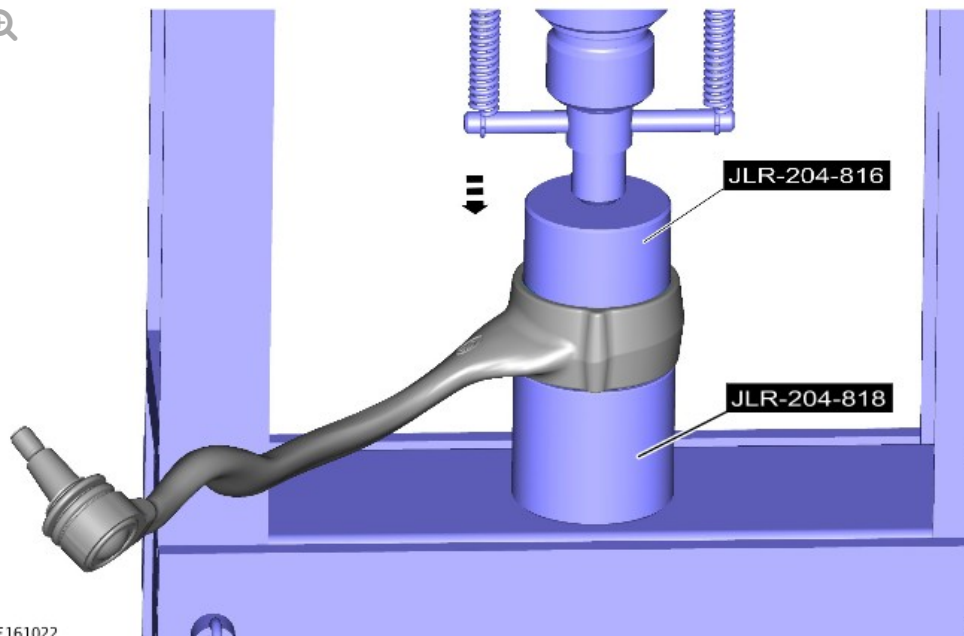

Special Tool(s): [JLR-204-816](#), [JLR-204-818](#)


General Equipment: [Hydraulic press](#)

INSTALLATION

1.

NOTE:

Note the timing mark for the bush installation.

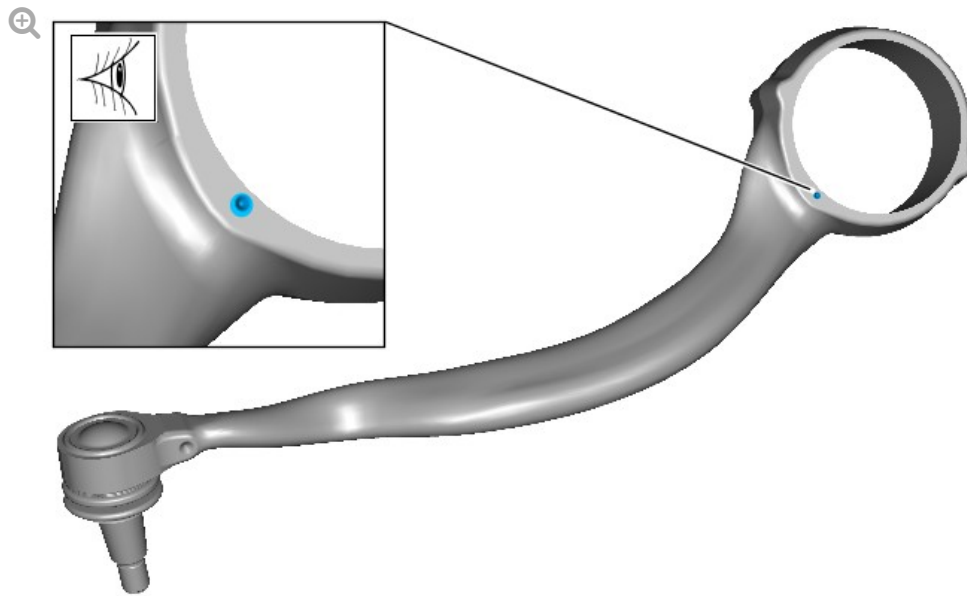

E161072


2.

CAUTION:

Make sure bush is positioned in the correct orientation.
Failure to follow this instruction may result in damage to the vehicle.

NOTES:



- Illustration shows basic alignment.
- Left-hand shown, right-hand mirrored.

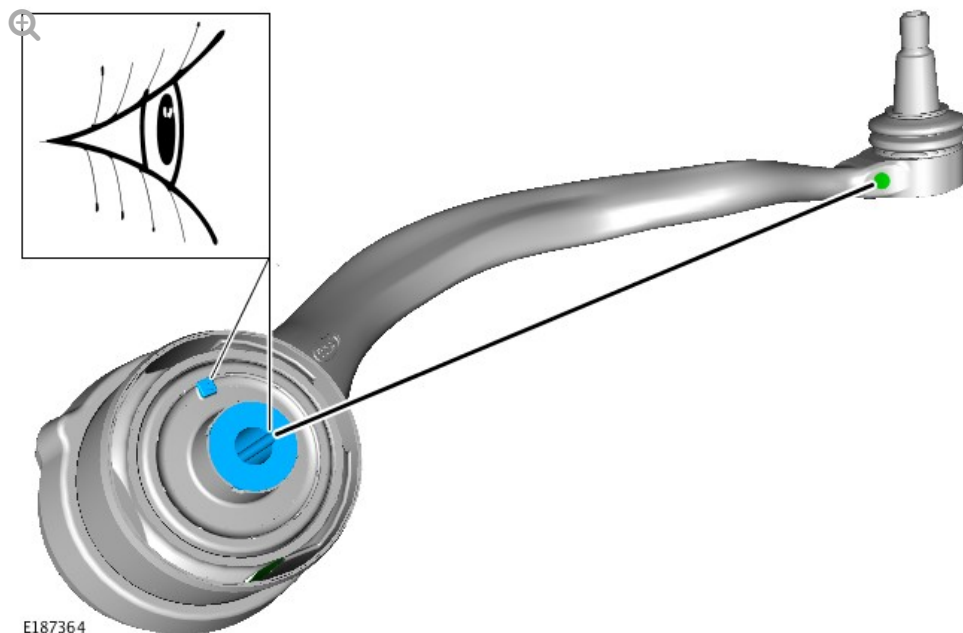

3.

CAUTION:

Make sure the special tool is set in the correct position.
Failure to follow this instruction may result in damage to the vehicle and the tool.

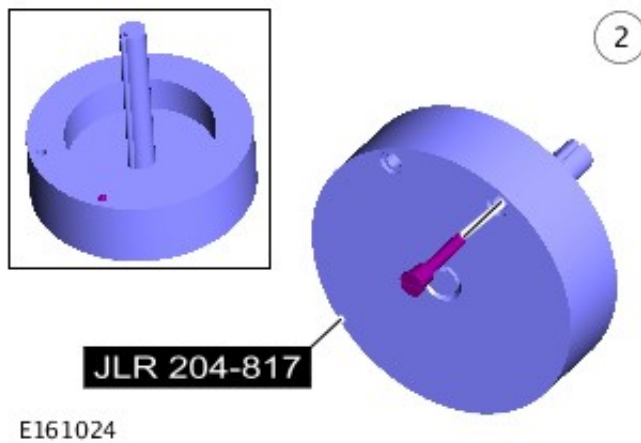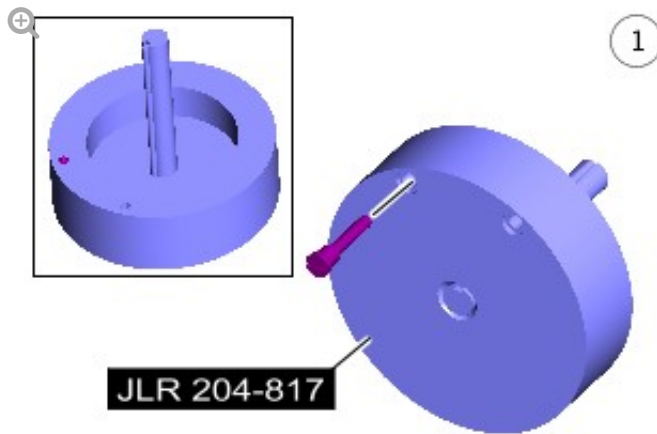


- Position 1, left lower control arm.
 - Position 2, right lower control arm.
- Special Tool(s):* [JLR-204-817](#)

4.

CAUTION:

Make sure the special tools are in the correct orientation.
Failure to follow this instruction may result in damage to the vehicle and tools.

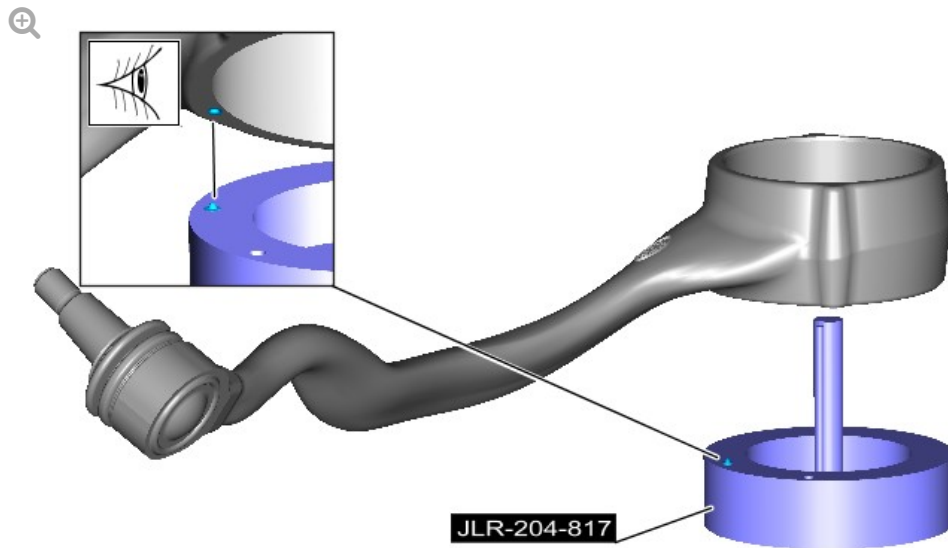


E161073

Special Tool(s): [JLR-204-817](#)

5.

CAUTION:


Make sure the special tools are in the correct orientation.
Failure to follow this instruction may result in damage to the vehicle and tools.

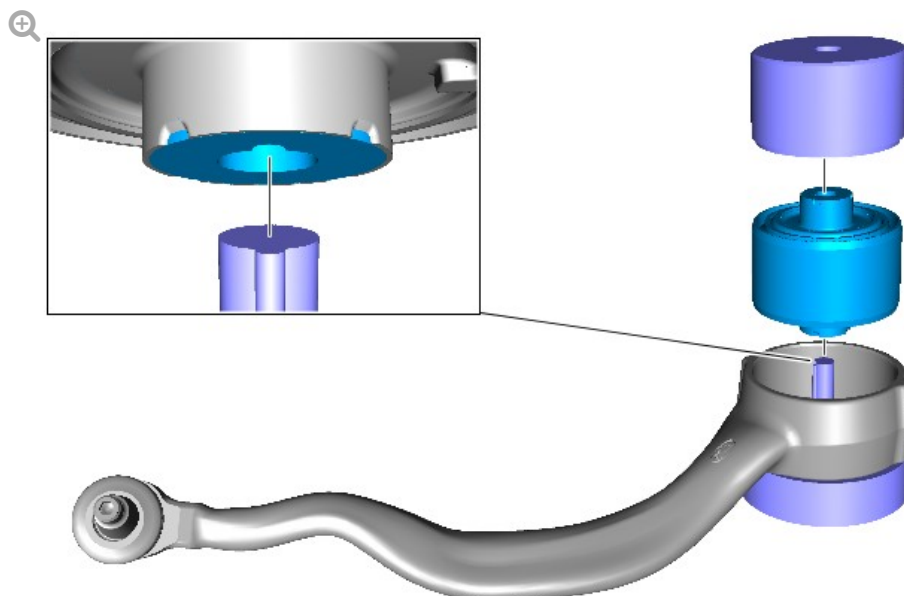

E187363

Special Tool(s): [JLR-204-817](#), [JLR-204-816](#)

6.

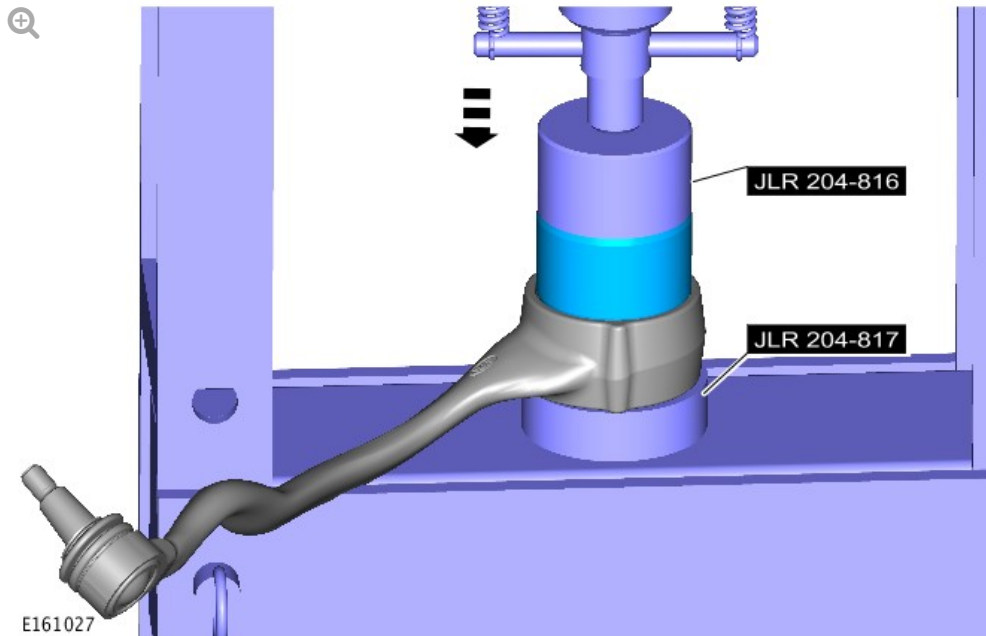


Special Tool(s): [JLR-204-816](#), [JLR-204-817](#)

General Equipment: [Hydraulic press](#)

7.

CAUTION:

Make sure bush is positioned in the correct orientation.
Failure to follow this instruction may result in damage to the vehicle.

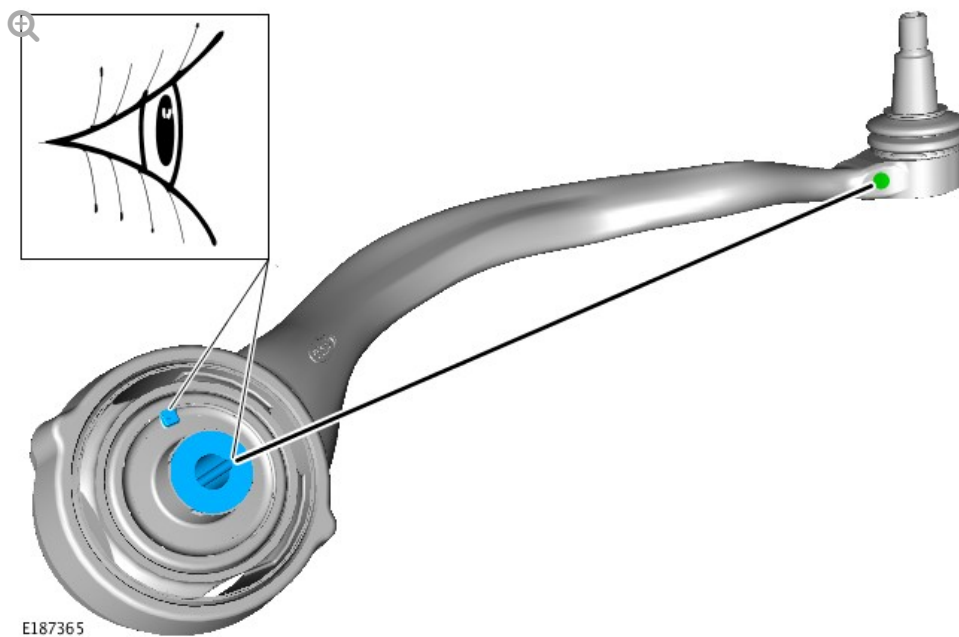

8. Install the front lower arm.

Refer to: [Front Lower Arm](#) (204-01 Front Suspension, Removal and Installation).