

2016.0 RANGE ROVER (LG), 204-02

## REAR SUSPENSION

# REAR SHOCK ABSORBER – ARMOURED (G1875403)

### REMOVAL AND INSTALLATION

---

|          |                                    |                    |     |                 |   |
|----------|------------------------------------|--------------------|-----|-----------------|---|
| 64.30.02 | DAMPER<br>- ONE<br>SIDE -<br>RENEW | ALL<br>DERIVATIVES | 1.1 | USED<br>WITHINS | + |
|----------|------------------------------------|--------------------|-----|-----------------|---|

---


## REMOVAL

### NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.
- Removal steps in this procedure may contain installation details.


1. Refer to: Air Suspension - Manual Control Procedure (204-05, General Procedures).

2.

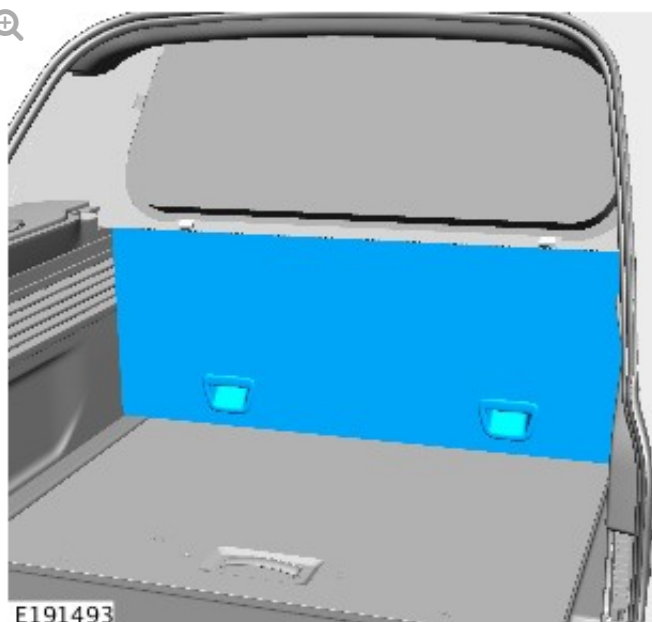


E191493

3.

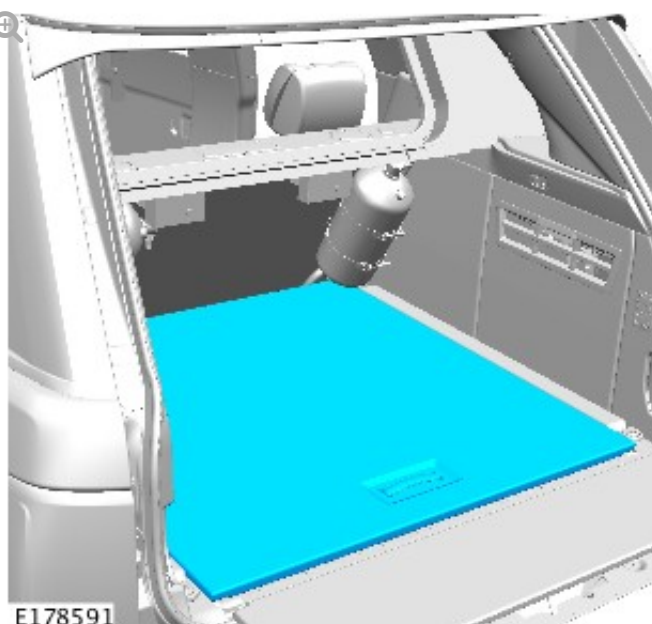


E178591

4.

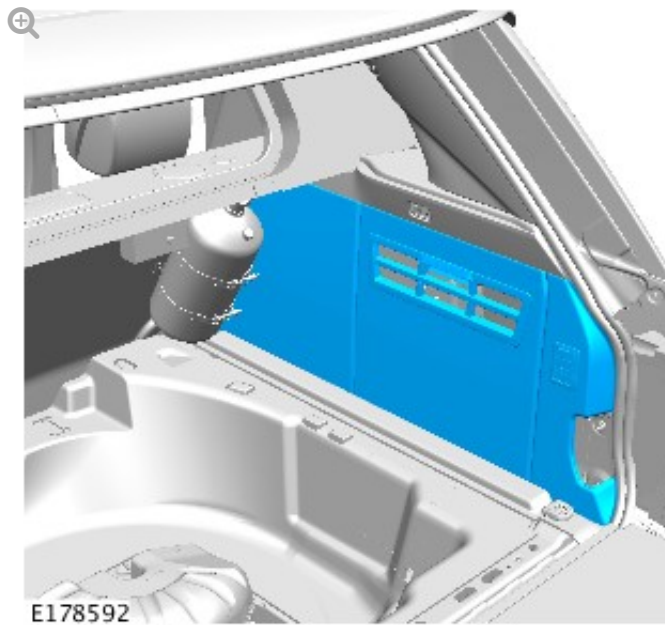

5.

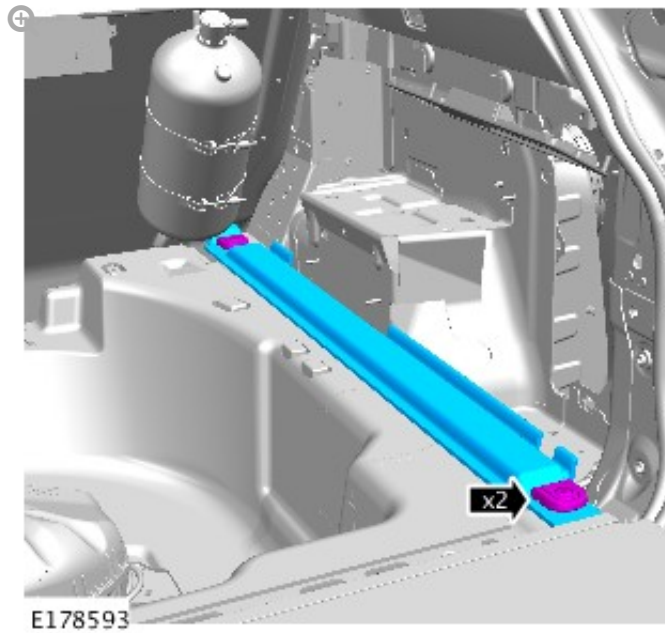

6.


**WARNING:**

Do not work on or under a vehicle supported only by a jack.  
Always support the vehicle on safety stands.


Raise and support the vehicle.

7. Refer to: Wheel and Tire - TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 5.0L Petrol/V8 S/C 5.0L Petrol (204-04, Removal and Installation).


8.

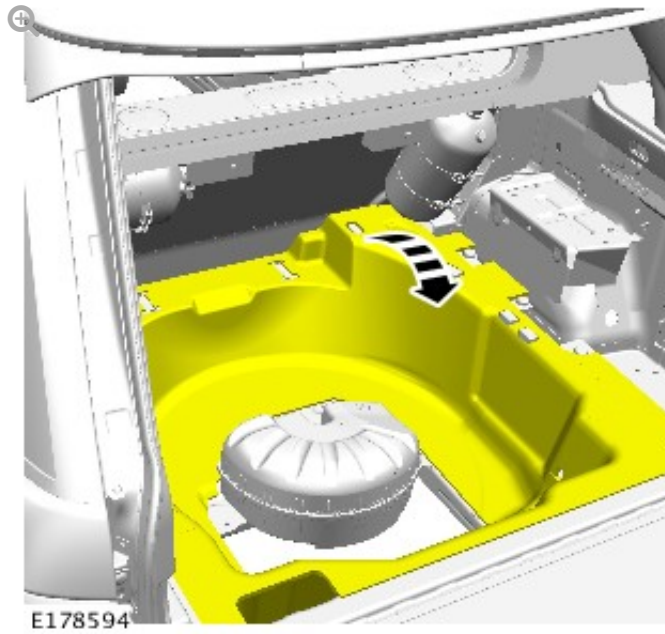

9.

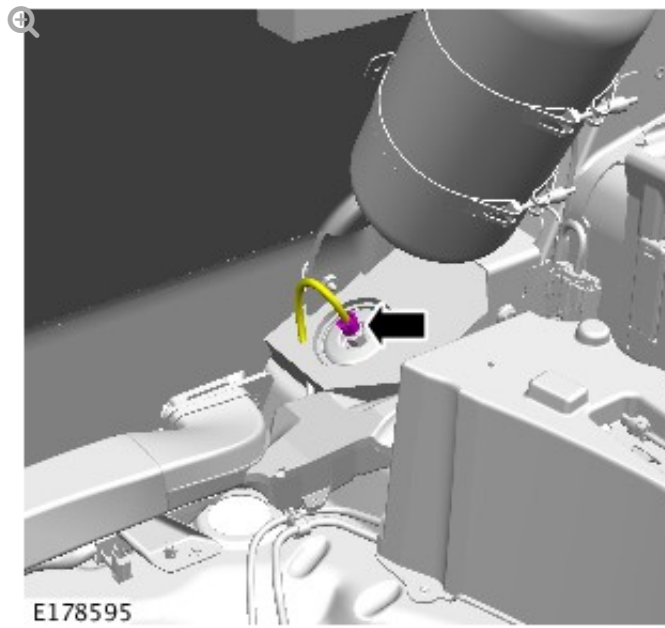



10.

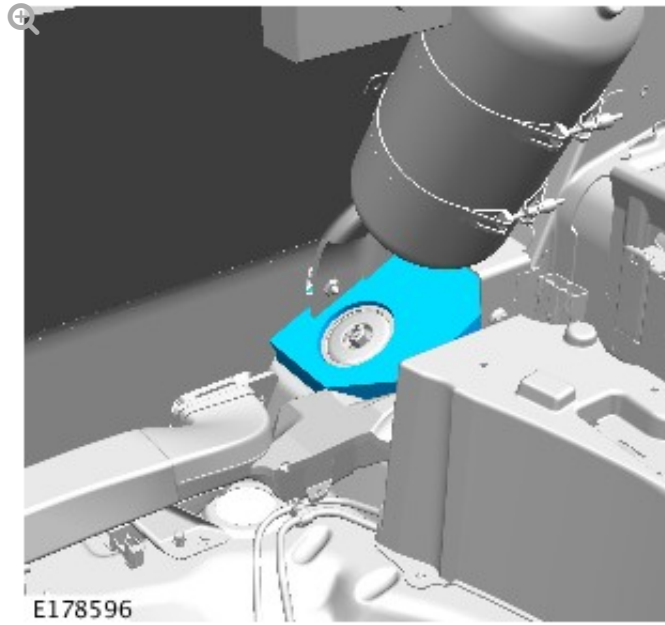

11.

**CAUTION:**

Discard the nut and bolt.

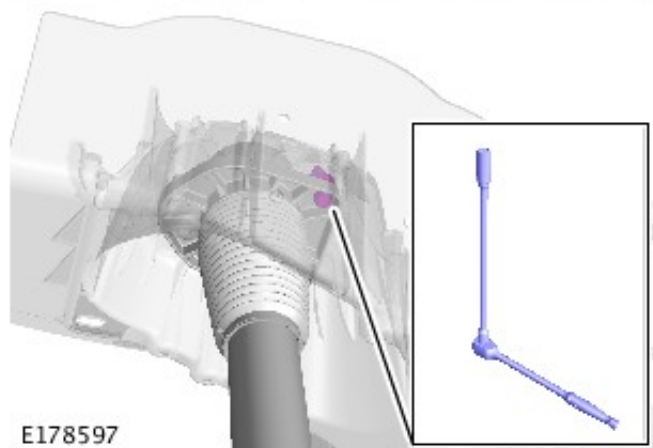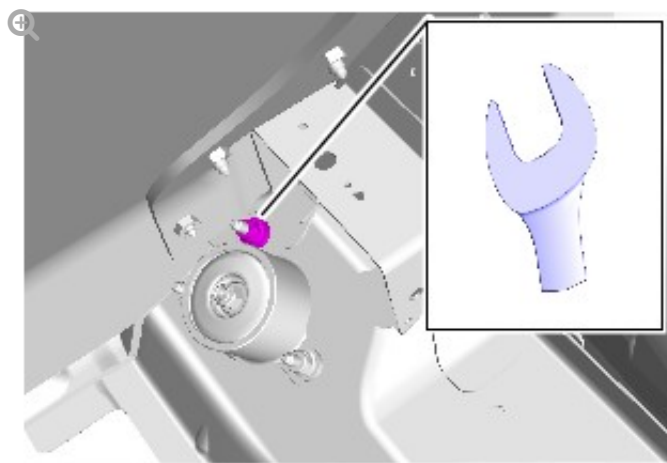


E178597

*Torque: 48 Nm*

12.

**CAUTION:**

Discard the nuts.

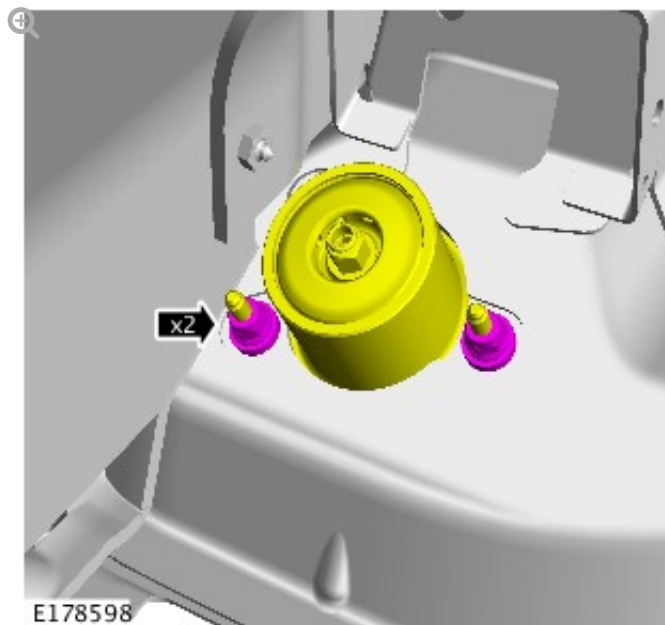

*Torque: 48 Nm*


13.

**CAUTION:**

Discard the nut and bolt.

**NOTE:**

Note the orientation of the component prior to removal.

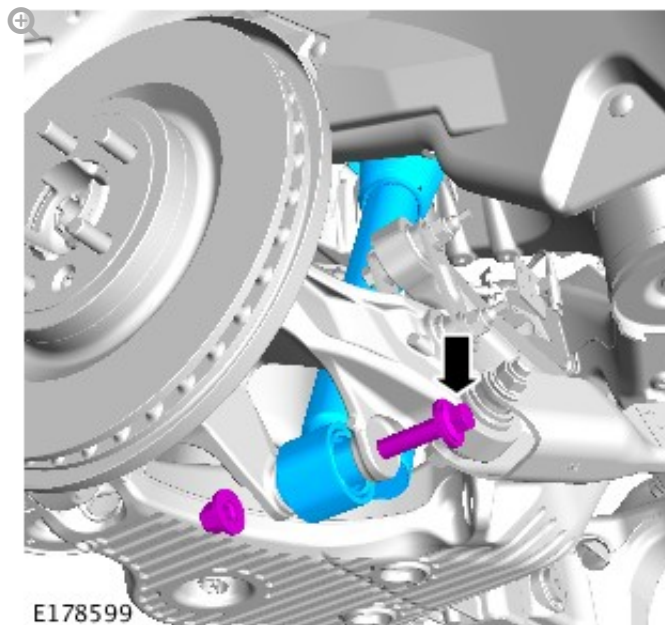

*Torque:*

Stage 1: 100 Nm

Stage 2: 240°

14.

#### NOTES:

- Remove and discard the gasket.
- Do not disassemble further if the component is removed for access only.





15.

### CAUTION:


Discard the nut.



E190941

*Torque: 27 Nm*

16.

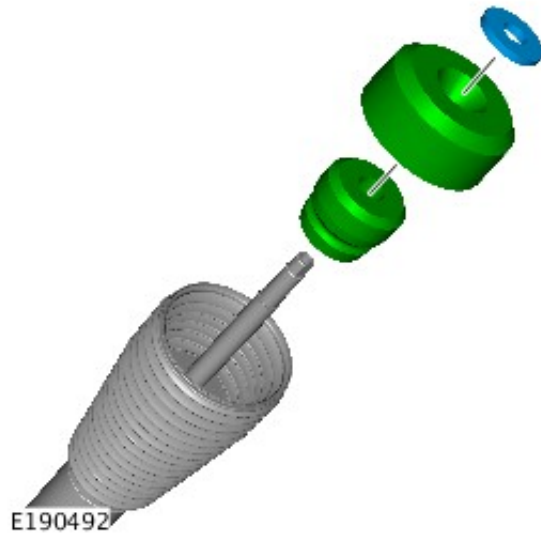

17.

**NOTE:**

Discard the retaining clip.



E190493

18.




E190494

Inspect the components and renew if damaged or worn.

---

## INSTALLATION

1.

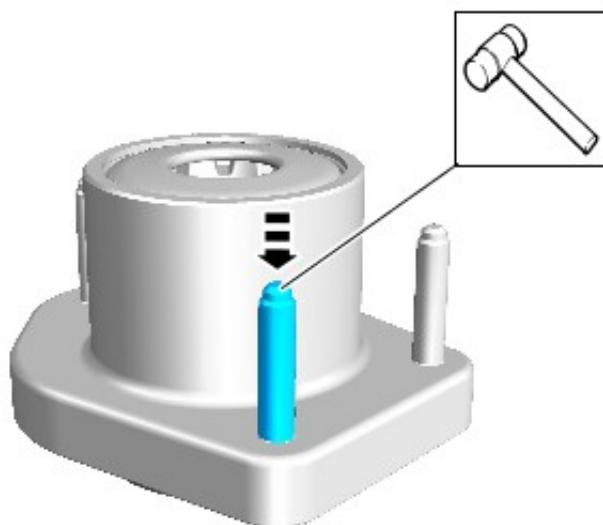

E178603

Remove the forward outer stud from the new shock absorber top

mounting. This is to allow for the nut and bolt fixing to be installed.

2. To install, reverse the removal procedure.
3. Refer to: Air Suspension - Manual Control Procedure (204-05, General Procedures).
4. Refer to: Air Suspension System Depressurize and Pressurize (204-05, General Procedures).
5. Refer to: Wheel and Tire - TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 5.0L Petrol/V8 S/C 5.0L Petrol (204-04, Removal and Installation).