

2016.0 RANGE ROVER (LG), 204-02

REAR SUSPENSION

REAR STABILIZER BAR - ARMOURED [G1770117]

REMOVAL AND INSTALLATION

64.35.08	STABILIZER BAR - RENEW	3000 CC, TDV6	1.3	USED WITHINS	+
----------	------------------------------	------------------	-----	-----------------	---

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1.


WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Refer to: [Rear Air Spring](#) (204-05 Vehicle Dynamic Suspension, Removal and Installation).
3. Refer to: Armoured Undershield (501-08, Removal and Installation).

4.

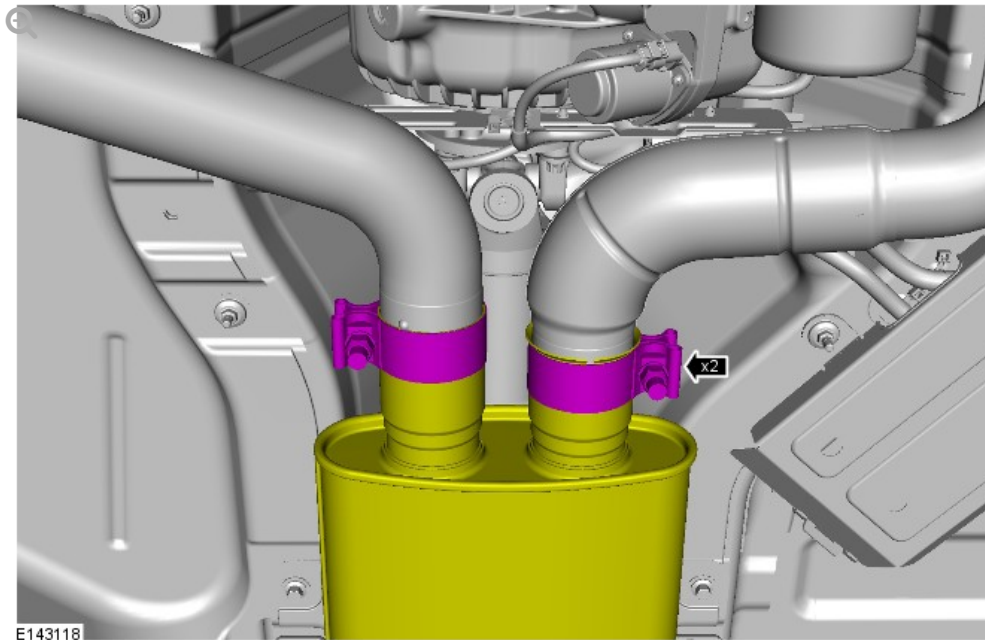


Torque: 55 Nm


5.

CAUTION:

Make sure that the exhaust system is supported with suitable retaining straps.

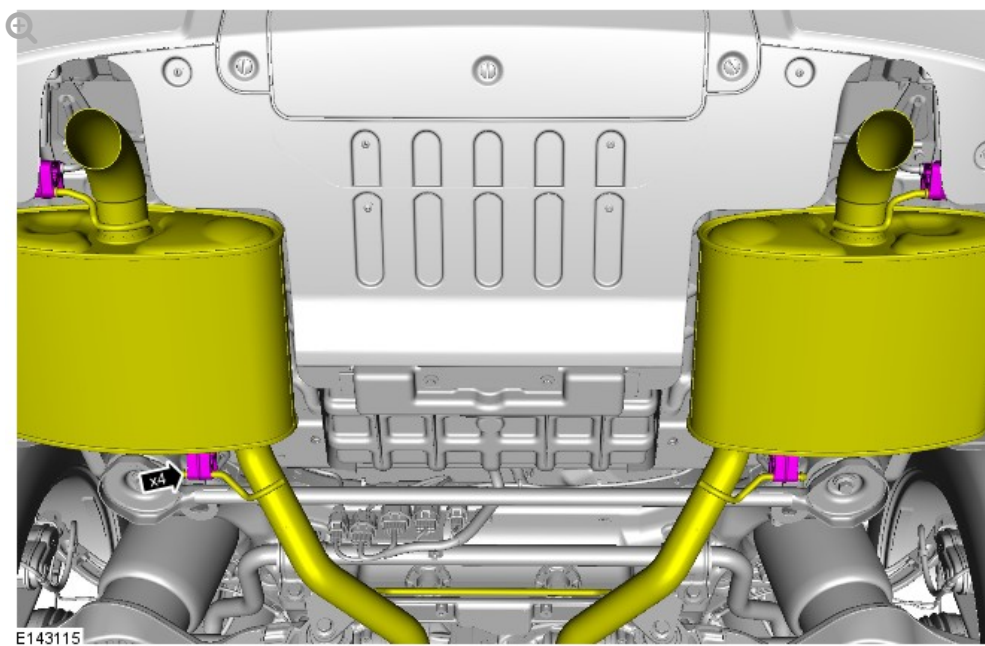

6.

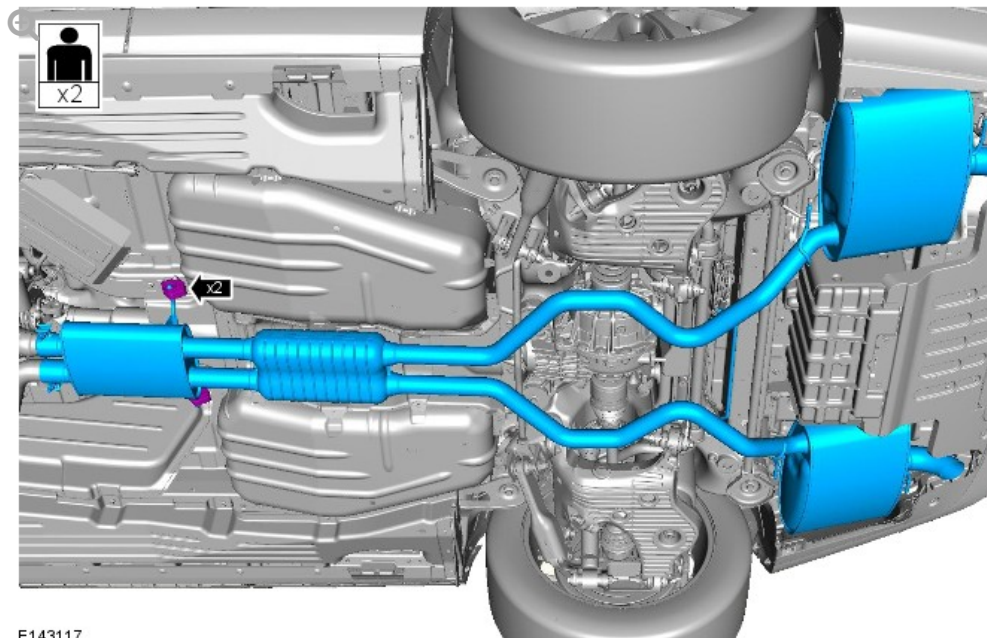

E143117


7.

CAUTIONS:

- Use a wrench on the hexagon provided to prevent the ball joint rotating.
- Nuts must be tightened with vehicle at normal ride height.

NOTES:


- LH illustration shown, RH is similar.
- The step must be carried out on both sides.

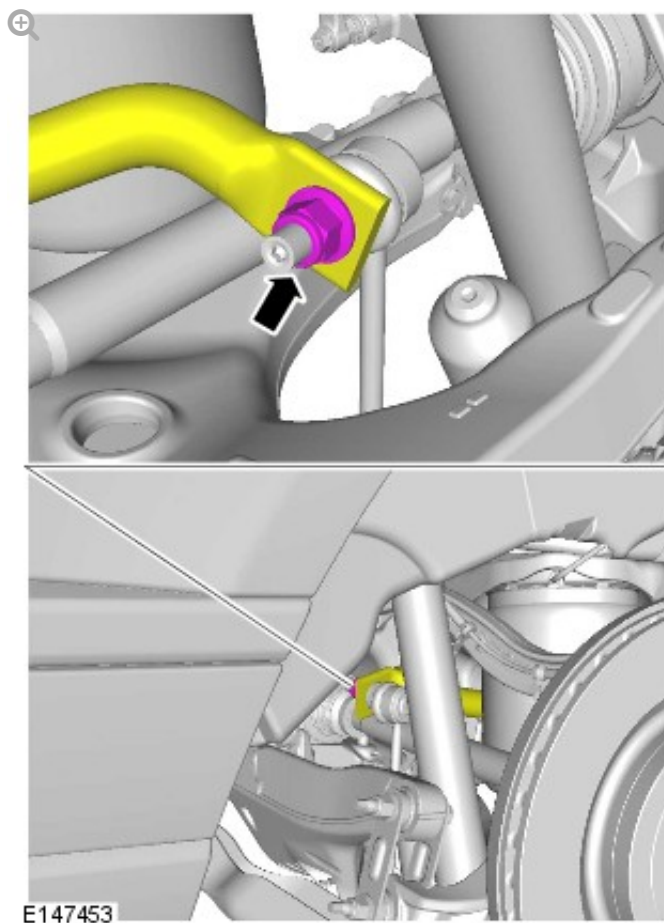

E147453

Torque: 185 Nm


8.

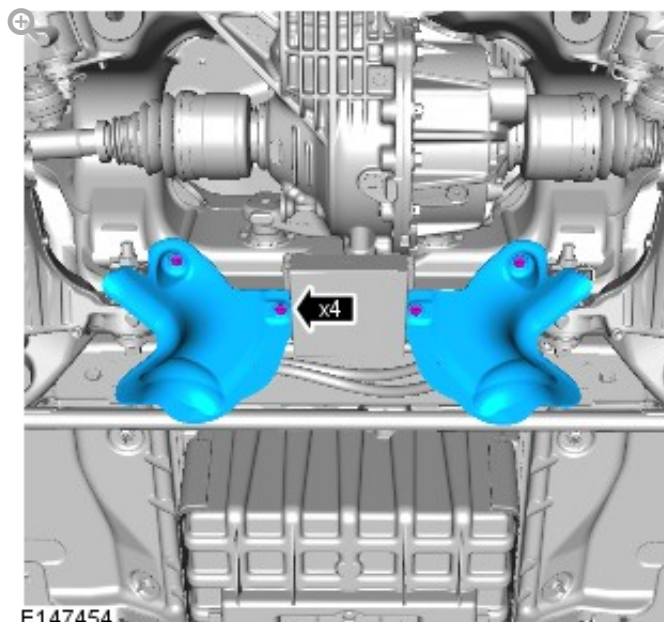

E147454

Torque: 10 Nm

9.

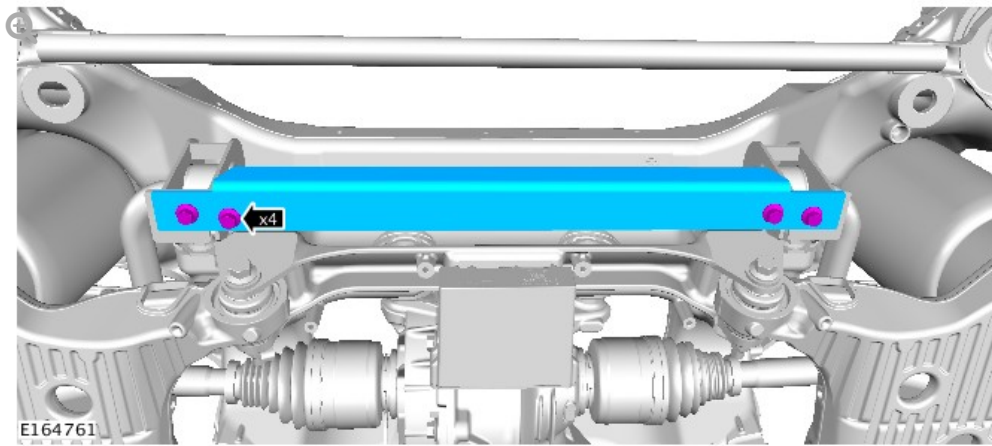


Torque: 25 Nm

10.

CAUTION:

Fixings must be tightened with vehicle at normal ride height.

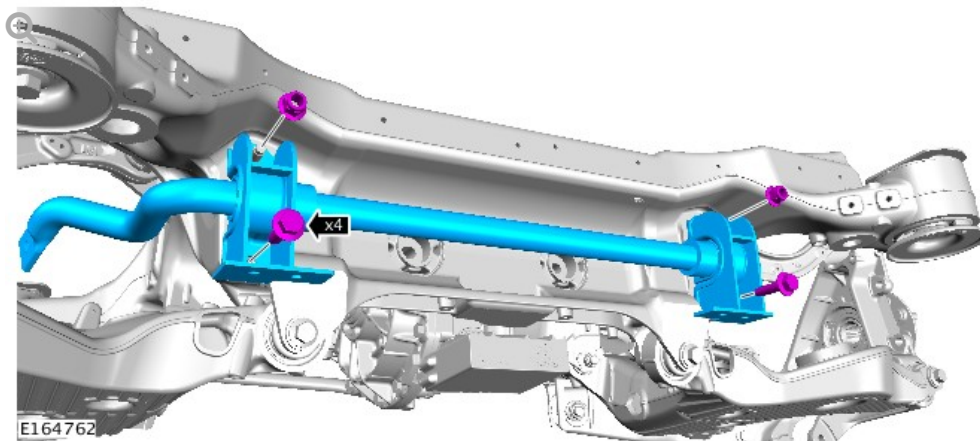

Torque: 110 Nm

INSTALLATION

1. To install, reverse the removal procedure.