

2016.0 RANGE ROVER (LG), 204-02

REAR SUSPENSION

TOE LINK (G1761171)

REMOVAL AND INSTALLATION

64.35.09	TIE-ROD - RENEW	3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER	4.1	USED WITHINS	+
64.35.09	TIE-ROD - RENEW	3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID	4.6	USED WITHINS	+

GENERAL EQUIPMENT

EQUIPMENT NAME
Transmission jack

REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- LH illustration shown, RH is similar.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.

Refer to: [Fuel Tank](#) (310-01A Fuel Tank and Lines - TDV6 3.0L Diesel, Removal and Installation).

Refer to: [Fuel Tank](#) (310-01B Fuel Tank and Lines - V6 S/C 3.0L Petrol, Removal and Installation).

Refer to: [Fuel Tank](#) (310-01B Fuel Tank and Lines - V6 S/C 3.0L Petrol, Removal and Installation).

Refer to: [Fuel Tank](#) (310-01D Fuel Tank and Lines - TDV8 4.4L Diesel, Removal and Installation).


Refer to: [Fuel Tank](#) (310-01E Fuel Tank and Lines - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation).

Refer to: [Fuel Tank](#) (310-01F, Removal and Installation).


3.

NOTE:

Discard the bolt.

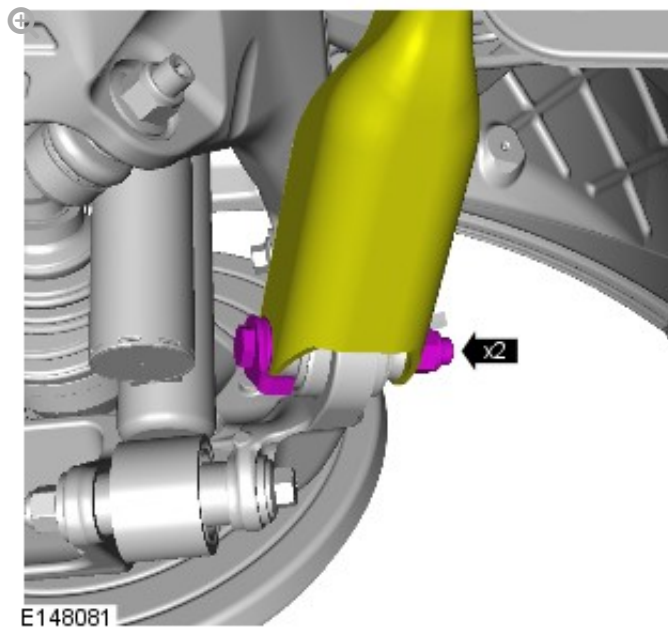

4.

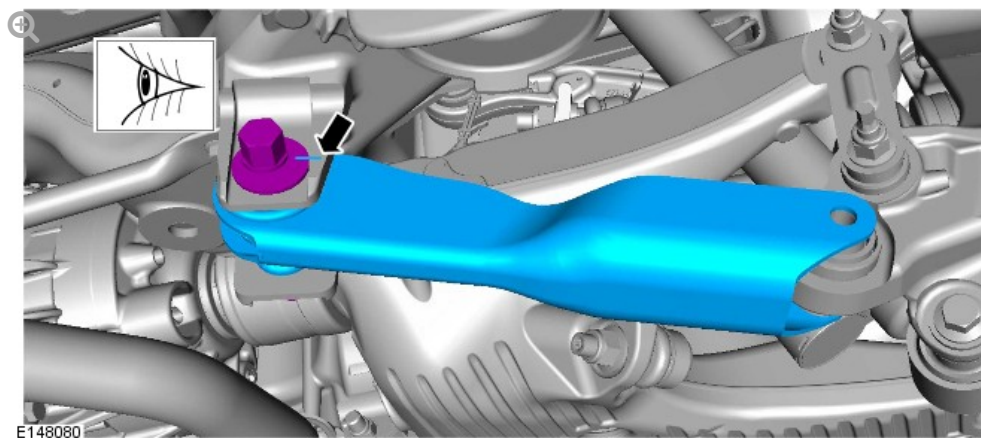


INSTALLATION

1.

CAUTION:

Nuts and bolts must be tightened with vehicle at normal ride height.

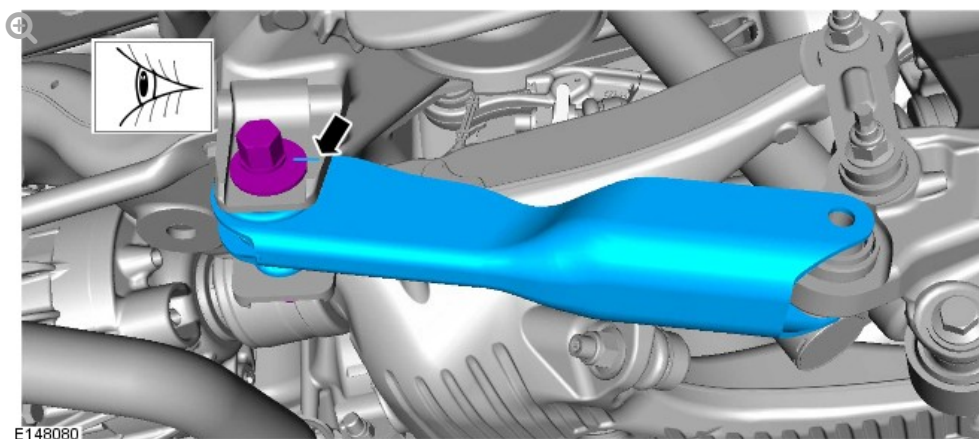

Torque:


Stage 1: 40 Nm

Stage 2: 60°

2.

CAUTIONS:

- Nuts and bolts must be tightened with vehicle at normal ride height.
- Make sure that a new bolt is installed.

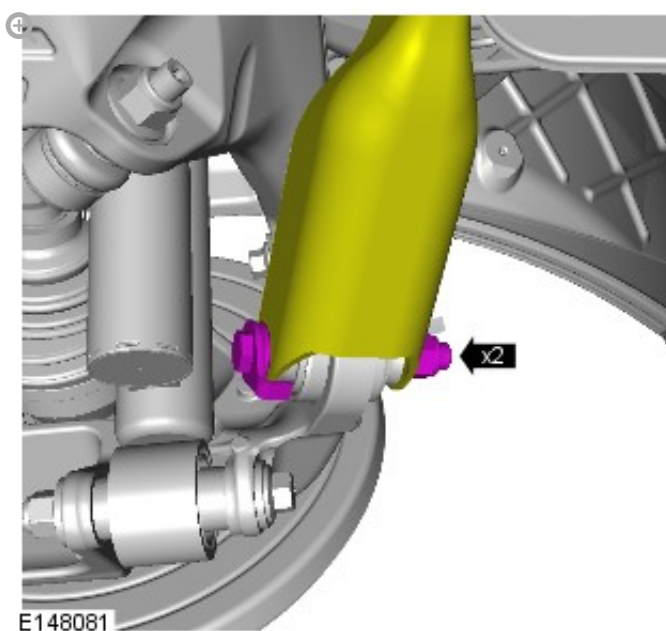

Torque:

Stage 1: 70 Nm

Stage 2: 240°

3. Using a suitable transmission jack, support the component while tightening the nuts and bolts at normal ride height.
Refer to: [Specifications](#) (204-00 Suspension System - General Information, Specifications).
General Equipment: [Transmission jack](#)
4. Remove the transmission jack.
5. Refer to: [Fuel Tank](#) (310-01A Fuel Tank and Lines - TDV6 3.0L Diesel, Removal and Installation).
Refer to: [Fuel Tank](#) (310-01B Fuel Tank and Lines - V6 S/C 3.0L Petrol, Removal and Installation).
Refer to: [Fuel Tank](#) (310-01B Fuel Tank and Lines - V6 S/C 3.0L Petrol, Removal and Installation).
Refer to: [Fuel Tank](#) (310-01D Fuel Tank and Lines - TDV8 4.4L Diesel, Removal and Installation).
Refer to: [Fuel Tank](#) (310-01E Fuel Tank and Lines - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation).
Refer to: [Fuel Tank](#) (310-01F, Removal and Installation).
6. Refer to: [Four Wheel Alignment](#) (204-00 Suspension System - General Information, General Procedures).