

2016.0 RANGE ROVER (LG), 204-02

REAR SUSPENSION

UPPER ARM BUSHING (G1508950)

REMOVAL AND INSTALLATION

SPECIAL TOOL(S)



204-514

Bush
remover/installer

REMOVAL

1. Raise and support the vehicle.
2. Remove the wheel and tire.


-
3. Remove the upper arm.

For additional information, refer to: [Upper Arm](#) (204-02 Rear Suspension, Removal and Installation).

-
- 4.

NOTE:


Secure the upper arm in a suitable vice.

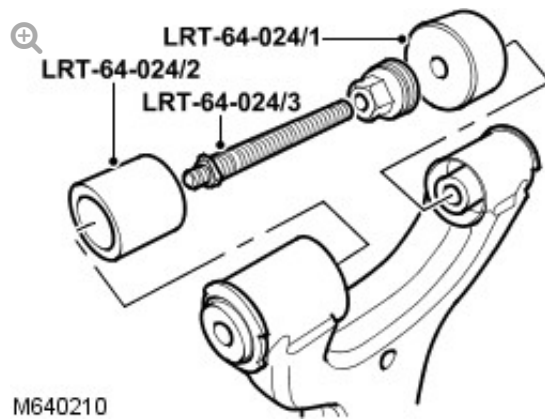

Using the special tools, remove the upper arm bushes.

INSTALLATION

1.

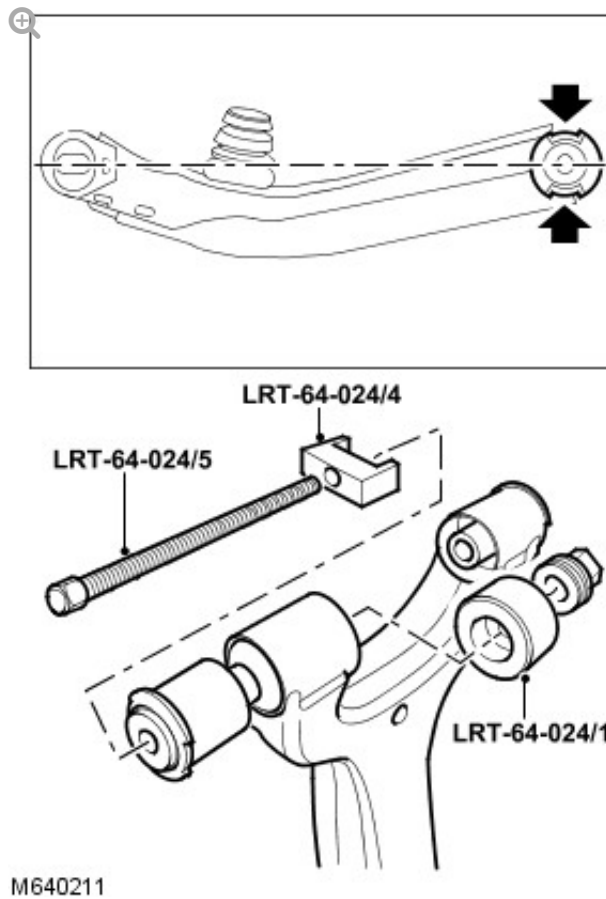

Using the special tools, install the upper arm bushes.

- Align the bushes as shown.

2. Install the upper arm.

For additional information, refer to: [Upper Arm](#) (204-02 Rear Suspension, Removal and Installation).

3. Install the wheel and tire.

- Tighten the wheel nuts to 140 Nm (103 lb.ft).