

2016.0 RANGE ROVER (LG), 412-02

AUXILIARY CLIMATE CONTROL

FUEL FIRED BOOSTER HEATER (G1521561)

REMOVAL AND INSTALLATION

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2. **WARNING:**

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-


03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).

Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).

Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).


4. Refer to: [Cowl Panel Grille](#) (501-02 Front End Body Panels, Removal and Installation).
5. Remove the RH fender splash shield.
Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).

6.

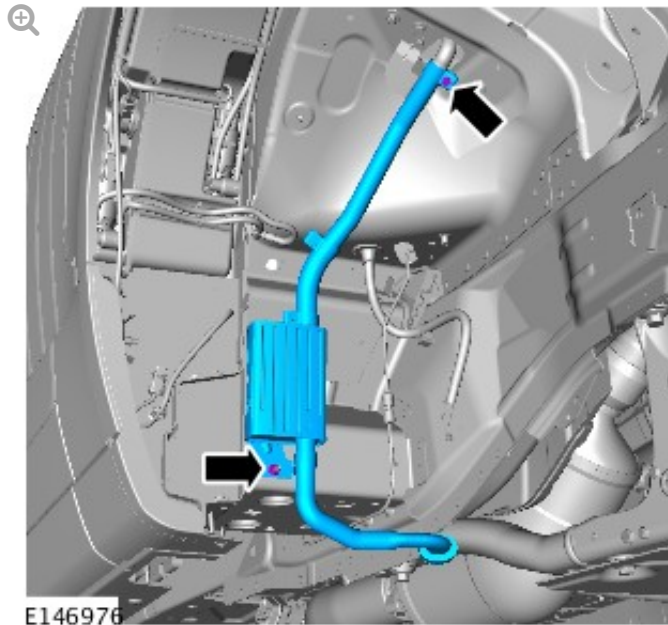

Torque: 10 Nm

7.

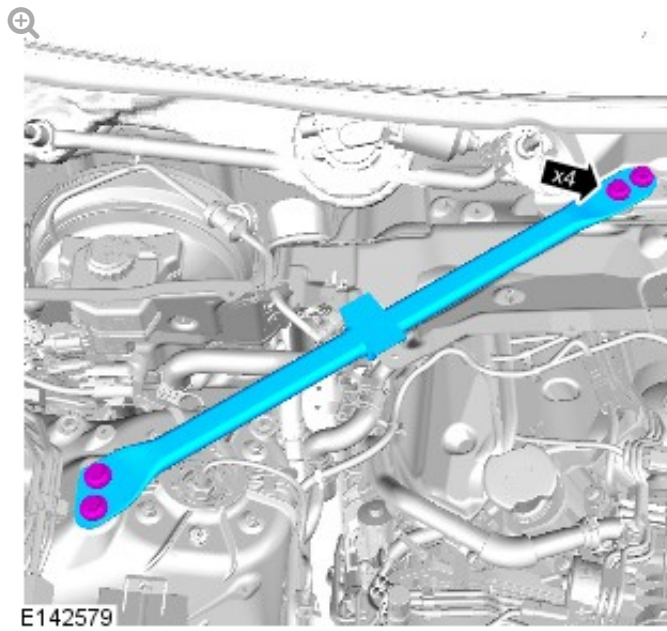


Torque: 55 Nm


8.

CAUTION:


Be prepared to collect escaping fuel.

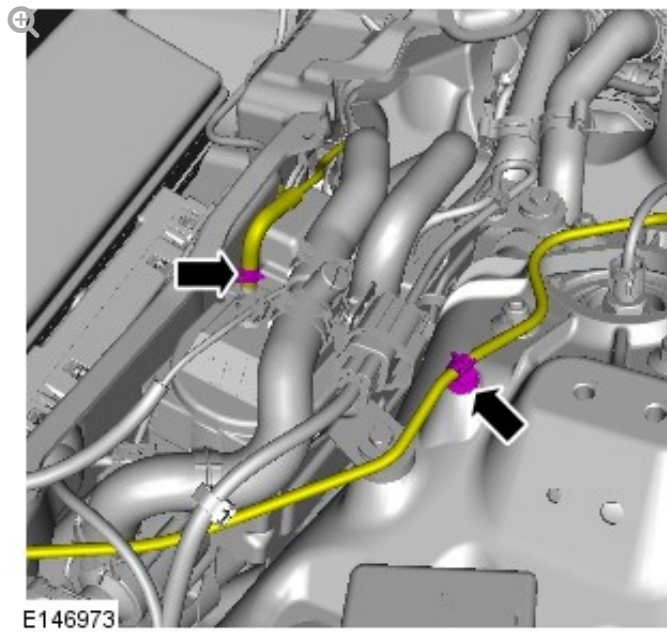

9.

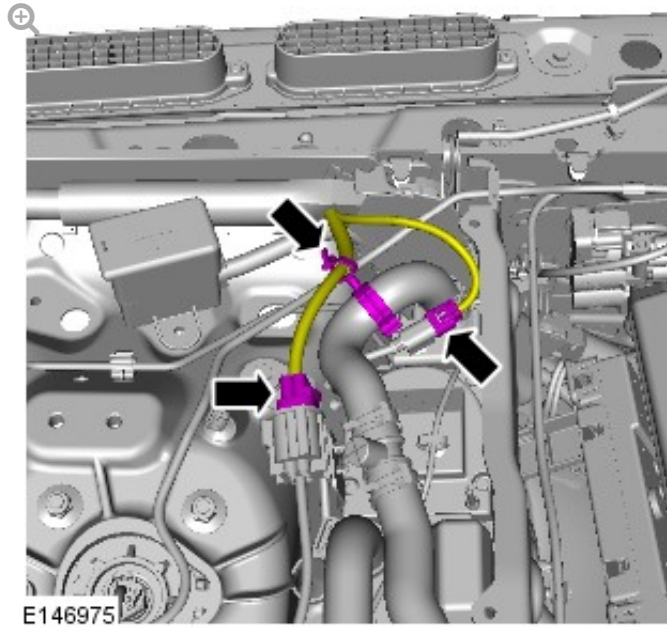

10.

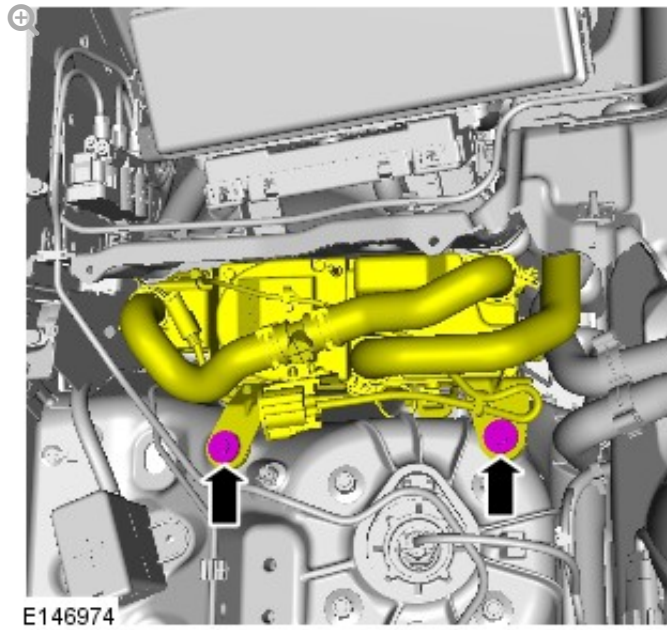

Torque: 10 Nm


NOTE:

Vehicles with 3.0L diesel engine.

11.

CAUTION:

Be prepared to collect escaping coolant.

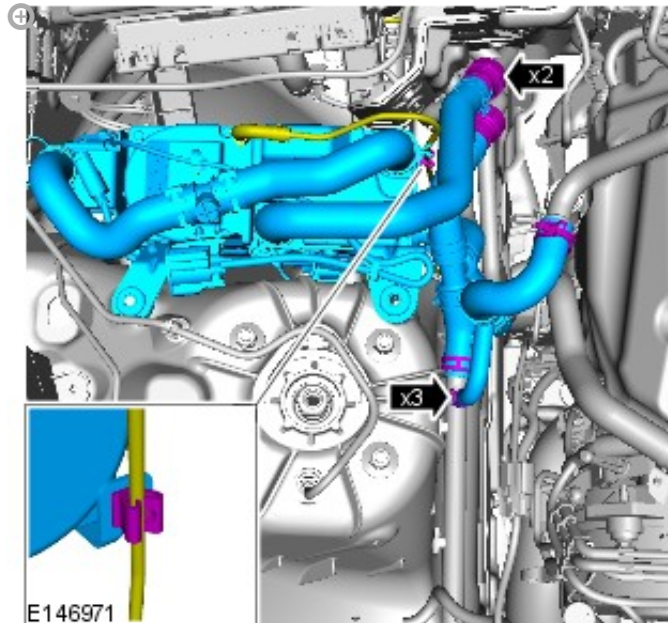


NOTE:

Vehicles with 4.4L diesel engine.

12.

CAUTION:

Be prepared to collect escaping coolant.

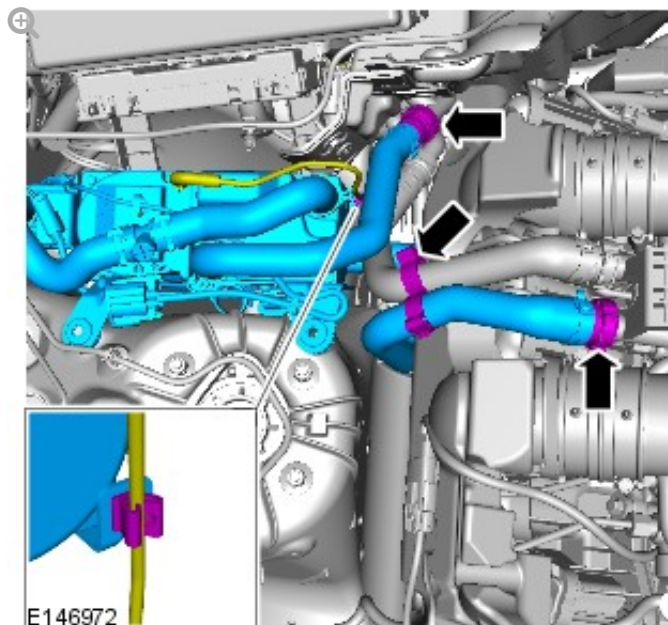


NOTE:

Vehicles with 5.0L engine.

13.

CAUTION:

Be prepared to collect escaping coolant.

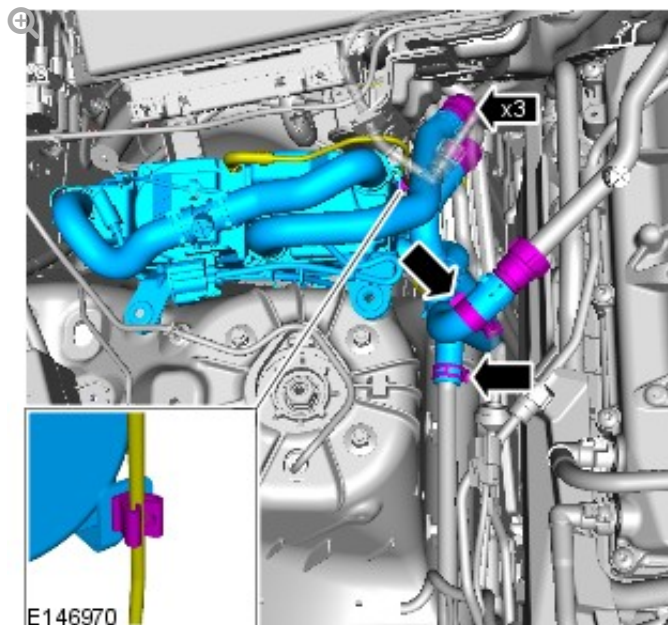

NOTE:

Vehicles with 3.0L diesel engine.

NOTE:

Vehicles with 4.4L diesel engine.

NOTE:

Vehicles with 5.0L engine.

INSTALLATION

1.

CAUTION:

Once installation of the FFBH has been completed and the coolant system fully degassed, the FFBH MUST be run continually for a minimum of 15 minutes to make sure all traces of residual fuel, coolant or oil on the FFBH and exhaust resulting from the installation process are removed. Failure to do this may result in the FFBH creating excessive smoke/odours which may be detected by the customer

To install, reverse the removal procedure.

2. Connect the Land Rover approved diagnostic equipment to the vehicle and carry out the Fuel fired burner heater activation test.