

2016.0 RANGE ROVER (LG), 412-00

CLIMATE CONTROL SYSTEM - GENERAL INFORMATION

AIR CONDITIONING SYSTEM RECOVERY, EVACUATION AND CHARGING (G1509795)

GENERAL PROCEDURES

RECOVERY

1.


WARNING:

Servicing must be carried out by personnel familiar with both vehicle system and the charging and testing equipment. All operations must be carried out in a well ventilated area away from open flame and heat sources.

2.

NOTE:

All vehicles.

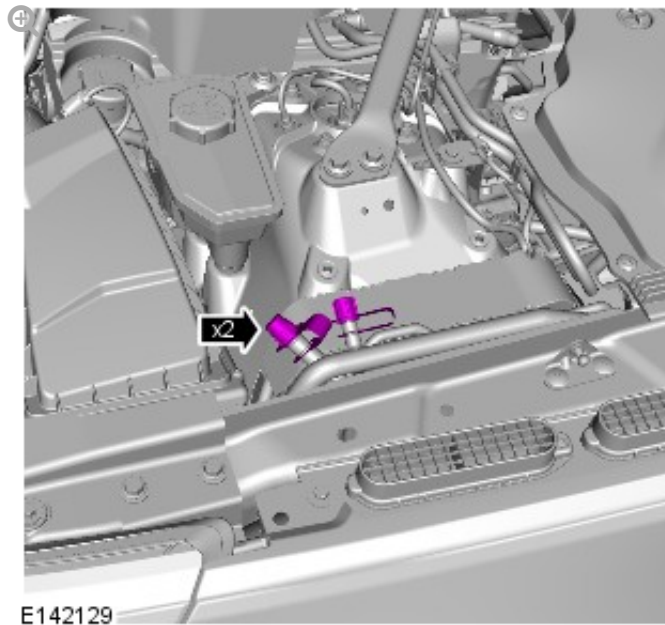

Remove the dust covers from the high and low pressure connections.

3. Connect the A/C Charging Trolley high and low pressure lines to the appropriate connections.

4.

WARNING:

Refrigerant must always be recycled before re-use to make sure that the purity of the refrigerant is high enough for safe use in the air conditioning (A/C) system. Recycling should always be carried out with equipment which is design certified for compliance with SAE J2099 and SAE J2788. Other equipment may not recycle refrigerant to the required level of purity. R-1234yf. Refrigerant Recover Recycling Recharging station must not be used with any other type of refrigerant. Refrigerant R-1234yf from domestic and commercial sources must not be used in motor vehicles A/C systems.

NOTE:

Measure and record the quantity of refrigerant oil recovered from the system.

Following the A/C Charging Trolley manufacturer's instructions, recover the refrigerant from the A/C system.

5.

CAUTION:

Always follow the health and safety precautions when handling the refrigerant R-1234yf.

Collect the refrigerant in specialist equipment and reuse.

EVACUATION

6. Following the A/C Charging Trolley manufacturer's instructions, evacuate the A/C system.

7.

NOTE:

The receiver drier need only be changed under the following circumstances: There is dirt in the refrigerant circuit (eg. compressor seizure), the system is leaking and all the refrigerant has been lost to atmosphere, or the refrigerant circuit has been open more than 1 hour, due to repair.

Refer to: [Receiver Drier - GTDi 2.0L Petrol](#) (412-01A Climate Control, Removal and Installation).

CHARGING

8.

CAUTION:

The system must be evacuated for 30 minutes immediately before recharging commences. Delay between evacuation and recharging is not permitted.

9. Following the AC Charging Trolley Manufacturers Instructions, make sure the correct amount of oil is added to the A/C system before or during recharging.

10.

CAUTION:

Recharge the A/C System only through the systems high pressure port.

Recharge the A/C system to the correct specification.


Refer to: [Specifications](#) (412-00 Climate Control System - General Information, Specifications).

11. Disconnect the high and low pressure connections.

12.

NOTE:

All vehicles.

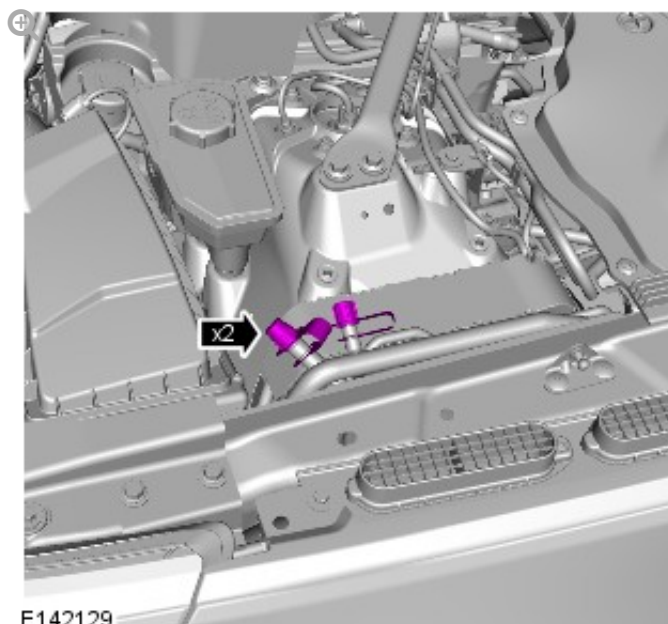

Install and firmly tighten the caps that cover the high and low pressure connections.

Torque: 6 Nm