

2016.0 RANGE ROVER (LG), 415-00

INFORMATION AND ENTERTAINMENT SYSTEM – GENERAL INFORMATION

DESCRIPTION AND OPERATION

Map Update Applicability - Digital Versatile Disc (DVD) / Universal Serial Bus (USB) Flash Drive / Secure Digital (SD) Memory Card

VEHICLE	PRE - 10MY	10 MY	11 MY	12MY	13MY	14MY	15MY	16MY
XK (X150)	DVD	DVD	DVD	DVD (DVD Australia and New Zealand only)	DVD	DVD	DVD	DVD
F-Type (X152)	-	-	-	-	-	USB	USB	USB
XF (X250/X260)	DVD	DVD	DVD	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)
XJ (X351)	-	USB	USB	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB

XE (X760)	-	-	-	-	-	-	-	InControl Touch - SD Card, InControl Touch Plus - USB
Freelander (L359)	DVD	DVD	DVD	DVD	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)
Discovery 3 (L319)	DVD	-	-	-	-	-	-	-
Discovery 4 (L319)	-	External HD Service Tool	External HD Service Tool	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)
Discovery Sport (L550)	-	-	-	-	-	-	InControl Touch - SD Card, InControl Touch Plus - USB	InControl Touch - SD Card, InControl Touch Plus - USB
Range Rover Evoque	-	-	-	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB
Range Rover Sport (L320)	DVD	External HD Service Tool	External HD Service Tool	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	-	-	-
Range Rover Sport (L494)	-	-	-	-	-	USB (DVD Australia)	USB (DVD Australia)	USB

						and New Zealand only)	and New Zealand only)	
Range Rover (L322)	DVD	External HD Service Tool	External HD Service Tool	External HD Service Tool (DVD Australia and New Zealand only)	-	-	-	-
Range Rover (L405)	-	-	-	-	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB (DVD Australia and New Zealand only)	USB

NOTE:

For vehicles using a Navigation Control Module (NCM), refer to SD Card Navigation Updates (Asia Navigation) below.

Mapping Regions

REGION	MAPPING AREA
1	North America (USA, Canada and Mexico)
2	Western and Eastern Europe
3	Japan
4	Middle East (Bahrain, Jordan, Kuwait, Oman, Qatar, Saudi Arabia and UAE)
5	South Africa
6	South America (Brazil and Argentina)
7	Russia
8	Pacific (Australia and New Zealand)

DVD MAP UPDATES



E142913

Vehicles equipped with the 'remote' Navigation Control Module (NCM) are supplied with either a DVD or SD memory card map update which is loaded into and left in the NCM. Map data is read directly from the DVD or SD memory card. This update can be performed by the customer.

EXTERNAL HARD DISC DRIVE SERVICE TOOL MAP UPDATES



E142915

Discovery 4, Discovery Sport, Range Rover Sport and Range Rover vehicles, equipped with a hard disc drive integrated into the Integrated Audio Module (IAM) or vehicles fitted with the Audio Head Unit (AHU), are updated at point of service. On 10MY Range Rover models the hard disc


drive is integrated into the Touch Screen (TS). Dealers are supplied with a set of master pack map update DVD's which are loaded onto the dealer Jaguar/Land Rover approved diagnostic equipment. The map data is loaded from the diagnostic equipment onto the navigation tool hard disc drive. The map data is then loaded to the hard disc drive from the navigation tool hard drive.

The following process should be used to update the map data:


NOTE:

The navigation update tool does not need the map data loading every time. This is only necessary when a new map update DVD is released.

- Using the approved Jaguar/Land Rover diagnostic equipment select the navigation update tool.

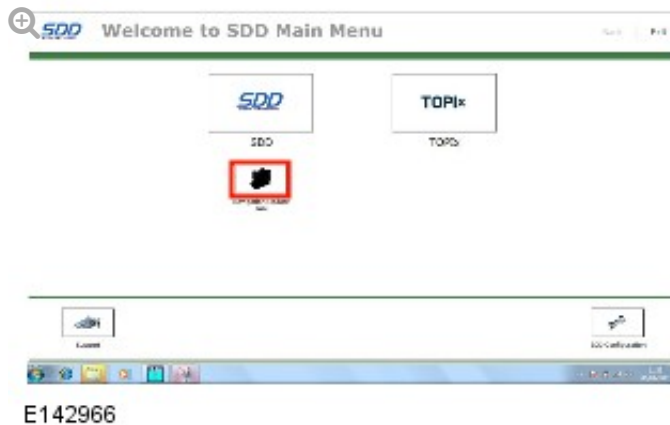


- Select **Setup** on the navigation update tool.

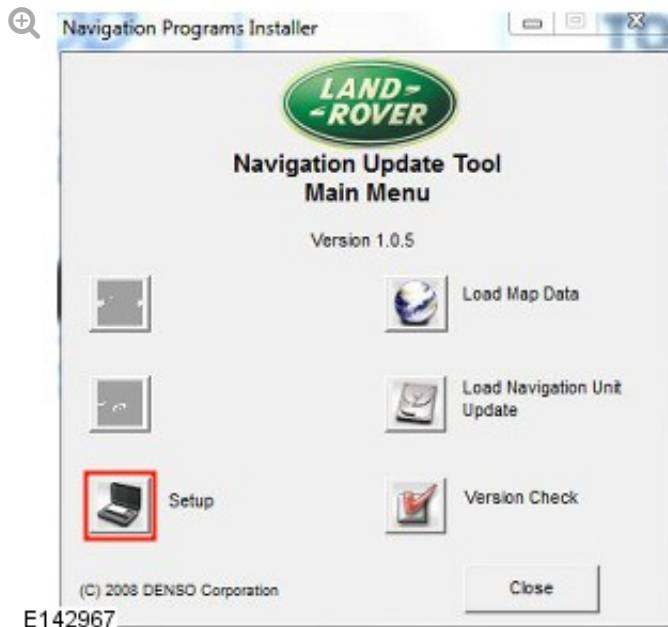

- Connect the navigation update tool to the Jaguar/Land Rover approved diagnostic equipment using the USB cable and select **Continue** to proceed.




- The navigation update tool will check the connection.

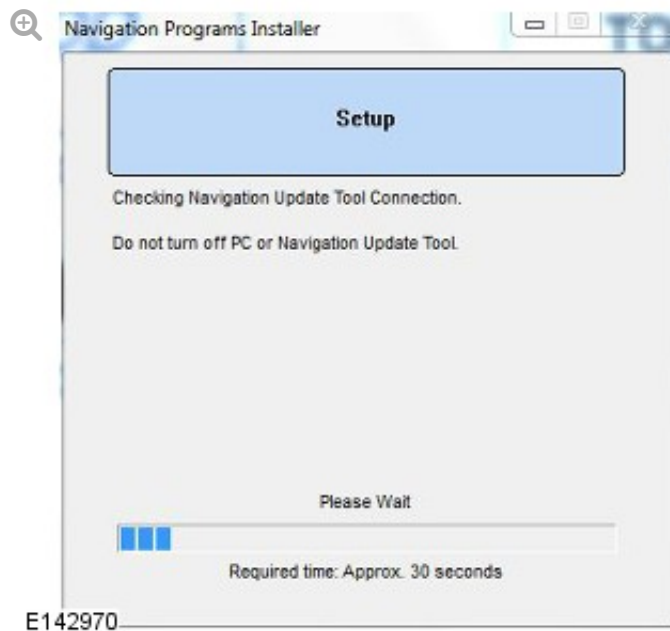


- Select your preferred language from the drop down menu then select **Save and Continue Setup** to proceed.



- When the navigation update tool confirms the initial setup is complete, select **Continue** to proceed.

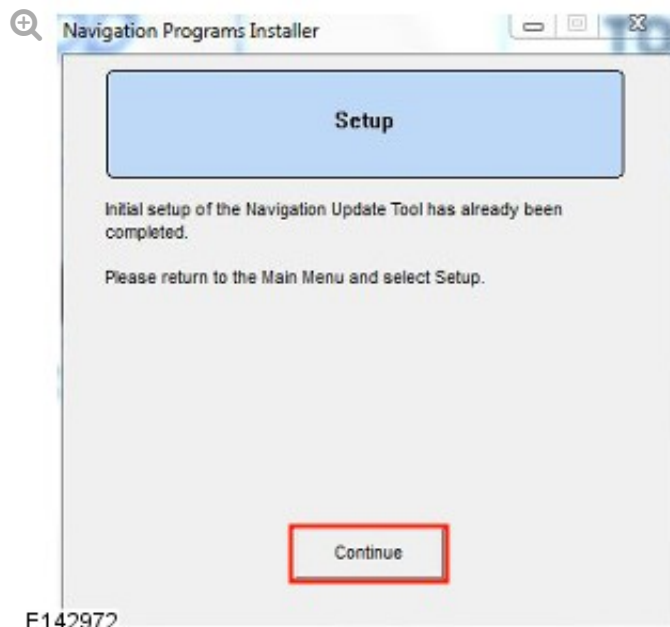

- The navigation update tool will return to the main menu screen, select **Load Map Data** to proceed.

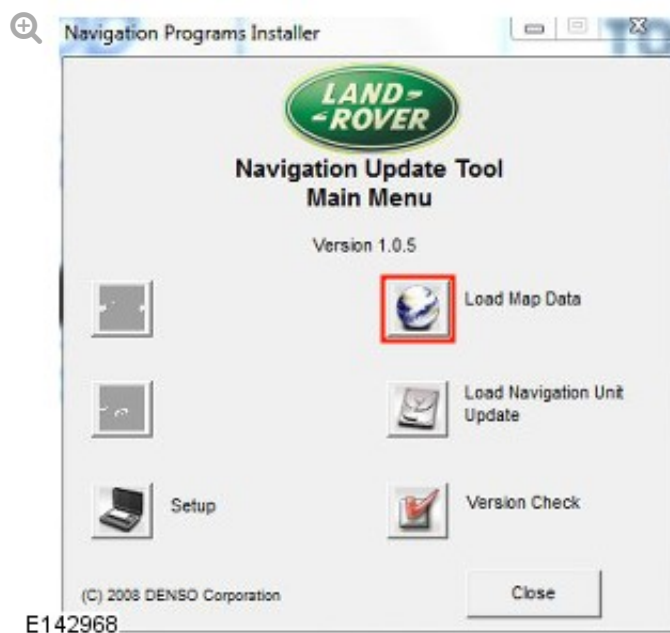

- Disconnect, then reconnect the USB cable connecting the navigation update tool to the Jaguar/Land Rover approved diagnostic equipment, select **Continue** to proceed.




- The navigation update tool will check the connection.




- Insert map update disk 1 into the DVD drive of the Jaguar/Land Rover approved diagnostic equipment and select **Continue** to proceed.



- The navigation update tool will read the map data.

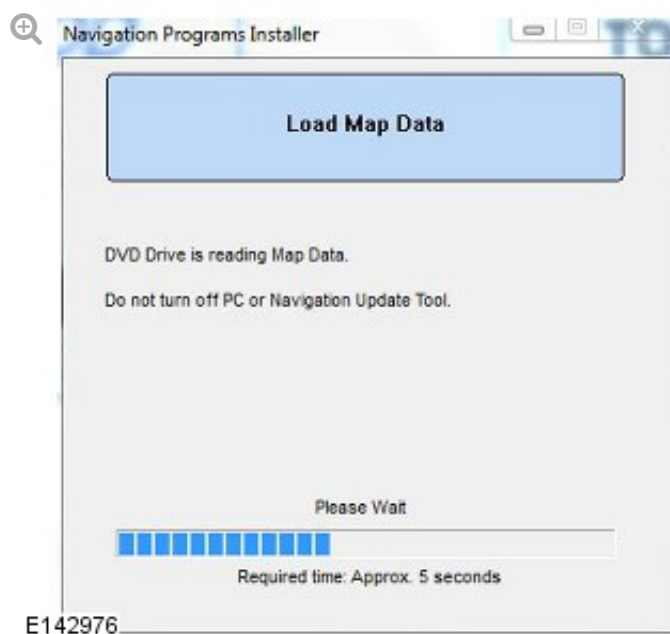


- Map data will be copied from disk 1 to the Jaguar/Land Rover approved diagnostic equipment.

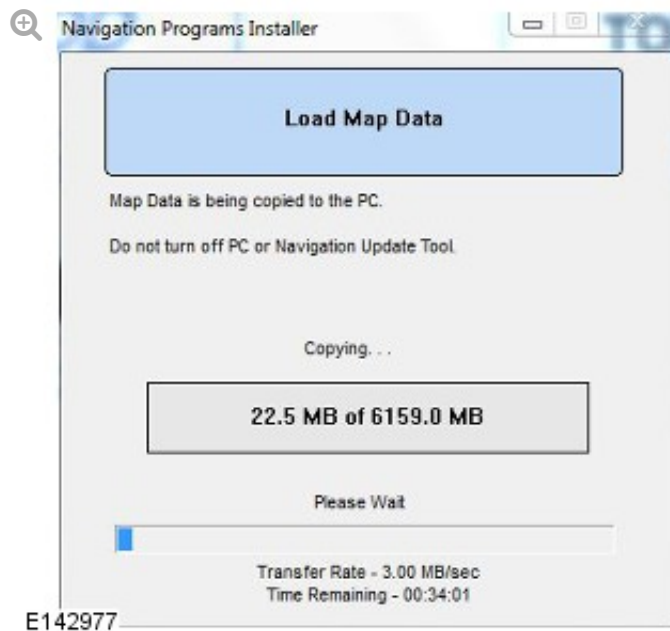


- Insert map update disk 2 into the DVD drive and press **Continue** to proceed.




- Map data will be copied from disk 2 to the Jaguar/Land Rover approved diagnostic equipment.

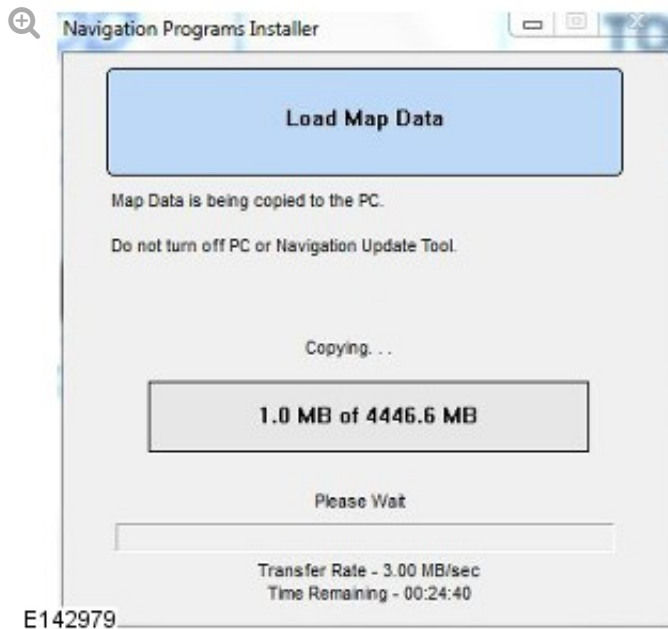


- Map data is now ready to be uploaded onto the navigation update tool, press **Continue** to proceed.

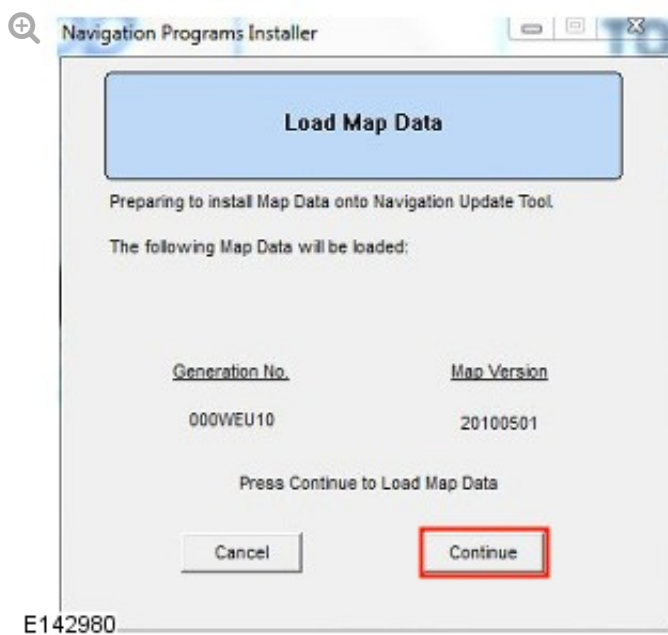


- The map data will be uploaded onto the navigation update tool.

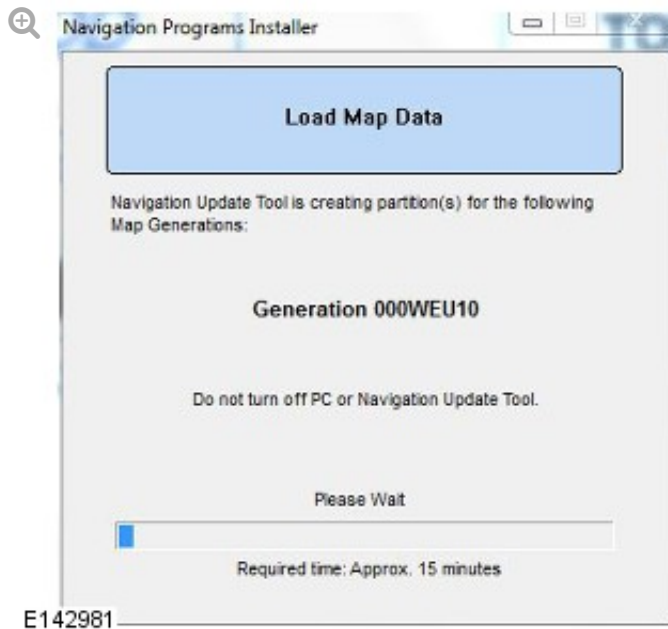

- Map data upload is now complete.

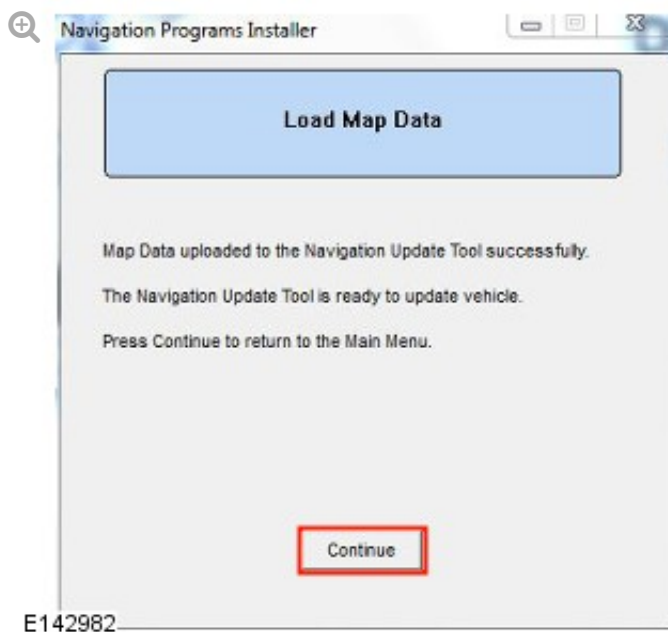


- Disconnect the navigation update tool from Jaguar/Land Rover approved diagnostic equipment.
- Connect the navigation update tool to the vehicle using the 'firewire' cable.
- Select **Navigation** using the TS display soft key.

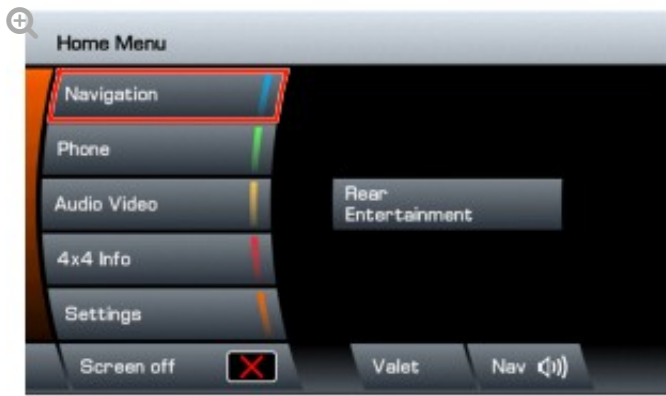

E 142956

- Select **Navigation Setup** using the TS soft key.

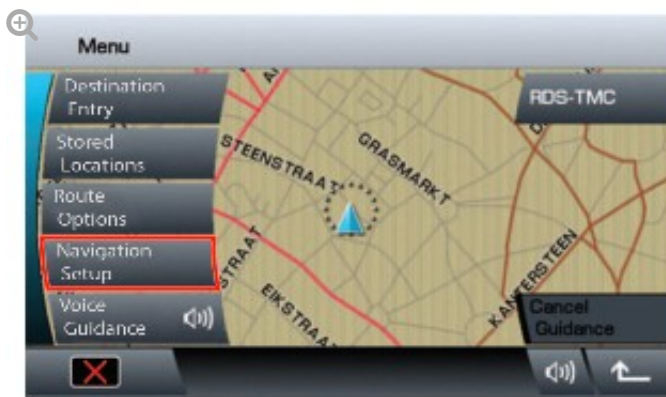

E 142957

- Select **Map Change** using the TS.




E 142958

- Select map region using the TS display and select **Map Data Update** to proceed.



- The current map data version and the proposed update map data versions will be shown. Select the relevant region, using the related TS soft key to proceed.

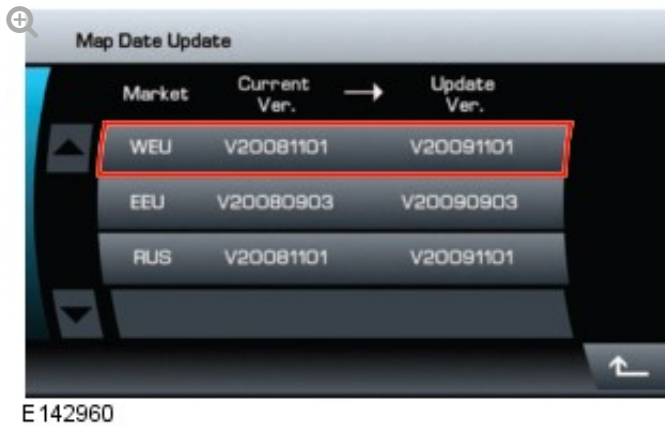


- Select **OK** to input the licence key using the TS.



- Input the licence key using the TS display and select **OK** to proceed.




- Select **OK** using the TS.

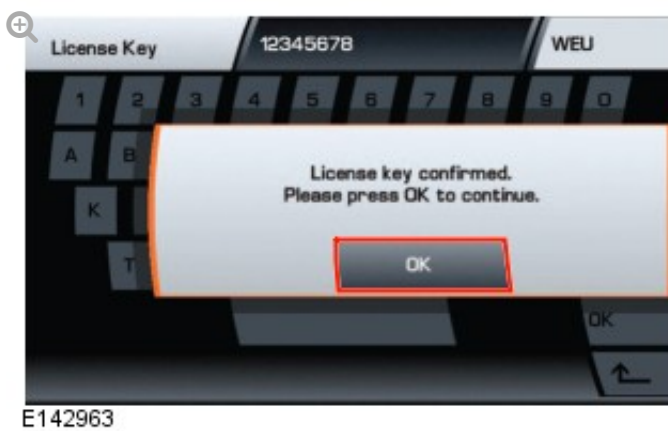

- The map update will begin.



- When the map update is complete a message will be shown in the TS, select **OK** to proceed using the TS soft key. The navigation system will restart with the new map data.

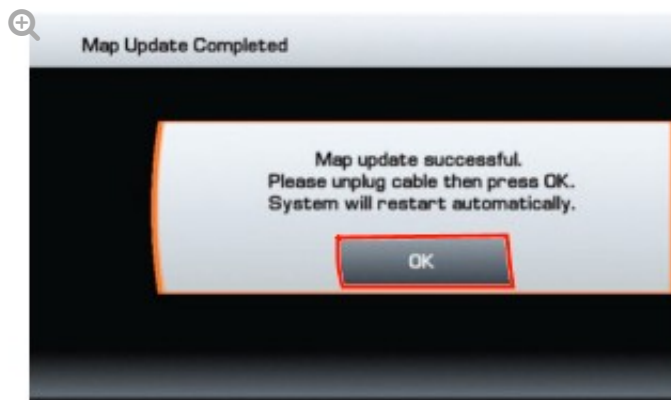

E142965

- Disconnect the navigation update tool from the vehicle.

USB MAP UPDATES



E142914

All Gen 2.1 equipped vehicles are supplied with a USB map updates, these updates can be performed by the customer.

The following process should be used to update the map data:

- Start the engine.
- Navigate to the TS **Home Menu** screen.



E142916

- Insert the USB memory stick containing the map data into the vehicle USB port.




E142914

- Select **Continue** on the TS to proceed with the installation of the map update.



E142917

- Using the TS, enter the licence code and select **OK** to proceed.

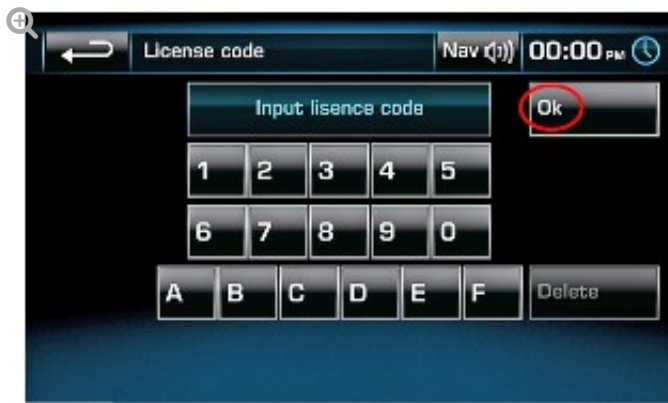

E142918

- **NOTE:**

Selecting 'Cancel' returns to the 'Home Menu' screen, the map update will continue to run in the background

The map update will begin and a message will be displayed in the TS advising that navigation is unavailable.



E142919

- Map update progress can be viewed as a percentage of the completed download in the **Home Menu** screen.



E142920

- When the update is complete a message is displayed informing the user.



E142921

- The navigation will restart upon completion of the map update.

NOTE:

Remove USB stick immediately



E142922

- Turn off the engine.
- Exit, lock the vehicle and leave for at least 15 minutes before using the navigation system.

INCONTROL TOUCH MAP UPDATES



E187689

ITEM	DESCRIPTION
1	SD card write protection switch in unlocked position

Before inserting the SD card into the vehicle's navigation data storage device slot, Make sure that the write protection lock is in the 'unlocked' position as shown in the above image.

Make sure that the connections of the SD card are facing upwards before

inserting it into the vehicle's navigation data storage device slot as shown in the above image.

InControl Touch Map Updates

The following process should be used to update the map data:

NOTE:

SD cards activated with a particular VIN will only operate in the vehicle with the matching VIN.

- Remove the previously activated SD card from the vehicle's navigation data storage device slot.
- Open the InControl Touch Map Updater. Insert the SD card into the Jaguar Land Rover (JLR) approved diagnostic equipment and follow the on-screen instructions for updating the card.
- After the update has completed remove the SD card from the map updater and insert the updated SD card into the vehicle's navigation data storage device slot.
- Switch the ignition on and Select 'Navigation' (press retry if the system is saying "cannot detect SD card" and the audio head unit will restart).
- Once the system has restarted confirm the map information is correct.

INCONTROL TOUCH PRO MAP INSTALLATION/UPDATES

To update the InControl Touch Pro Map system refer to section 101-01: Pre-Delivery Inspection Manual.

JAPANESE NAVIGATION

The Japanese satellite navigation system uses a separate navigation

computer module.

The HDD in the Integrated Audio Module (IAM) is not used for navigation downloads in this market.

Map updates are supplied in DVD format. The DVD is loaded into the navigation control module. Map data is read directly from the DVD.

SD CARD NAVIGATION UPDATES (ASIA NAVIGATION)

The Asia market navigation system is an aftermarket unit.

Map updates are supplied in an SD card format. The SD card is loaded into the navigation control module. Map data is read directly from the SD card.

NOTE:

The following countries use SD card navigation updates.

COUNTRY
ANGOLA
ARGENTINA
AZERBAIJAN
BAHAMAS
BARBADOS
BENIN
BOTSWANA
BRAZIL
BRUNEI
BURUNDI
CAYMAN ISLANDS

CHILE
CHINA
COLOMBIA
EGYPT
FIJI
GHANA
HONG KONG
INDIA
INDONESIA
ISRAEL
JAMAICA
KENYA
LEBANON
LESOTHO
MALAWI
MALI
MAURITIUS
MONGOLIA
MOROCCO
MOZAMBIQUE
NAMIBIA
NIGER
NIGERIA
PERU
PHILIPPINES
RWANDA
SENEGAL
SOUTH AFRICA

SRI LANKA
SAINT LUCIA
SWAZILAND
TAIWAN
TANZANIA
THAILAND
TOGO
TUNISIA
UGANDA
URUGUAY
VENEZUELA
VIETNAM
ZAMBIA
ZIMBABWE