

2016.0 RANGE ROVER (LG), 418-02

## WIRING HARNESSES

# ENGINE WIRING HARNESS - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL - GEN 1.5 (G1875498)

## REMOVAL AND INSTALLATION

---

---

### REMOVAL

#### CAUTION:

Take extra care not to damage the wiring harness clips.


#### NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.  
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2. Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03A Engine Cooling - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, General Procedures).
3. Refer to: [Secondary Bulkhead Left Panel](#) (501-02 Front End Body Panels, Removal and Installation).
4. Refer to: [Secondary Bulkhead Right Panel](#) (501-02 Front End Body Panels, Removal and Installation).
5. Refer to: [Air Conditioning Compressor - TDV6 3.0L Diesel](#) (412-01A Climate Control, Removal and Installation).
6. Refer to: [Exhaust System - Vehicles With: Diesel Exhaust Fluid](#) (309-00A Exhaust System - TDV6 3.0L Diesel, Removal and Installation).

7.

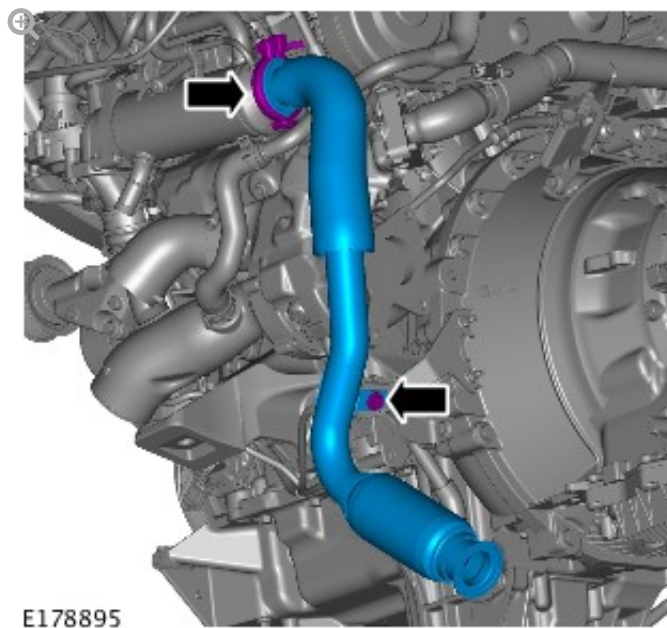


*Torque:*


Bolt **11 Nm**

Clamp **23 Nm**


8.

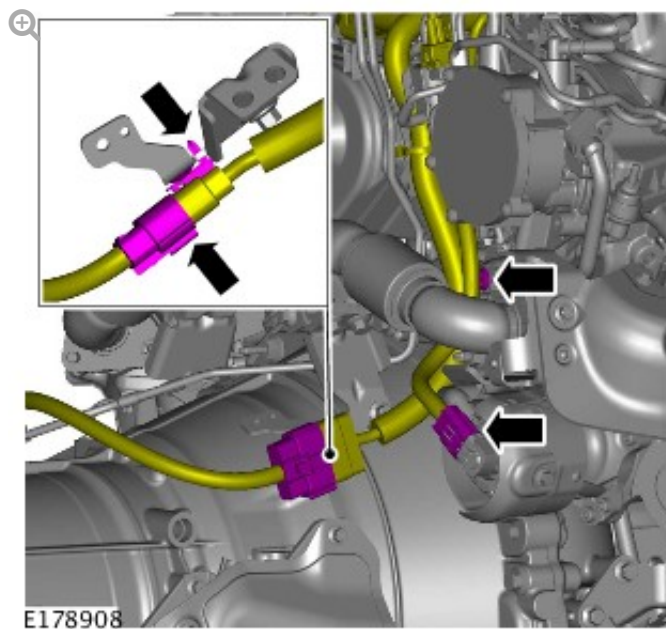


9.

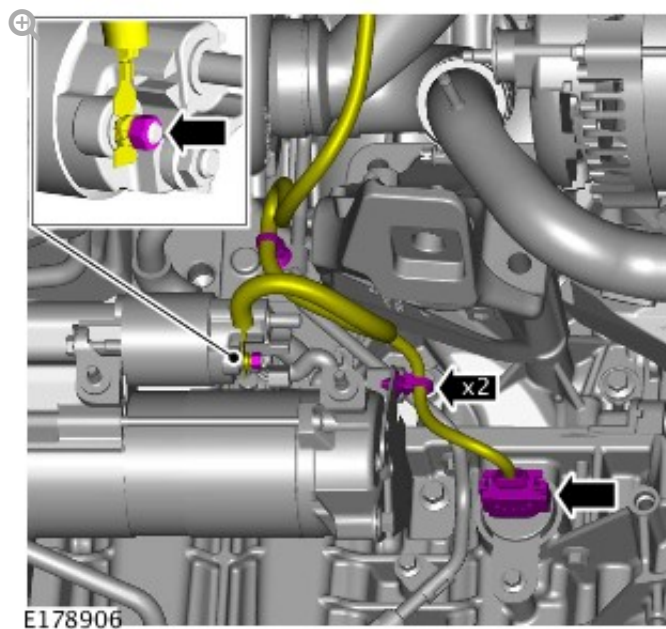


10.

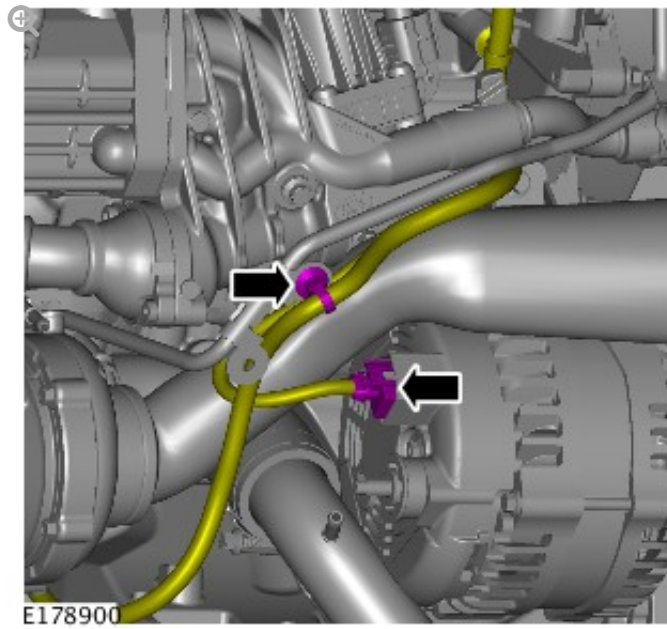


11.

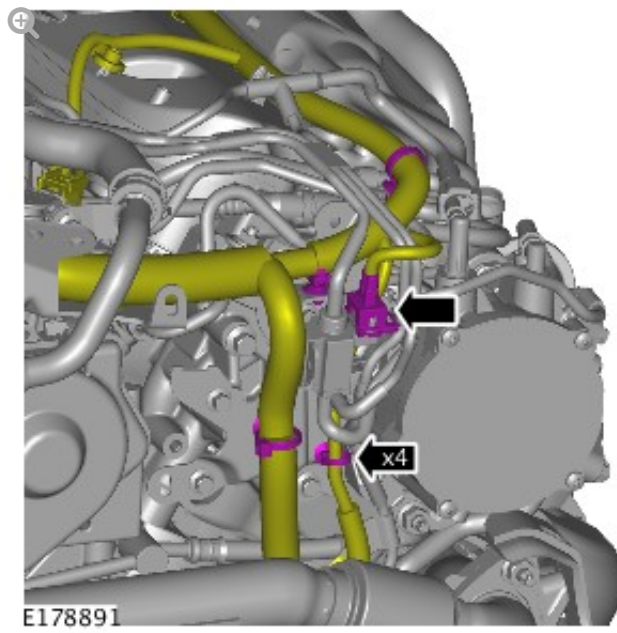

12.

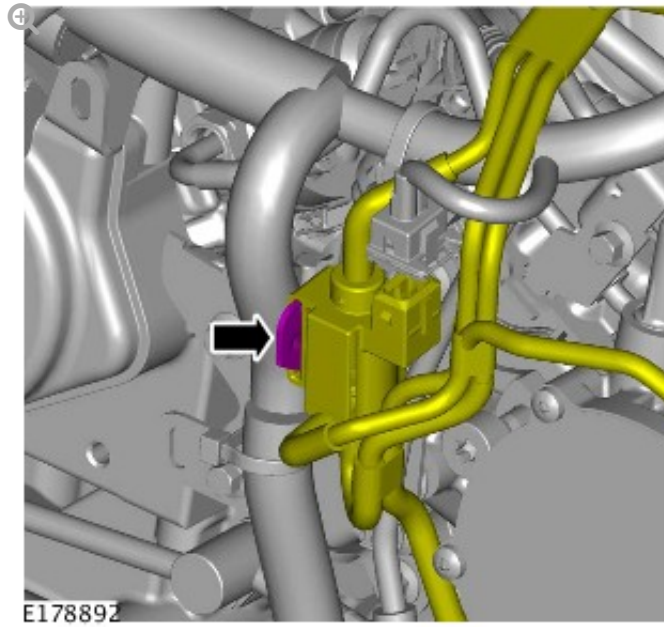


13.

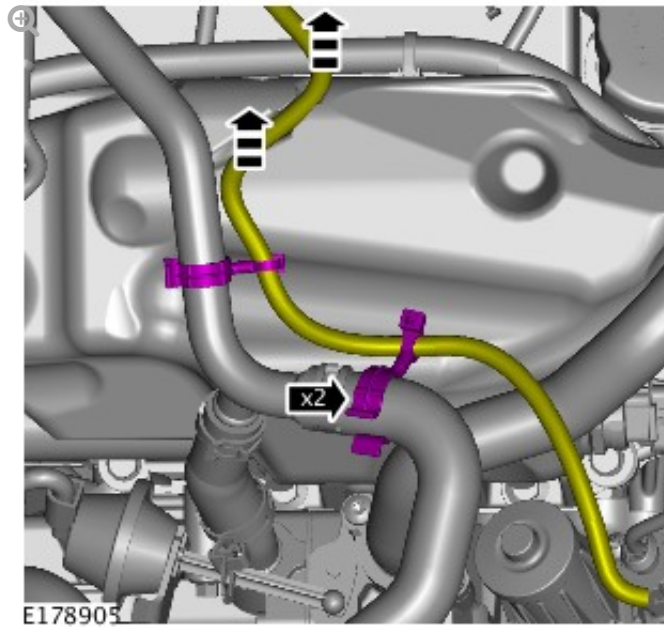

14.


#### CAUTION:

Be prepared to collect escaping fluids.

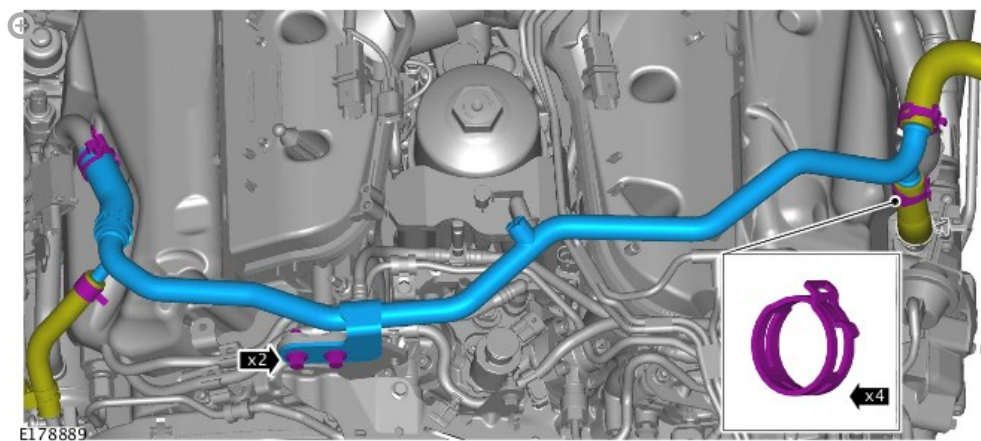

Torque: 10 Nm


15.

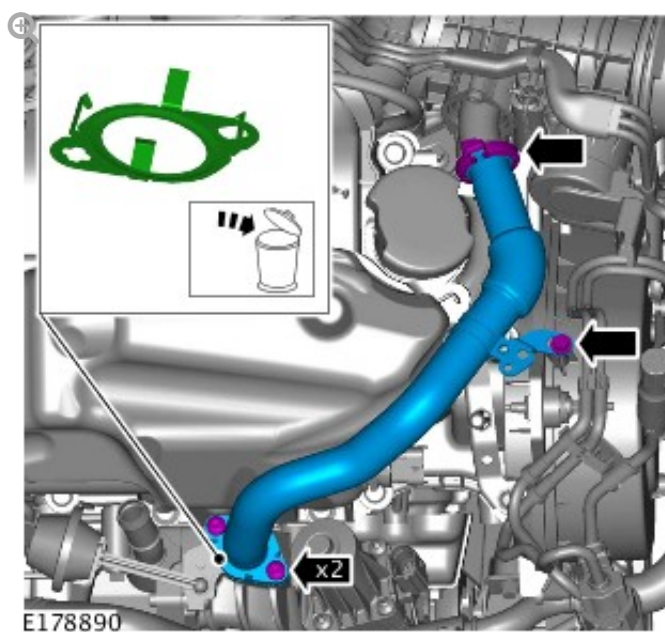

Torque: 10 Nm




16.

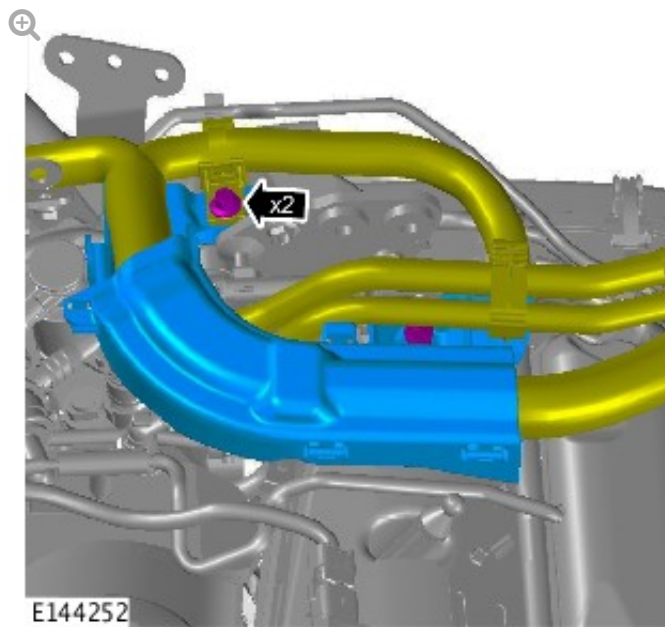


*Torque: 10 Nm*

17.

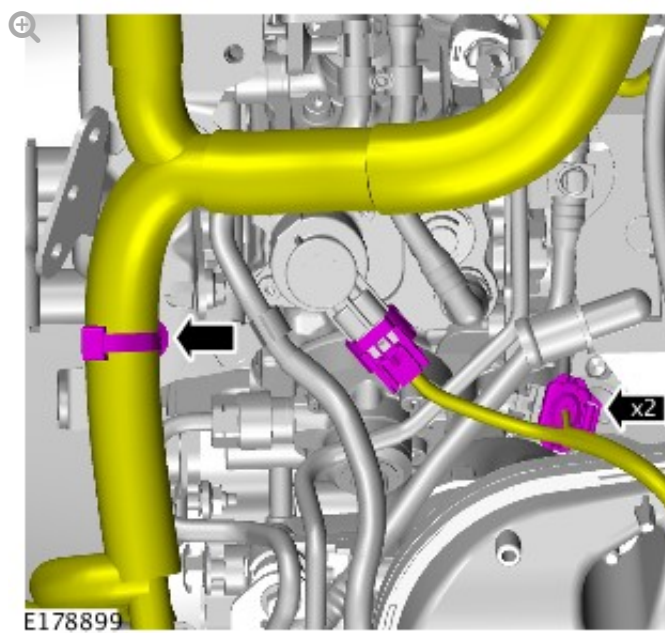


18.

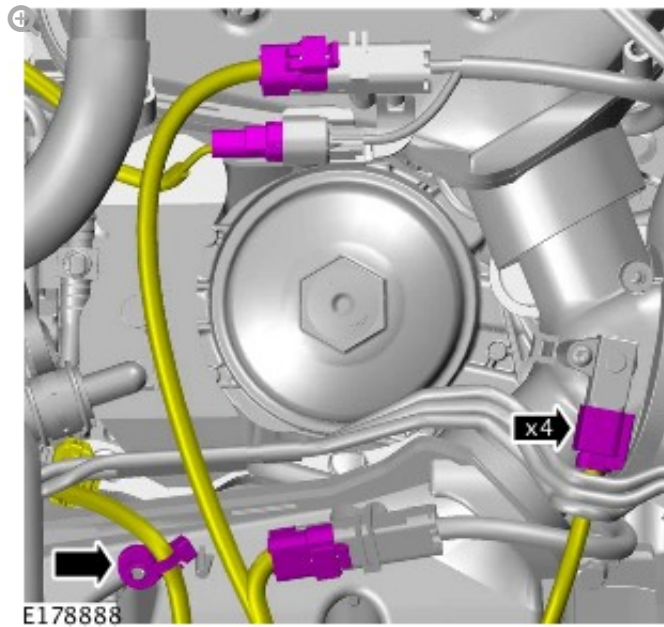

19.


### CAUTION:

Make sure that all openings are sealed. Use new blanking caps.

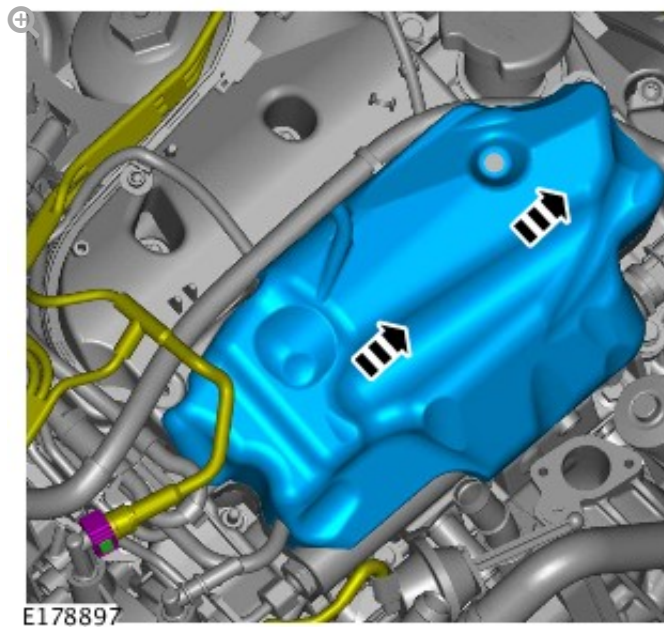





20.

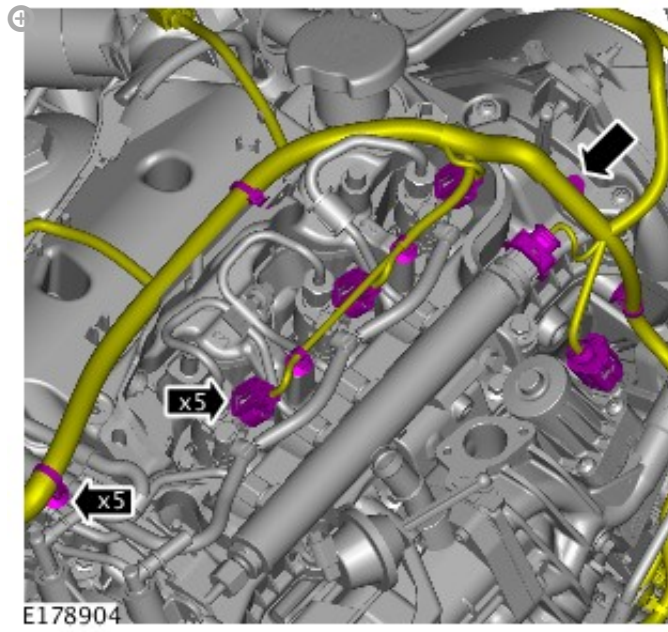


21.

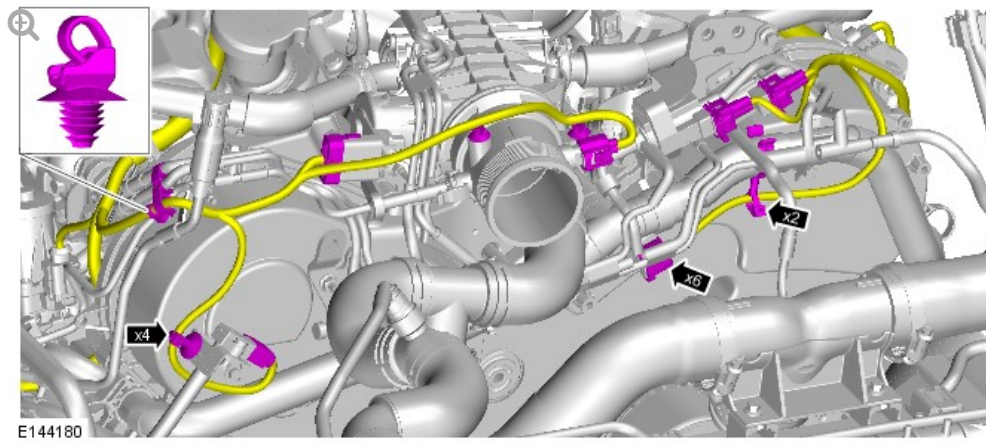


22.

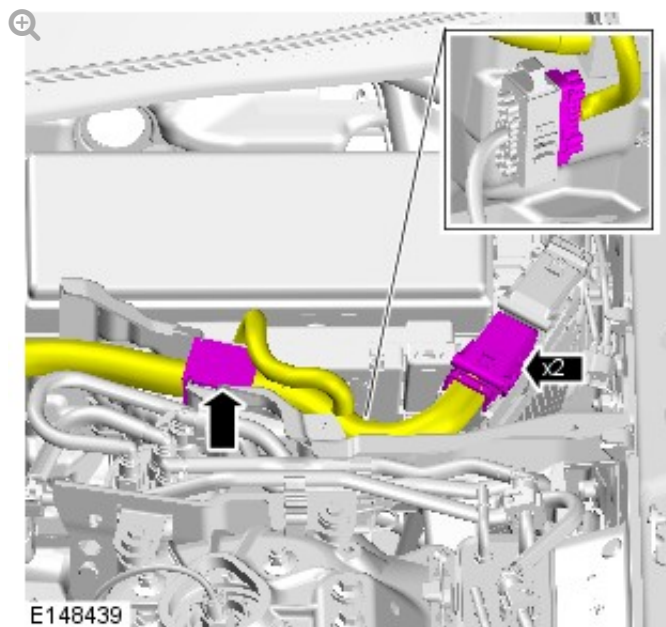

23.

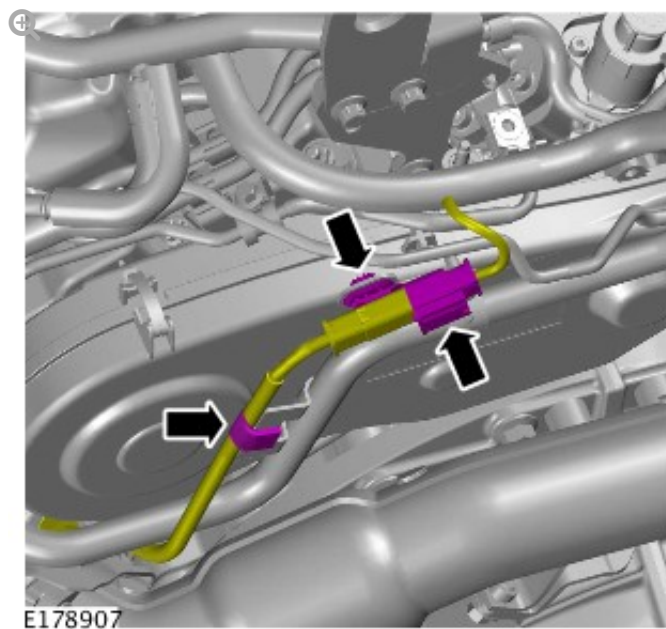


24.

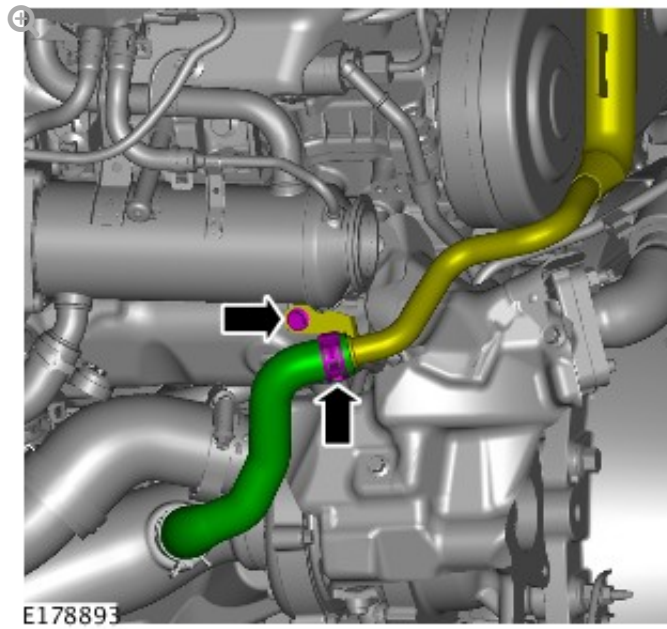


*Torque: 10 Nm*

25.

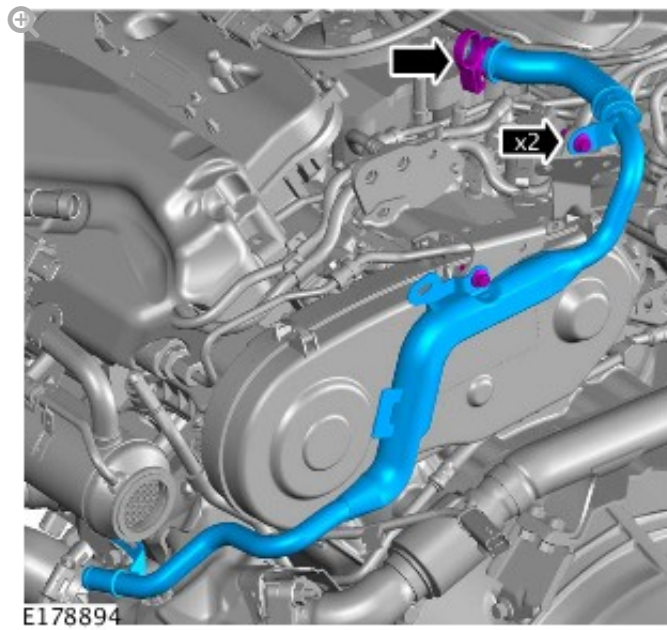


*Torque: 10 Nm*

26.

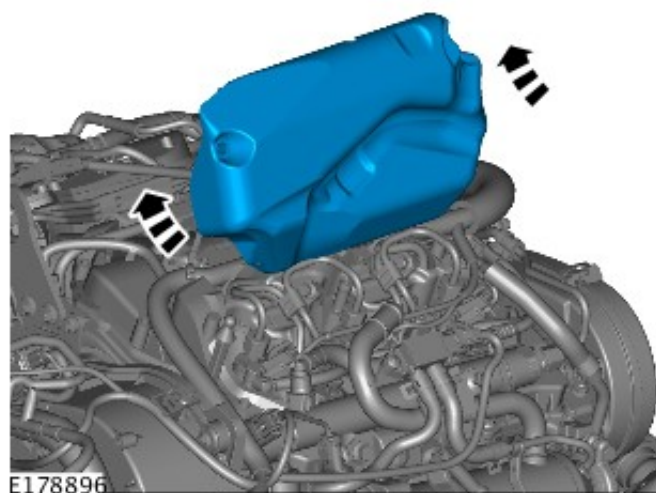


27.

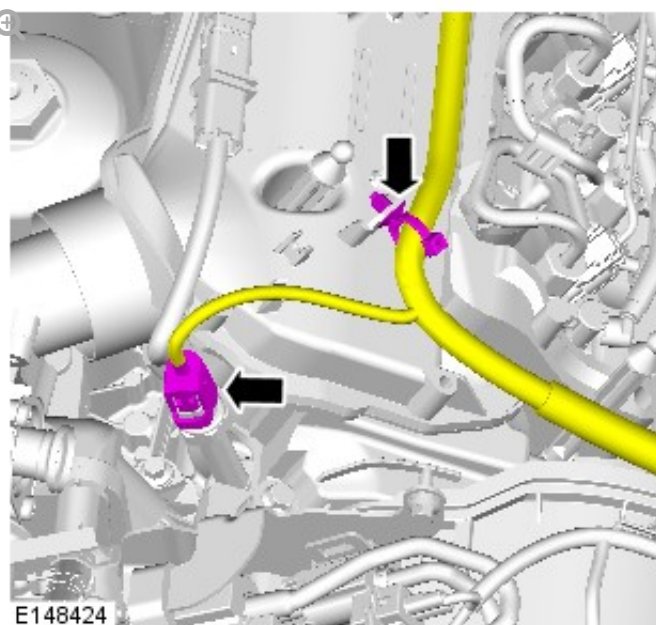




28.

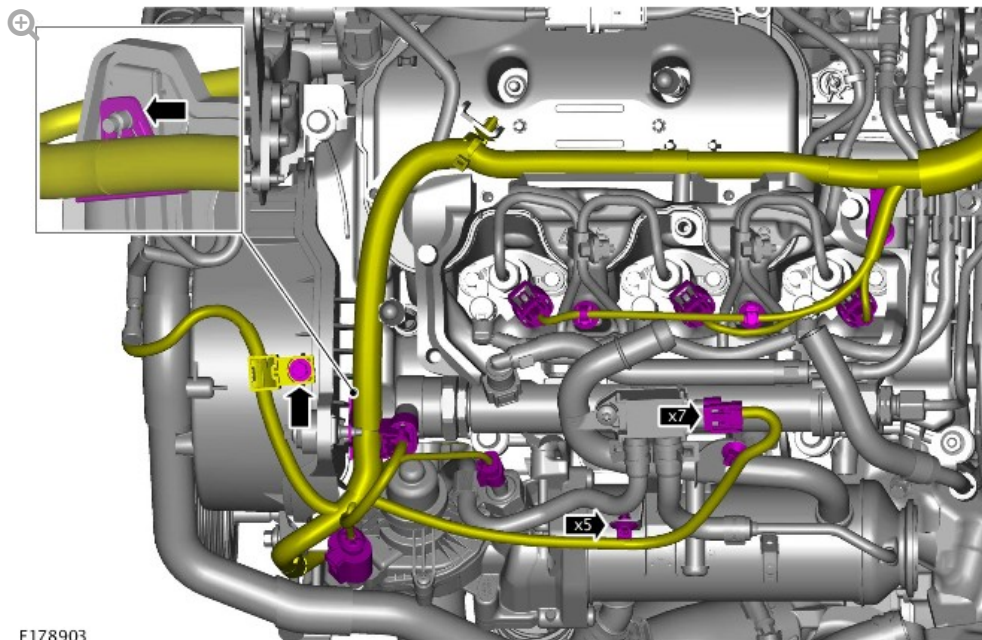

E178903

29.

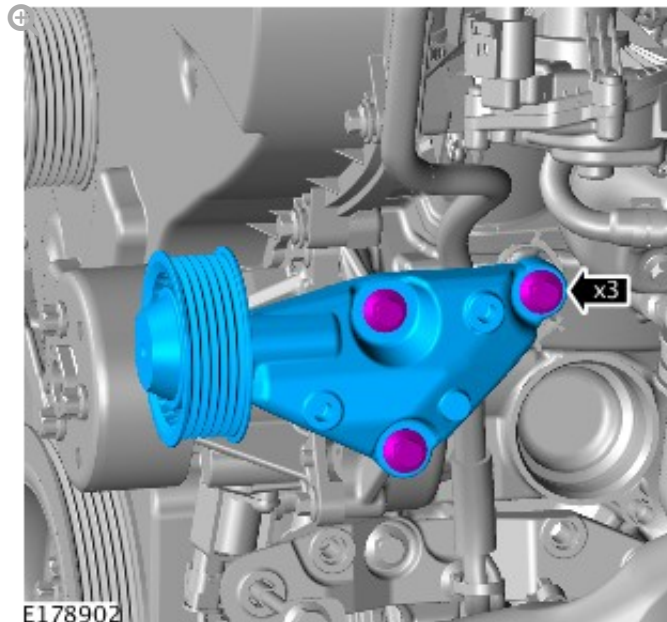


E178902

*Torque: 9 Nm*



30.

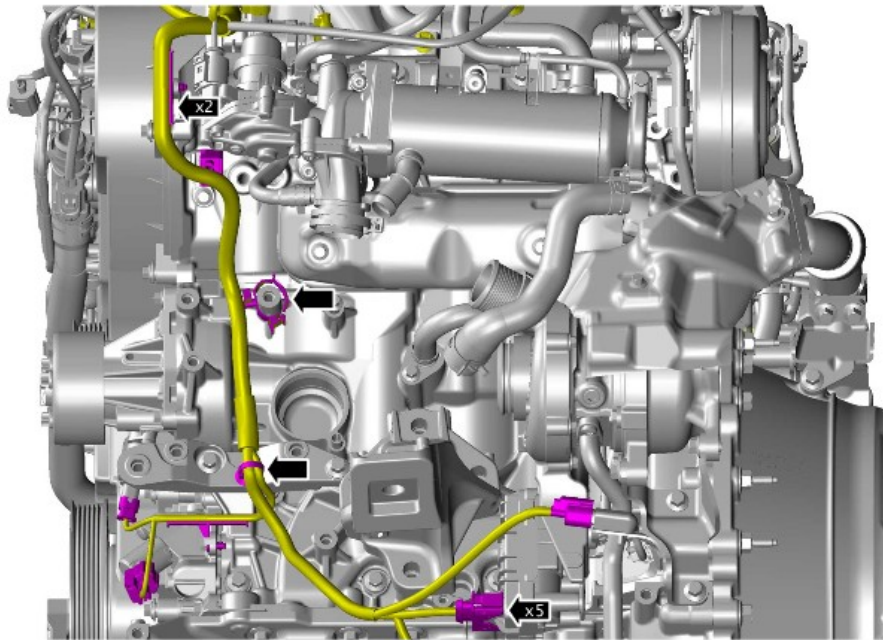

E178901


31.

### CAUTION:

Take extra care not to damage the wiring harnesses.

### NOTE:

Note the position of the wiring harnesses to aid installation.

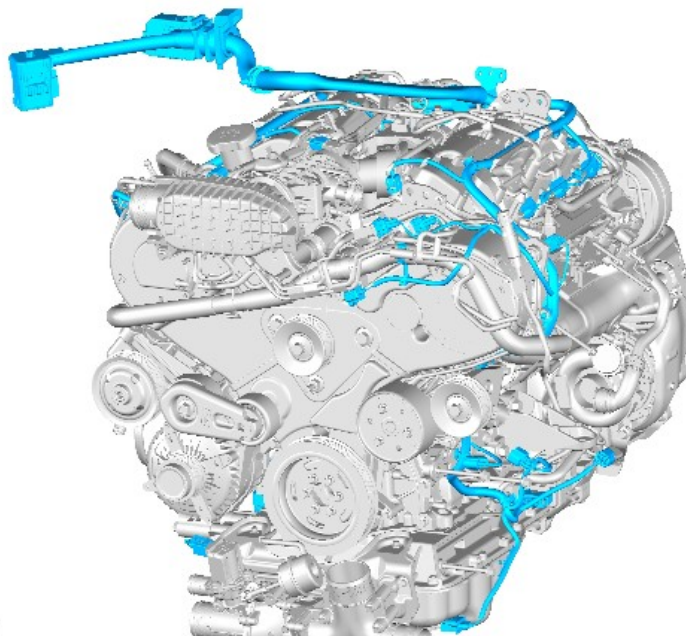

E158230

---

## INSTALLATION

1.

### CAUTIONS:

- Make sure that the clips are correctly located.
- Make sure that the wiring harness is not twisted or damaged on installation. Failure to follow this instruction may result in damage to the vehicle.

### NOTE:

Make sure that the harness is routed to the position noted on removal.

To install, reverse the removal procedure.

